SICOM3024P/3048 Series Industrial Ethernet Switches Web Operation Manual

Kyland Technology Co., Ltd.

Publication Date: Apr. 2013

Version: V2.1

FAX: +86-10-88796678

Website: http://www.kyland.com

E-mail: support@kyland.com

Disclaimer:

Kyland Technology Co., Ltd. tries to keep the content in this manual as accurate and as up-to-date as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice.

Copyright © 2013 Kyland Technology Co., Ltd.

All rights reserved

No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of KYLAND Corporation.

Contents

Preface 1
1 Product Introduction 5
1.1 Overview 5
1.2 Product Models 5
1.3 Software Features 5
2 Switch Access 7
2.1 View Types 7
2.2 Access through Console Port 8
2.3 Access through Telnet 11
2.4 Access through Web 12
3 Device Management 15
4 Device Status 16
4.1 Basic Information 16
4.2 Port Status 16
4.3 Port Statistics 18
4.4 System Operating Information 18
5 Basic Configuration 19
5.1 IP Address 19
5.2 Basic Information 20
5.3 Port Configuration 21
5.4 Password Change 24
5.5 Software Update 24
5.5.1 Software Update through FTP 25
5.6 Software Version Query 28
5.7 Configuration Upload/Download 29
6 Advanced Configuration 30
6.1 Port Rate Limiting 30
6.1.1 Overview 30
6.1.2 Web Configuration 30

6.1.3 Typical Configuration Example 32
6.2 VLAN 32
6.2.1 Overview 32
6.2.2 Principle 32
6.2.3 Port-based VLAN 33
6.2.4 Web Configuration 34
6.2.5 Typical Configuration Example 38
6.3 PVLAN 40
6.3.1 Overview 40
6.3.2 Web Configuration 41
6.3.3 Typical Configuration Example 42
6.4 Port Mirroring 43
6.4.1 Overview 43
6.4.2 Description 43
6.4.3 Web Configuration 44
6.4.4 Typical Configuration Example 45
6.5 Port Trunk 45
6.5.1 Overview 45
6.5.2 Implementation 45
6.5.3 Description 46
6.5.4 Web Configuration 47
6.5.5 Typical Configuration Example 48
6.6 Link Check 49
6.6.1 Overview 49
6.6.2 Web Configuration 49
6.7 Static Multicast 50
6.7.1 Overview 50
6.7.2 Web Configuration 50
6.8 IGMP Snooping 52
6.8.1 Overview 52

6.8.2 Concepts 53
6.8.3 Principle 53
6.8.4 Web Configuration 54
6.8.5 Typical Configuration Example 55
6.9 ACL 56
6.9.1 Overview 56
6.9.2 Implementation 56
6.9.3 Web Configuration (SICOM3024P) 57
6.9.4 Web Configuration(SICOM3048) 66
6.9.5 Typical Configuration Example 74
6.10 ARP 75
6.10.1 Overview 75
6.10.2 Description 75
6.10.3 Web Configuration 76
6.11 SNMP 77
6.11.1 Overview 77
6.11.2 Implementation 78
6.11.3 Description 78
6.11.4 MIB 79
6.11.5 Web Configuration 80
6.11.6 Typical Configuration Example 82
6.12 DT-Ring 83
6.12.1 Overview 83
6.12.2 Concepts 83
6.12.3 Implementation 84
6.12.4 Web Configuration 87
6.12.5 Typical Configuration Example 91
6.13 RSTP/STP 92
6.13.1 Overview 92
6.13.2 Concepts 92

6.13.3 BPDU 93
6.13.4 Implementation 94
6.13.5 Web Configuration 95
6.13.6 Typical Configuration Example 98
6.14 RSTP/STP Transparent Transmission 100
6.14.1 Overview 100
6.14.2 Web Configuration 101
6.14.3 Typical Configuration Example 101
6.15 QoS 102
6.15.1 Overview 102
6.15.2 Principle 103
6.15.3 Web Configuration (SICOM3024P) 104
6.15.4 Web Configuration (SICOM3048) 107
6.15.5 Typical Configuration Example 112
6.16 MAC Address Aging Time 113
6.16.1 Overview 113
6.16.2 Web Configuration 113
6.17 LLDP 114
6.17.1 Overview 114
6.17.2 Web Configuration 114
6.18 SNTP 114
6.18.1 Overview 114
6.18.2 Web Configuration 115
6.19 Alarm 117
6.19.1 Overview 117
6.19.2 Web Configuration 118
6.20 Port Traffic Alarm 122
6.20.1 Overview 122
6.20.2 Web Configuration 122
6.21 GMRP Configuration and Query 123

6.21.1 GARP 123
6.21.2 GMRP 125
6.21.3 Description 125
6.21.4 Web Configuration 126
6.21.5 Typical Configuration Example 130
6.22 RMON 131
6.22.1 Overview 131
6.22.2 RMON Groups 132
6.22.3 Web Configuration 133
6.23 Log Query 138
6.23.1 Overview 138
6.23.2 Description 138
6.23.3 Web Configuration 138
6.24 Unicast Address Configuration and Query 140
6.24.1 Overview 140
6.24.2 Web Configuration 140
Appendix: Acronyms 142

Preface

This manual mainly introduces the access methods and software features of SICOM3024P/3048 series industrial Ethernet switches, and details Web configuration methods.

Content Structure

The manual contains the following contents:

Chapter	Content
1. Product Introduction	➢ Overview ➢ Product models ➢ Software features
2. Switch Access	➢ View types ➢ Access through Console Port ➢ Access through Telnet ➢ Access through Web
3. Device Management	➢ Restart ➢ Logout
4. Device Status	➢ Basic information ➢ Port status ➢ Port statistics ➢ System Operating Information
5. Basic Configuration	➢ IP address ➢ Basic information ➢ Port configuration ➢ Password change ➢ Software update (FTP) ➢ Software version query ➢ Configuration upload/download
6. Advanced Configuration	➢ Port rate limiting

	➢ VLAN ➢ PVLAN ➢ Port mirroring ➢ Port trunk ➢ Link check ➢ Static multicast ➢ IGMP Snooping ➢ ACL ➢ ARP ➢ SNMP ➢ DT-Ring ➢ RSTP/STP ➢ RSTP/STP transparent transmission ➢ QoS ➢ MAC address aging time ➢ LLDP ➢ SNTP ➢ MSTP ➢ Alarm ➢ Port traffic alarm ➢ GMRP configuration and query ➢ RMON ➢ Log query* ➢ Unicast address configuration and query

Note:

* indicates the features not available on SICOM3048.

Conventions in the manual

1. Text format conventions

Format	Description
< >	The content in < > is a button name. For example, click <Apply> button.
[ ]	The content in [ ] is a window name or a menu name. For example, click [File] menu item.
{ }	The content in { } is a portfolio. For example, {IP address, MAC address} means the IP address and MAC address are a portfolio and they can be configured and displayed together.
→	Multi-level menus are separated by "→". For example, Start → All Programs → Accessories. Click [Start] menu, click the sub menu [All programs], then click the submenu [Accessories].
/	Select one option from two or more options that are separated by "/". For example "Addition/Deduction" means addition or deduction.
~	It means a range. For example, "1~255" means the range from 1 to 255.

2. CLI conventions

Format	Description
Bold	Commands and keywords, for example, **show version**, appear in **bold** font.
Italic	Parameters for which you supply values are in *italic* font. For example, in the **show vlan** *vlan id* command, you need to supply the actual value of *vlan id*.

3. Symbol conventions

Symbol	Description
Caution	The matters need attention during the operation and configuration, and they are supplement to the operation description.
Note	Necessary explanations to the operation description.
Warning	The matters call for special attention. Incorrect operation might cause data loss or damage to devices.

Product Documents

The documents of SICOM3024P/3048 series industrial Ethernet switches include:

Document	Content
SICOM3024P (V3.1) Series Industrial Ethernet Switches Hardware Installation Manual	Describes the hardware structure, hardware specifications, mounting and dismounting methods of SICOM3024P.
SICOM3048 Series Industrial Ethernet Switches Hardware Installation Manual	Describes the hardware structure, hardware specifications, mounting and dismounting methods of SICOM3048.
SICOM3024P/3048 Series Industrial Ethernet Switches Web Operation Manual	Describes the switch software functions, Web configuration methods, and steps of all functions.

Document Obtainment

Product documents can be obtained by:

- CD shipped with the device
- Kyland website: www.kyland.com

1 Product Introduction

1.1 Overview

The series switches are applied in the power, rail transit, coal mining, and many other industries, and can work properly in rugged environment. They support MSTP and DT-Ring, securing reliable operation. With extensive ports, the switches satisfy various customers' requirements. The series switches employ the internal modular design for flexible expansion. They comply with IEC61850-3 and IEEE1613 standards.

1.2 Product Models

This series switches include:

SICOM3048

SICOM3024P_V3.1 (V3.1 indicates the hardware version.)

1.3 Software Features

This series switches provide abundant software features, satisfying customers' various requirements.

- Redundancy protocols: RSTP/STP, DT-Ring, and MSTP
- Multicast protocols: IGMP Snooping, GMRP, and static multicast
- Switching attributes: VLAN, PVLAN, QoS, and ARP
- Bandwidth management: port trunk, port rate limiting
- Security: ACL
- Synchronization protocol: SNTP
- Device management: FTP software update, configuration upload/download
- Device diagnosis: port mirroring, LLDP, link check
- Alarm function: port alarm, power alarm, ring alarm, IP/MAC address conflict alarm, temperature alarm, and port traffic alarm
- Network management: management by CLI, Telnet, Web and Kyvision

network management software, and SNMP network monitoring

- ...

2 Switch Access

You can access the switch by:

- Console port
- Telnet
- Web browser
- Kyvision management software

Kyvision network management software is designed by Kyland. For details, refer to its user manual.

2.1 View Types

When logging into the Command Line Interface (CLI) by the console port or Telnet, you can enter different views or switch between views by using the following commands.

Table 1 View Types

View Prompt	View Type	View Function	Command for View Switching
SWITCH>	User view	View recently used commands. View software version. View response information for ping operation.	Input "**enable**" to enter the management view.
SWITCH #	Management view	Upload/Download configuration file. Restore default configuration. View response information for ping	Input "**configure terminal**" to enter the configuration view from the management view. Input "**exit**" to return to the user view.

		operation. Restart the switch. Save current configuration. Display current configuration. Update software.	
SWITCH(config)#	Configuration view	Configure switch functions.	Input "**exit**" or "**end**" to return to the management view.

When the switch is configured through the CLI, "?" can be used to get command help. In the help information, there are different parameter description formats. For example, <1, 255> means a number range; <H.H.H.H> means an IP address; <H:H:H:H:H:H> means a MAC address; word<1,31> means a string range. In addition, ↑ and ↓ can be used to scroll through recently used commands.

2.2 Access through Console Port

You can access a switch by its console port and the hyper terminal of Windows OS or other software that supports serial port connection, such as HTT3.3. The following example shows how to use Hyper Terminal to access switch by console port.

1. Connect the serial port of a PC to the console port of the switch with a DB9-RJ45 cable.
2. Run the Hyper Terminal in Windows desktop. Click [Start] → [All Programs] → [Accessories] → [Communications] → [Hyper Terminal], as shown in the following figure.

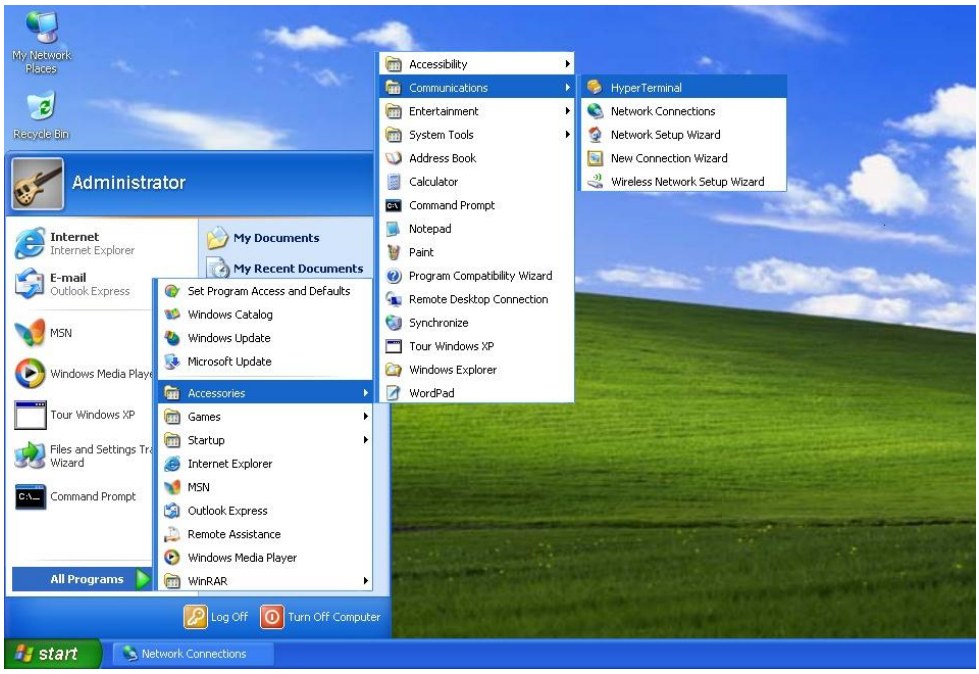

Figure 1 Starting the Hyper Terminal

3. Create a new connection "Switch", as shown in the following figure.

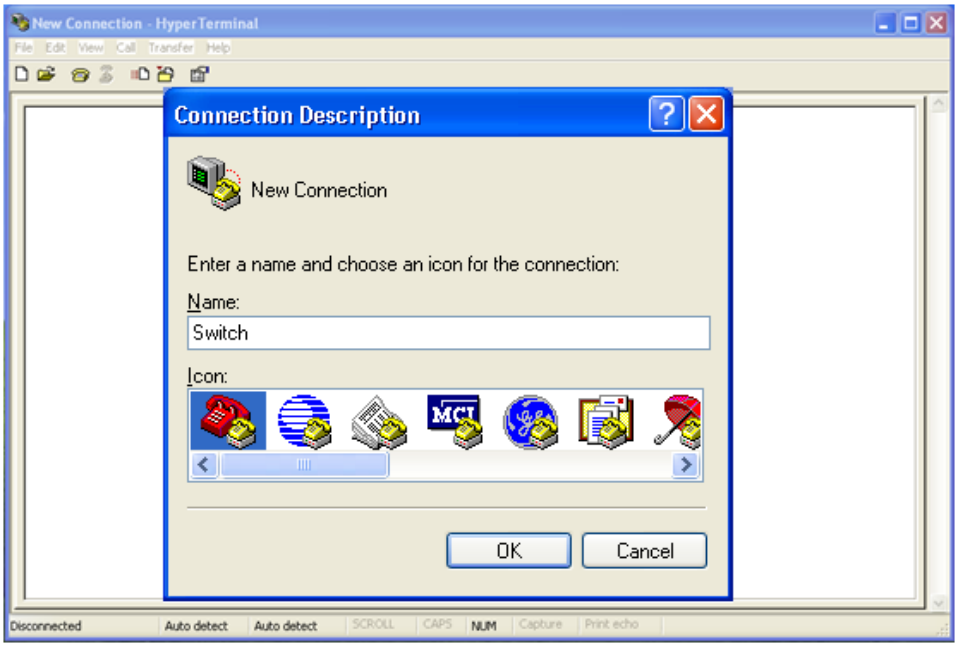

Figure 2 Creating a New Connection

4. Connect the communication port in use, as shown in the following figure.

Figure 3 Selecting the Communication Port

Note:

To confirm the communication port in use, right-click [My Computer] and click [Property] → [Hardware] → [Device Manager] → [Port].

5. Set port parameters (Bits per second: 9600, Data bits: 8, Parity: None, Stop bits: 1, and Flow control: None), as shown in the following figure.

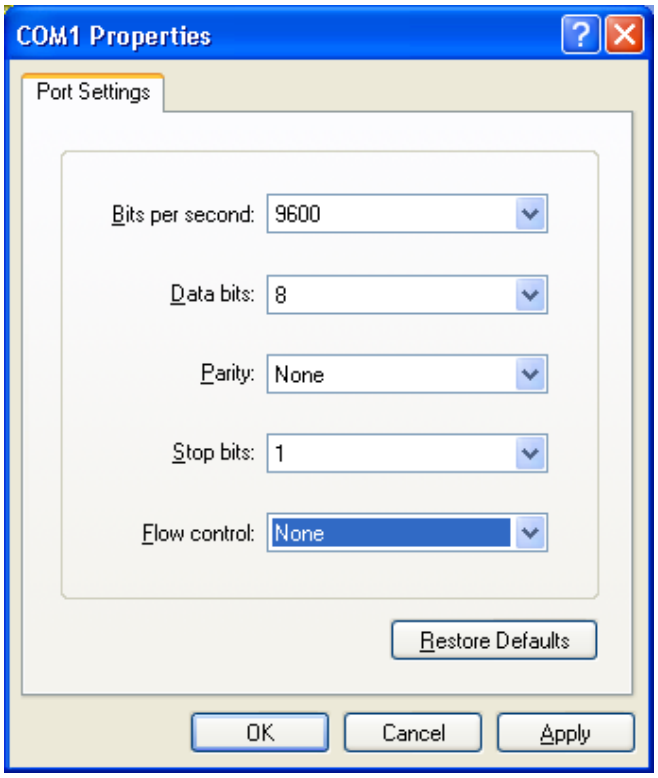

Figure 4 Setting Port Parameters

6. Click <OK>. The switch CLI is displayed. Input password "admin" and press <Enter> to enter the user view, as shown in the following figure.

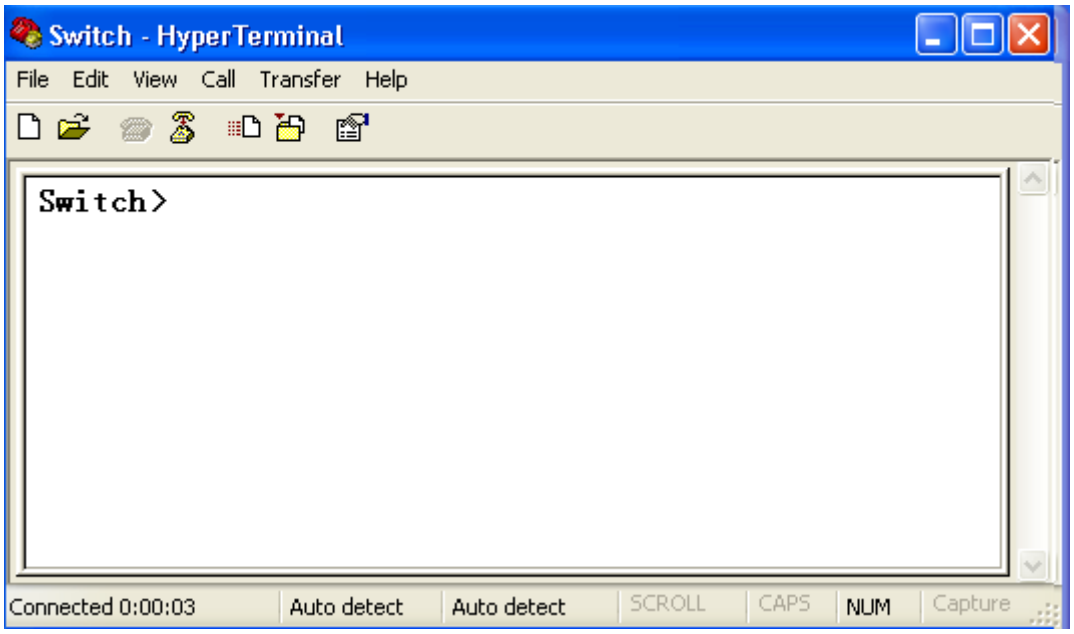

Figure 5 CLI

2.3 Access through Telnet

The precondition for accessing a switch by Telnet is the normal communication between the PC and the switch.

1. Enter "**telnet** *IP address*" in the Run dialog box, as shown in the following figure.

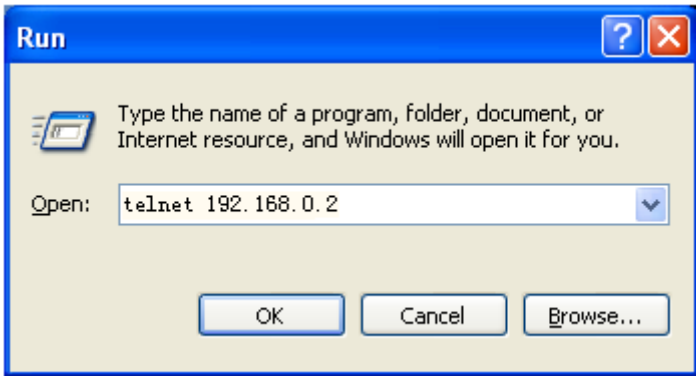

Figure 6 Telnet Access

Note:

For details about how to confirm the switch IP address, see section 5.1 IP Address.

2. In the Telnet interface, input "admin" in User, and "123" in Password. Press <Enter> to log in to the switch, as shown in the following figure.

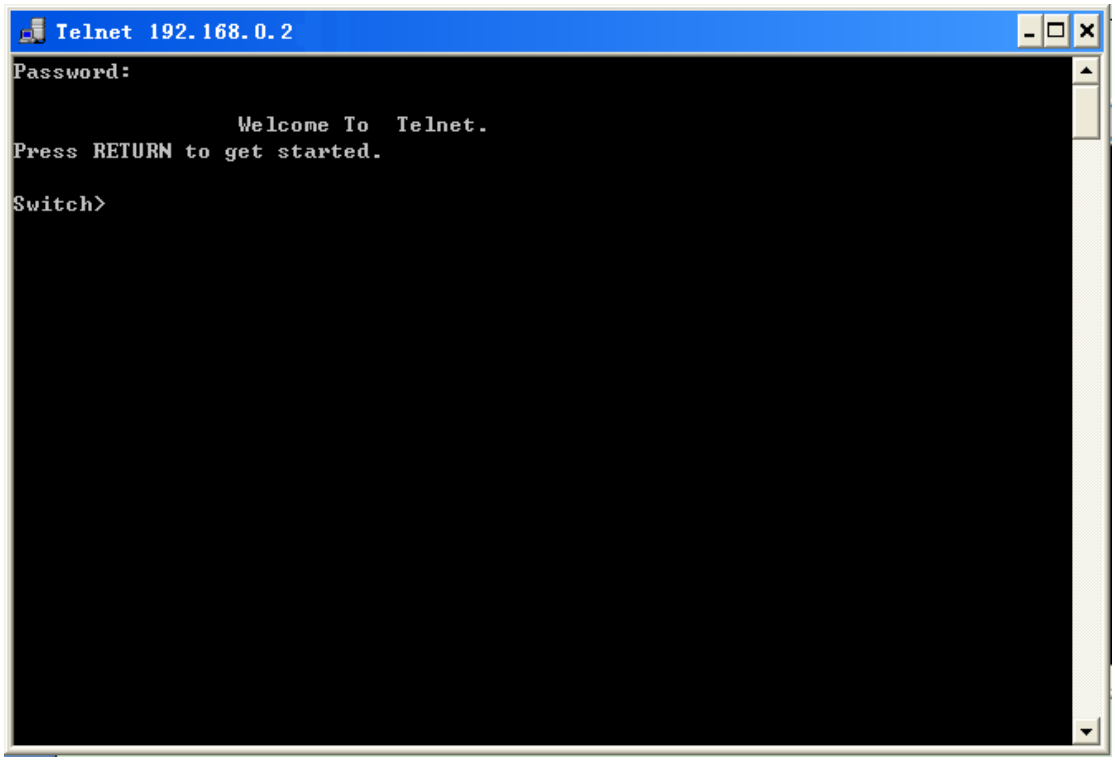

Figure 7 Telnet Interface

2.4 Access through Web

The precondition of accessing switch by Web is the normal communication between the PC and the switch.

Note:

IE8.0 or a later version is recommended for the best Web display results.

1. Input "IP address" in the browser address bar. The login interface is displayed, as shown in the following figure. Input the default user name "admin" and password "123". Click <Login>.

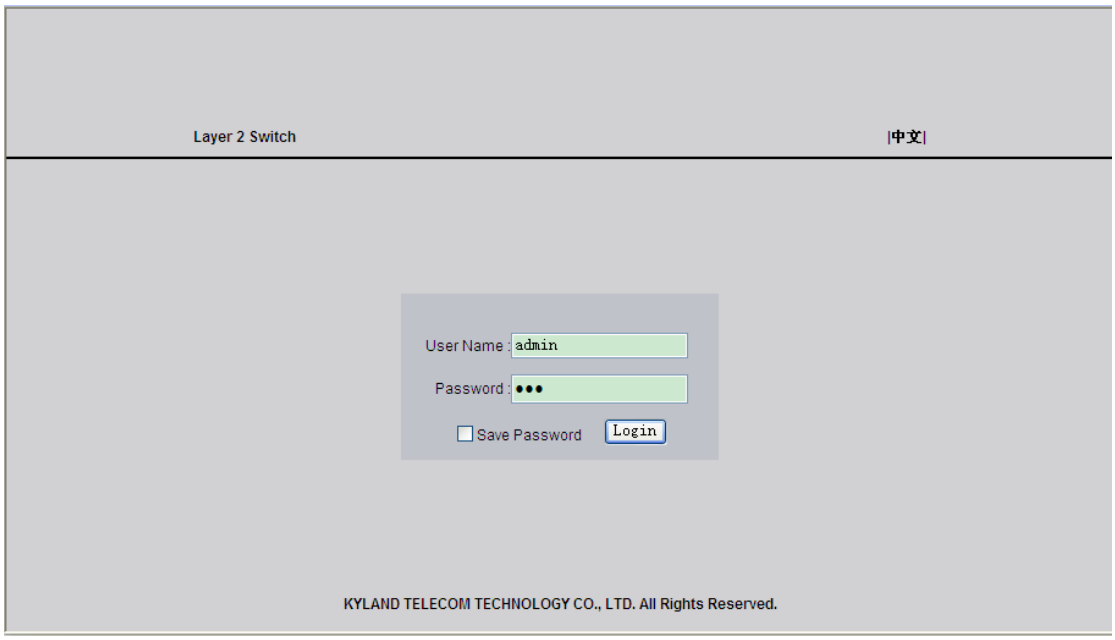

Figure 8 Web Login

The English login interface is displayed by default. You can click <中文> to change to the Chinese login interface.

Note:

For details about how to confirm the switch IP address, see section 5.1 IP Address.

2. After you log in successfully, there is a navigation tree on the left of the interface, as shown in the following figure.

Figure 9 Web Interface

You can expand or collapse the navigation tree by clicking <Expand> or <Collapse> on the top of the navigation tree. You can perform corresponding operations by clicking [Save Configuration] or [Load Default] in the top menu. In the upper right corner, you can click <中文> to switch to the Chinese interface.

Caution:

After you have restored the default settings, you need to restart the device to make settings take effect.

3 Device Management

Click [Device Management] → [Reboot]/[Logout]. You can reboot the device or exit the Web interface. Before rebooting the device, you need to save the current settings as required. If you have saved the settings, the switch automatically configures itself with the saved settings after restart. If you have not saved any settings, the switch restores the factory default settings after restart.

4 Device Status

4.1 Basic Information

The switch basic information includes the MAC address, SN, IP address, subnet mask, gateway, system name, device model, software version, and BootROM version, as shown in the following figure.

Item	Information
MAC Address	00-1E-CD-10-23-38
SN	S3MOTXX
IP Address	192.168.0.119
Subnet Mask	255.255.255.0
GateWay	192.168.0.1
System Name	Switch
Device Model	SICOM3024P-4GE-24T
Software Version	ID:1 V1.5.5 (2012-9-10 18:04)
FW Version	v1.1.9 (2011-12-28 9:59)

Figure 10 Basic Information

4.2 Port Status

Port status page displays the port number, administration status, link status, speed, duplex, and flow control, as shown in the following figure.

Port ID	Administration Status	Operation Status	Link	Speed	Duplex	Flow Control	RX	TX
S1/FE1	Enable	Enable	Down	---	---	---	---	---
S1/FE2	Enable	Enable	Down	---	---	---	---	---
S1/FE3	Enable	Enable	Down	---	---	---	---	---
S1/FE4	Enable	Enable	Up	100M	Full-duplex	Off	Enable	Enable
S1/FE5	Enable	Enable	Down	---	---	---	---	---
S1/FE6	Enable	Enable	Down	---	---	---	---	---
S1/FE7	Enable	Enable	Down	---	---	---	---	---
S1/FE8	Enable	Enable	Down	---	---	---	---	---
S4/GE1	Enable	Enable	Down	---	---	---	---	---
S4/GE2	Enable	Enable	Down	---	---	---	---	---
S4/GE3	Enable	Enable	Down	---	---	---	---	---
S4/GE4	Enable	Enable	Down	---	---	---	---	---

Figure 11 Port Status

Port ID

Display the type and ID of ports.

Port ID is in Sα/β format.

α indicates the number of the slot where the board resides; S0 indicates the port is a fixed port on the device (not on a board); β indicates the port type and ID of the board/panel where the port resides.

FE/FX/GE/GX indicate port types.

FE: 10/100Base-TX RJ45 port

FX: 100Base-FX port

GE: Gigabit RJ45 port

GX: Gigabit SFP slot

Administration Status

Display the administration status of ports.

Enable: The port is available and permits data transmission.

Disable: The port is locked without data transmission.

Operation Status

Display the operation status of ports.

Link

Display the link status of ports.

Up: The port is in LinkUp state and can communicate normally.

Down: The port is in LinkDown state and cannot communicate normally.

Speed

Display the communication speed of LinkUp ports.

Duplex

Display the duplex mode of LinkUp ports.

Full-duplex: The port can receive and transmit data at the same time.

Half-duplex: The port only receives or transmits data at the same time.

Flow Control

Display the flow control status of LinkUp ports.

RX

Options: Enable/Disable

Enable: The port can receive data.

Disable: The port cannot receive data.

TX

Options: Enable/Disable

Enable: The port can transmit data.

Disable: The port cannot transmit data.

Note:

For details about port settings, see section 5.3 Port Configuration.

4.3 Port Statistics

Port statistics cover the number of bytes/packets that each port sends/receives, CRC errors, and number of packets with less than 64 bytes, as shown in the following figure.

Port ID	State	Link	Bytes Sent	Packets Sent	Bytes Received	Packets Received	CRC Error	Packets 64 bytes
S1/FE1	Enable	Down	0	0	0	0	0	0
S1/FE2	Enable	Down	0	0	0	0	0	0
S1/FE3	Enable	Down	0	0	0	0	0	0
S1/FE4	Enable	Up	1670419	7399	14367882	171176	0	0
S1/FE5	Enable	Down	0	0	0	0	0	0
S1/FE6	Enable	Down	0	0	0	0	0	0
S1/FE7	Enable	Down	0	0	0	0	0	0
S1/FE8	Enable	Down	0	0	0	0	0	0
S4/GE1	Enable	Down	0	0	0	0	0	0
S4/GX2	Enable	Down	0	0	0	0	0	0
S4/GE3	Enable	Down	0	0	0	0	0	0
S4/GE4	Enable	Down	0	0	0	0	0	0

Reset

Figure 12 Port Statistics

You can click <Reset> to restart statistics collection.

4.4 System Operating Information

System operating information includes the device runtime, CPU usage, device temperature, and system time, as shown in the following figures.

Device Operating	
Device Operating Time:	0Days,0H:14M:15S
CPU:	0%(short-term), 2%(long-term)
Device Temperature:	+43C
Device Time:	2012.09.17 14:16:28 Monday

Figure 13 System Operating Information (SICOM3024P)

Device Operating	
Device Operating Time:	0Days,5H:25M:41S
CPU:	5%(short-term), 5%(long-term)

Figure 14 System Operating Information (SICOM3048)

5 Basic Configuration

5.1 IP Address

1. View the switch IP address by using the console port.

Log in to the switch CLI through the console port. Run the "**show interface**" command in the management view to view the switch IP address. As shown in the following figure, the IP address is circled in red.

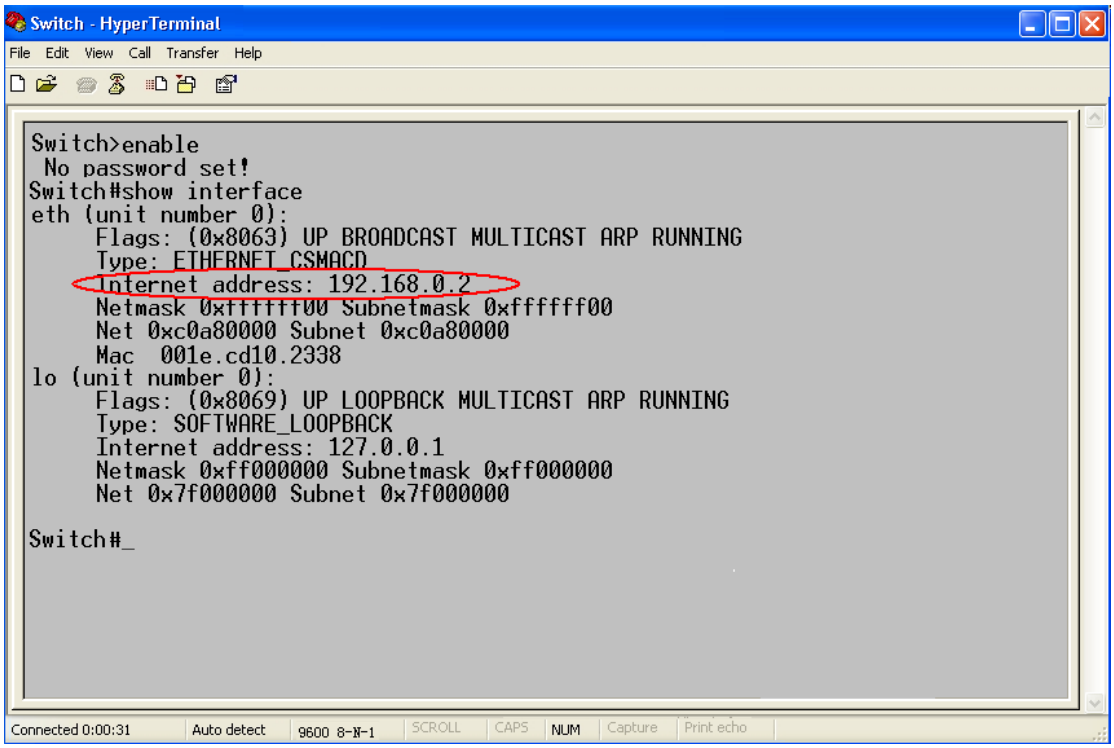

Figure 15 Viewing IP Address

2. Set the IP address.

Switch IP address and gateway can be configured manually, as shown in the following figure.

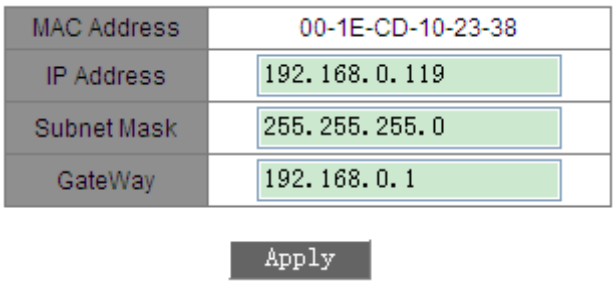

Figure 16 IP Address

Caution:

- IP address and gateway must be in the same network segment; otherwise, the IP address cannot be modified.
- For the series switches, the change in IP address will take effect only after the device is restarted.

5.2 Basic Information

Basic information includes the project name, switch name, location, contact, and system time, as shown in the following figure.

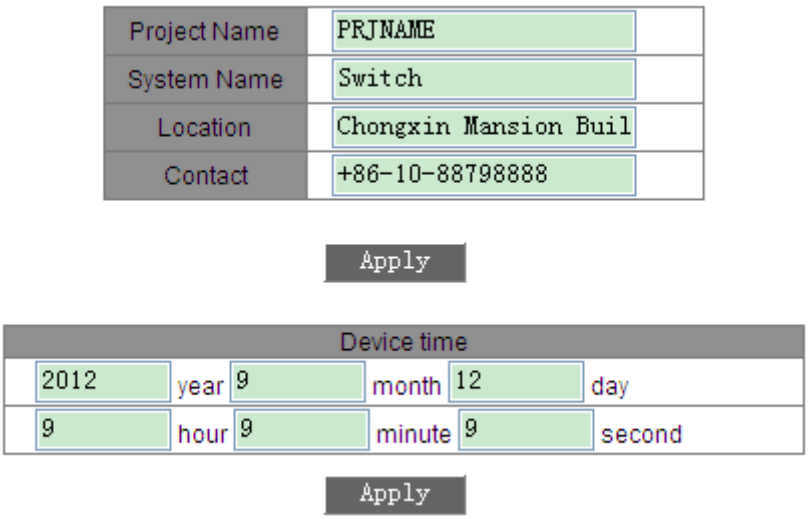

Figure 17 Device Information (SICOM3024P)

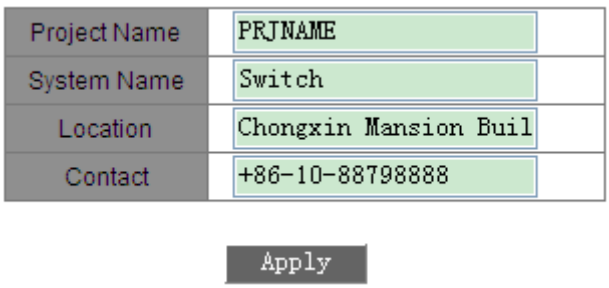

Figure 18 Device Information (SICOM3048)

Project Name

Range: 1~64 characters

System Name

Range: 1~32 characters

Location

Value: English/Chinese characters

Range: 1~255 characters (One Chinese character occupies the position of two English characters.)

Contact

Value: English/Chinese characters

Range: 1~32 characters (One Chinese character occupies the position of two English characters.)

Device time

Portfolio: {YYYY, MM, DD, HH, MM, SS}

Range: YYYY (year) ranges from 2000 to 2099, MM (month) from 1 to 12, DD (day) from 1 to 31, HH (hour) from 0 to 23, and MM (minute) and SS (second) from 0 to 59.

Function: Set the system date and time. The switch can continue timekeeping after powered off.

5.3 Port Configuration

In port configuration, you can configure port status, port speed, flow control, and other information, as shown in the following figure.

Port ID	Administration Status	Operation Status	Auto	Speed	Duplex	Flow Control	RX	TX	Reset
S1/FE1	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE2	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE3	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE4	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE5	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE6	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE7	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S1/FE8	Enable	Enable	Enable	100M	Full	Off	Enable	Enable	Noreset
S4/GE1	Enable	Enable	Enable	1000M	Full	Off	Enable	Enable	Noreset
S4/GE2	Enable	Enable	Enable	1000M	Full	Off	Enable	Enable	Noreset
S4/GE3	Enable	Enable	Enable	1000M	Full	Off	Enable	Enable	Noreset
S4/GE4	Enable	Enable	Enable	1000M	Full	Off	Enable	Enable	Noreset

Apply

Figure 19 Port Configuration

Administration Status

Options: Enable/Disable

Default: Enable

Function: Allow data transmission on port or not.

Description: Enable indicates the port is enabled and permits data transmission; Disable indicates the port is disabled and disallows data transmission. This option directly affects the hardware status of the port and triggers port alarms.

Operation Status

Description: When the administration status is Enable, the operation status is set to Enable forcibly; when the administration status is Disable, the operation status is set to Disable forcibly.

Auto

Options: Enable/Disable

Default: Enable

Function: Configure the auto-negotiation status of ports.

Description: When Auto is set to Enable, the port speed and duplex mode will be automatically negotiated according to port connection status; when Auto is set to Disable, the port speed and duplex mode can be configured.

Caution:

100Base-FX ports are set to Disable forcibly.

Speed

Options: 10M/100M/1000M

Function: Configure the speed of ports forcibly.

Description: When Auto is set to Disable, the port speed can be configured.

Duplex

Options: Half/Full

Function: Configure the duplex mode of ports.

Description: When Auto is set to Disable, the port duplex mode can be configured.

Caution:

- 10/100Base-TX ports can be set to auto-negotiation, 10M&full duplex, 10M&half duplex, 100M&full duplex, or 100M&half duplex.
- 100Base-FX ports are set to 100M&full duplex.
- 1000M RJ45 ports can be set to auto-negotiation, 10M&full duplex, 10M&half duplex, 100M&full duplex, 100M&half duplex, 1000M&full duplex, ot 1000M&half duplex.
- 1000M fiber ports can be set to auto-negotiation and 1000M&full duplex.

You are advised to enable auto-negotiation for each port to avoid the connection problems caused by mismatched port configuration. If you want to force port speed/duplex mode, please make sure the same speed/duplex mode configuration in the connected ports at both ends.

Flow Control

Options: Off/On

Default: Off

Function: Enable/Disable flow control function on the designated port.

Description: Once the flow control function is enabled, the port will inform the sender to slow the transmitting speed to avoid packet loss by algorithm or protocol when the port-received flow is bigger than the size of port cache. If the devices work in different duplex modes (half/full), their flow control is realized in different ways. If the devices work in full duplex mode, the receiving end will send a special frame (Pause frame) to inform the sending end to stop sending packets. When the sender receives the Pause frame, it will stop sending packets for a period of "wait time" carried in the Pause frame and continue sending packets once the "wait time" ends. If the devices work in half duplex mode, they support back pressure flow control. The receiving end creates a conflict or a carrier signal. When the sender detects the conflict or the carrier wave, it will take backoff to postpone the data transmission.

RX

Options: Enable/Disable

Default: Enable

Function: Allow the port to receive data or not.

Description: Enable indicates the port can receive data; Disable indicates the port cannot receive data.

TX

Options: Enable/Disable

Default: Enable

Function: Allow the port to receive data or not.

Description: Enable indicates the port can transmit data; Disable indicates the port cannot transmit data.

Reset

Options: Reset/Noreset

Default: Noreset

Function: Reset the port or not.

5.4 Password Change

You can change the password for user name "admin", as shown in the following figure.

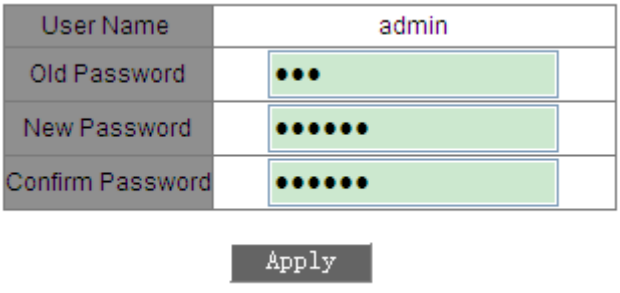

Figure 20 Password Change

5.5 Software Update

Software updates may help the switch to improve its performance. For this

series switches, software updates include BootROM software version update and system software version update. The BootROM software version should be updated before the system software version. If the BootROM version does not change, you can update only the system software version.

The software version update requires an FTP server.

5.5.1 Software Update through FTP

Install an FTP server. The following uses WFTPD software as an example to introduce FTP server configuration and software update.

1. Click [Security] → [Users/Rights]. The "Users/Rights Security Dialog" dialog box is displayed. Click <New User> to create a new FTP user, as shown in the following figure. Create a user name and password, for example, user name "admin" and password "123". Click <OK>.

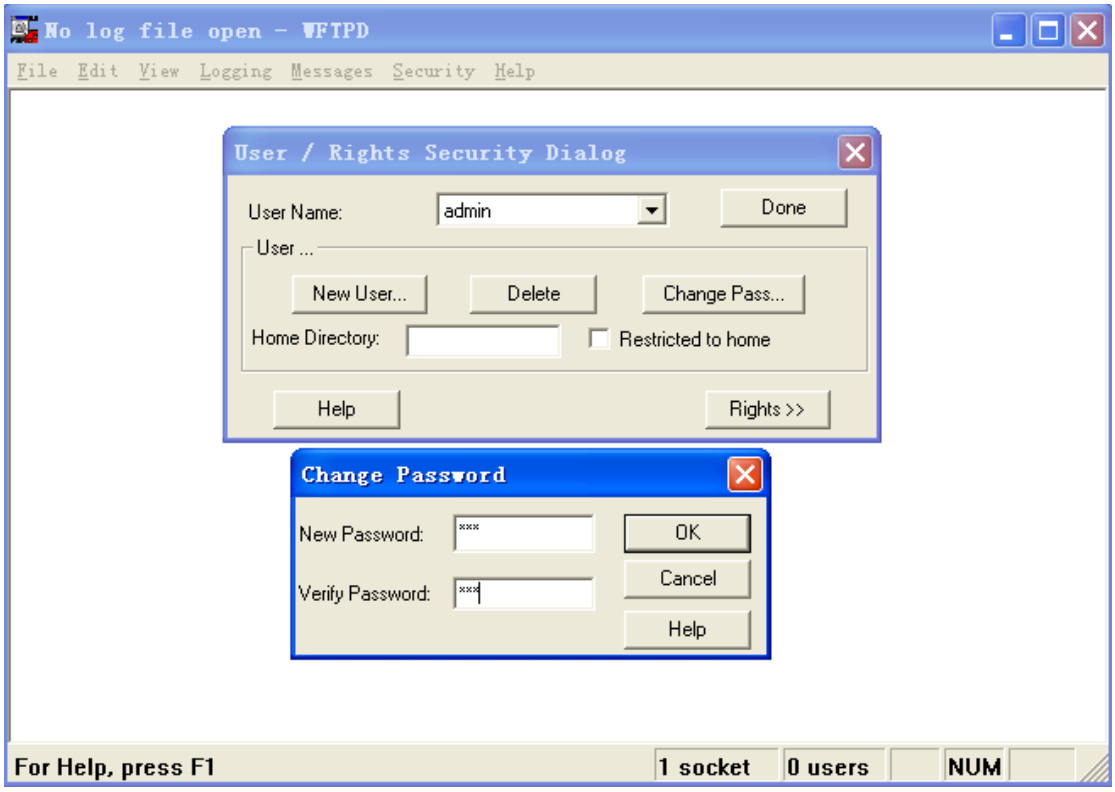

Figure 21 Creating a New FTP User

2. Input the storage path of the update file in "Home Directory", as shown in the following figure. Click <Done>.

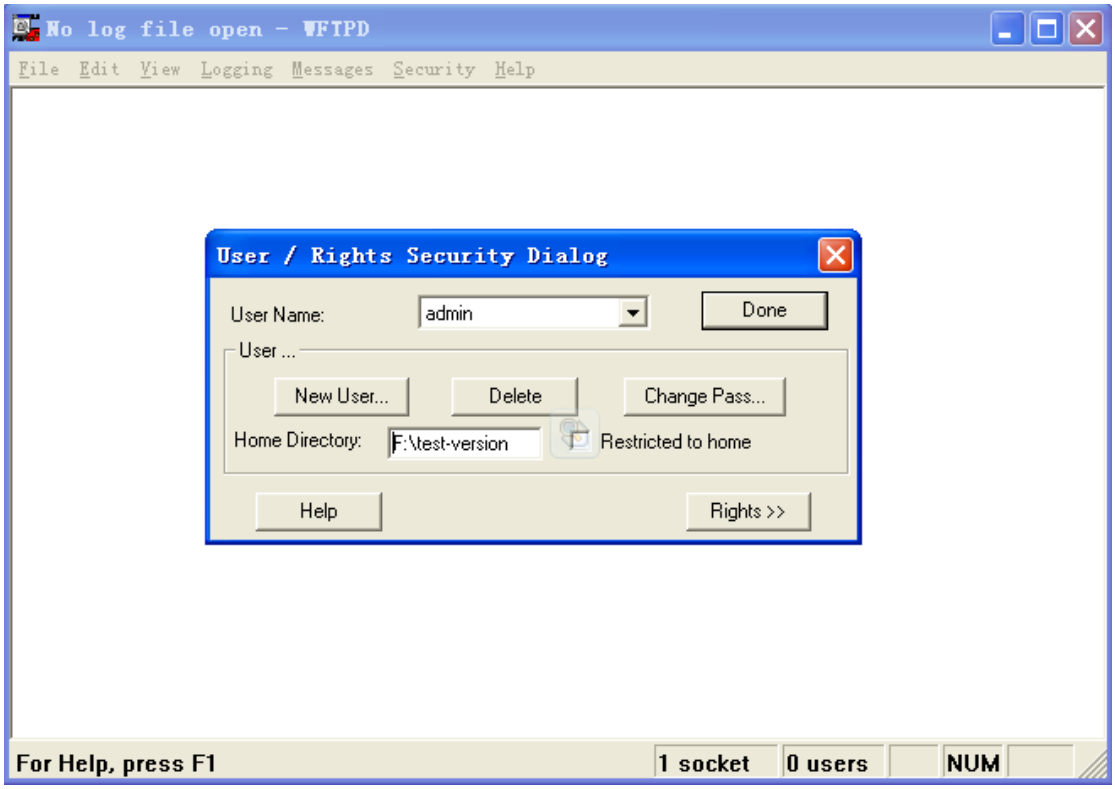

Figure 22 File Location

3. To update the BootROM software, input the following command in the management view.

Switch#**update bootrom** *File_name Ftp_server_ip_address User_name Password*

The following table lists the parameter descriptions.

Table 2 Parameters for BootROM Update by FTP

Parameter	**Description**
File_name	Name of the BootROM version
Ftp_server_ip_address	IP address of the FTP server
User_name	Created FTP user name
Password	Created FTP password

4. The following figure shows the software update page. Enter the IP address of the FTP server, file name (on the server), FTP user name, and password. Click <Apply>.

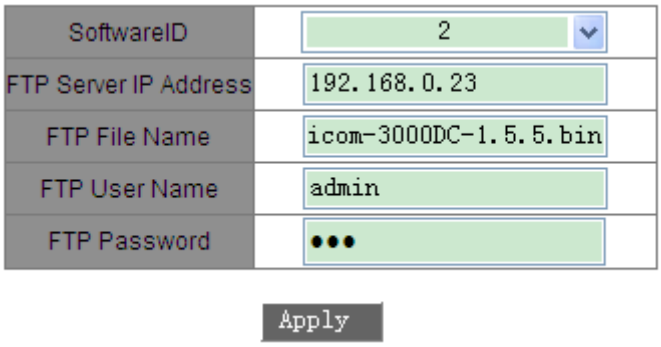

Figure 23 Software Update through FTP

Warning:

- Only the software version in inactive state can be used for update through Web.
- The file name must contain an extension. Otherwise, the update may fail.

5. Ensure normal communication between the FTP server and the switch, as shown in the following figure.

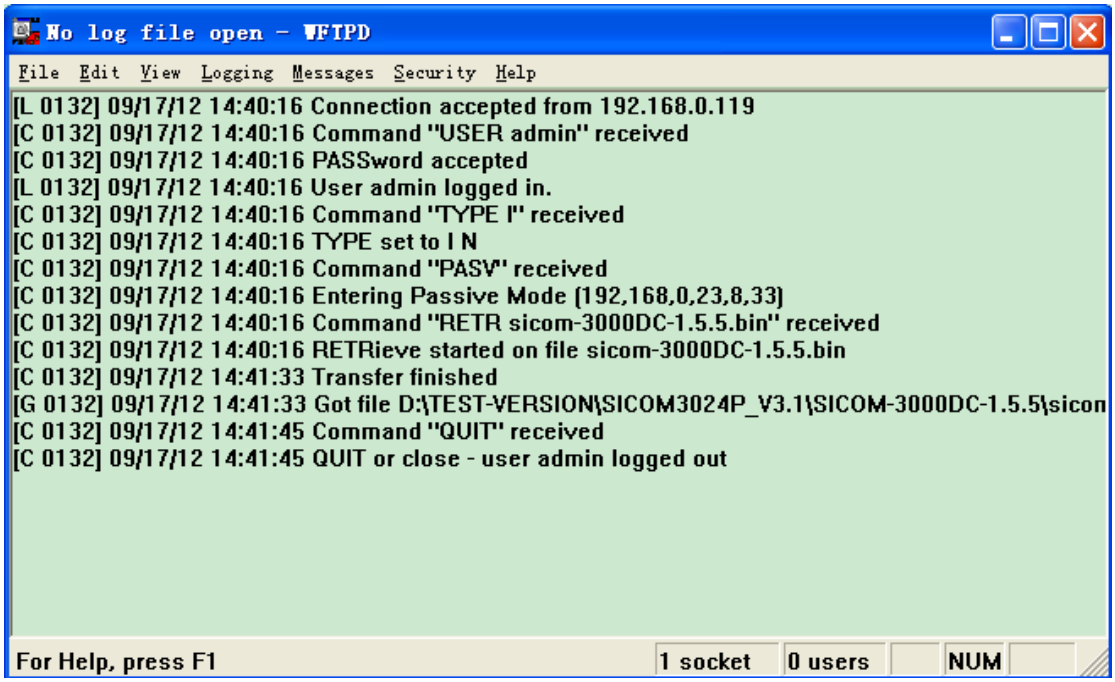

Figure 24 Normal Communication between the FTP Server and the Switch

Caution:

To display update log information as shown in the preceding figure, you need to click [Logging] → [Log Options] in WFTPD and select Enable Logging and the log information to be displayed.

6. When the update is completed as shown in the following figure, please reboot the device and open the Switch Basic Information page to check whether the update succeeded and the new version is active.



Figure 25 Successful Software Update through FTP

Warning:

- In the software update process, keep the FTP server software running.
- When update completes, reboot the device to make the new version take effect.
- If update fails, do not reboot the device to avoid the loss of software file and startup anomaly.

5.6 Software Version Query

Two software versions can be downloaded to the switch, but only one can be in active state at a time. In the Web UI, you can update only the inactive version.

By querying software versions, you can learn the IDs, release dates, and statuses of the two versions, as shown in the following figure.

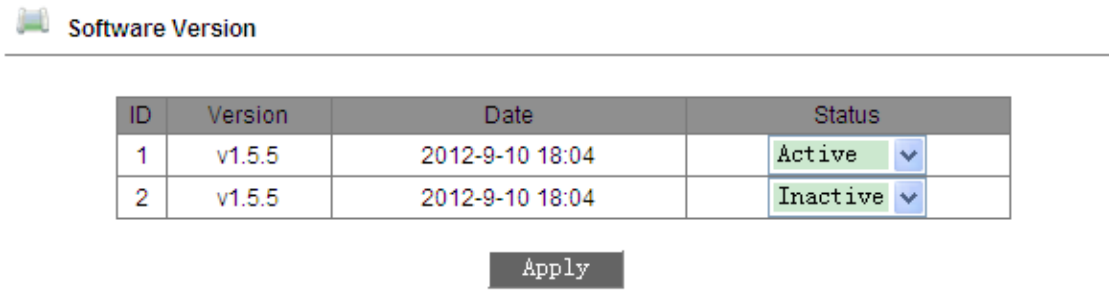

Figure 26 Software Version Query

5.7 Configuration Upload/Download

Configuration backup function can save current switch configuration files on the server. When the switch configuration is changed, you can download the original configuration files from the server to switch through FTP.

File uploading is to upload the switch configuration files to the server and save them to *.doc and *.txt files. File downloading is to download the saved configuration files from the server to switch, as shown in the following figures.

Caution:

After configuration file is downloaded to the switch, you need to restart the switch to make the configuration take effect.

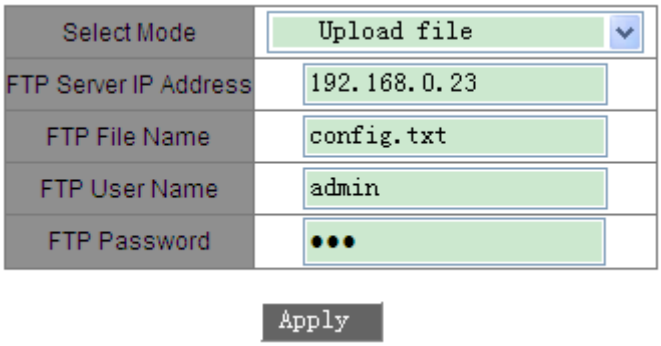

Figure 27 Configuration File Upload

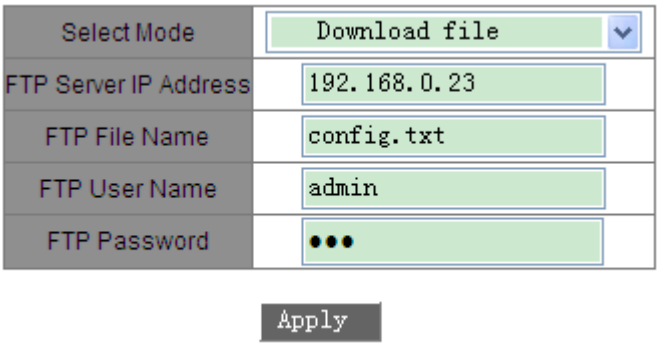

Figure 28 Configuration File Download

6 Advanced Configuration

6.1 Port Rate Limiting

6.1.1 Overview

Port rate limiting is to limit the rate packets received or transmitted by a port and discard the packets whose rate exceeds the threshold. The function takes effect on all packets at the egress but only certain types of packets at the ingress.

The following packets are controlled at the ingress.

- Unicast packets: indicate the unicast packets added statically or whose source MAC addresses are learned.
- Multicast packets: indicate the packets added statically or learned through IGMP Snooping or GMRP.
- Reserved multicast packets: indicate the packets with MAC addresses in the range of 0x0180c2000000 to 0x0180c200002f.
- Broadcast packets: indicate the packets with the destination MAC address of FF:FF:FF:FF:FF:FF.
- Unknown multicast packets: indicate the packets neither added statically nor learned through IGMP Snooping or GMRP.
- Unknown unicast packets: indicate the packets neither added statically nor whose source MAC addresses are learned.
- Unknown source packets: indicate the packets with unknown source MAC addresses.

6.1.2 Web Configuration

1. Select the packet types for rate control, as shown in the following figure.

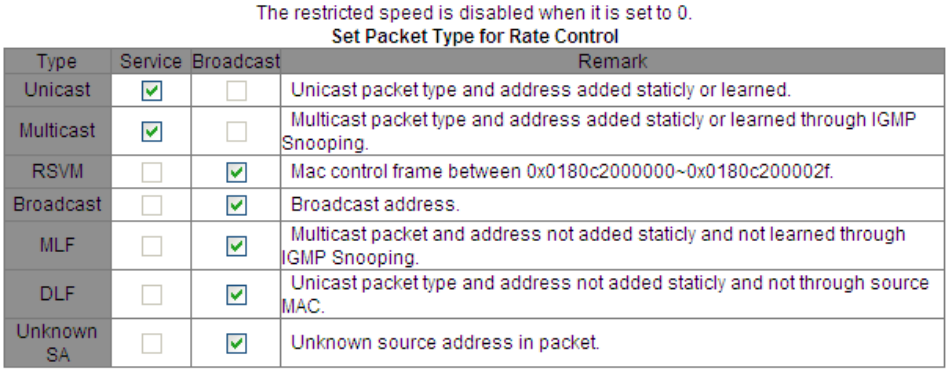

The restricted speed is disabled when it is set to 0.

Set Packet Type for Rate Control

Type	Service	Broadcast	Remark
Unicast	☑	☐	Unicast packet type and address added staticly or learned.
Multicast	☑	☐	Multicast packet type and address added staticly or learned through IGMP Snooping.
RSVM	☐	☑	Mac control frame between 0x0180c2000000~0x0180c200002f.
Broadcast	☐	☑	Broadcast address.
MLF	☐	☑	Multicast packet and address not added staticly and not learned through IGMP Snooping.
DLF	☐	☑	Unicast packet type and address not added staticly and not through source MAC.
Unknown SA	☐	☑	Unknown source address in packet.

Figure 29 Packet Types for Rate Control

The receiver classifies rate control into two types: service rate control and broadcast rate control. Each packet can be added to only one rate control type.

2. Configure port rate control, as shown in the following figure.

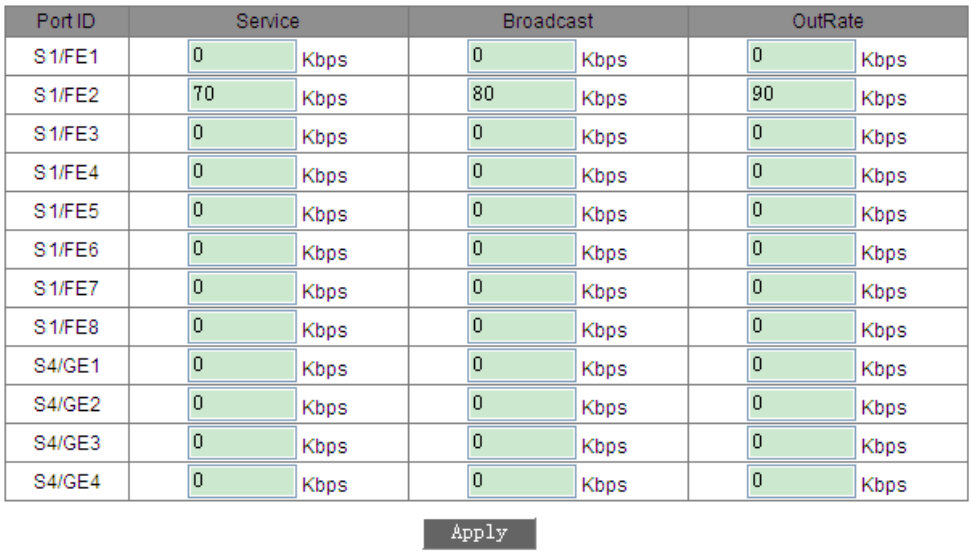

Port ID	Service	Broadcast	OutRate
S1/FE1	0 Kbps	0 Kbps	0 Kbps
S1/FE2	70 Kbps	80 Kbps	90 Kbps
S1/FE3	0 Kbps	0 Kbps	0 Kbps
S1/FE4	0 Kbps	0 Kbps	0 Kbps
S1/FE5	0 Kbps	0 Kbps	0 Kbps
S1/FE6	0 Kbps	0 Kbps	0 Kbps
S1/FE7	0 Kbps	0 Kbps	0 Kbps
S1/FE8	0 Kbps	0 Kbps	0 Kbps
S4/GE1	0 Kbps	0 Kbps	0 Kbps
S4/GE2	0 Kbps	0 Kbps	0 Kbps
S4/GE3	0 Kbps	0 Kbps	0 Kbps
S4/GE4	0 Kbps	0 Kbps	0 Kbps

Apply

Figure 30 Port Rate Control

Service/Broadcast

Range: 64~1000000Kbps

Function: Configure rate control for packets on the port. Packets whose rate is higher than the specified value are discarded.

Description: The ingress rate for a 100M port ranges from 64 to 100000Kbps. The ingress rate for a 1000M port ranges from 64 to 1000000Kbps.

OutRate

Range: 64~1000000Kbps

Function: Limit the rate of packets forwarded by a port.

Description: The egress rate for a 100M port ranges from 64 to 100000Kbps. The ingress rate for a 1000M port ranges from 64 to 1000000Kbps.

Caution:

If a rate value is set to 0, rate control is disabled on the port.

6.1.3 Typical Configuration Example

Set the rate threshold of unicast and multicast packets on port 2 to 70Kbps, broadcast packets to 80Kbps, and outgoing rate to 90Kbps.

Configuration steps:

1. Select unicast and multicast packets in the Service column, and broadcast packets in the Broadcast column, as shown in Figure 29.
2. On port 2, set the service rate threshold to 70Kbps, broadcast rate threshold to 80Kbps, and outgoing rate to 90Kbps, as shown in Figure 30.

6.2 VLAN

6.2.1 Overview

One LAN can be divided into multiple logical Virtual Local Area Networks (VLANs). A device can only communicate with the devices on the same VLAN. As a result, broadcast packets are restricted to a VLAN, optimizing LAN security.

VLAN partition is not restricted by physical location. Each VLAN is regarded as a logical network. If a host in one VLAN needs to send data packets to a host in another VLAN, a router or layer-3 device must be involved.

6.2.2 Principle

To enable network devices to distinguish packets from different VLANs, fields for identifying VLANs need to be added to packets. At present, the most commonly used protocol for VLAN identification is IEEE802.1Q. The following

table shows the structure of an 802.1Q frame.

Table 3 802.1Q Frame Structure

DA	SA	802.1Q Header				Length/Type	Data	FCS
		Type	PRI	CFI	VID			

A 4-byte 802.1Q header, as the VLAN tag, is added to the traditional Ethernet data frame.

Type: 16 bits. It is used to identify a data frame carrying a VLAN tag. The value is 0x8100.

PRI: three bits, identifying the 802.1p priority of a packet.

CFI: one bit. 0 indicates Ethernet, and 1 indicates token ring.

VID: 12 bits, indicating the VLAN number. The value ranges from 1 to 4093. 0, 4094, and 4095 are reserved values.

Note:

- VLAN 1 is the default VLAN and cannot be manually created and/or deleted.
- Reserved VLANs are reserved to realize specific functions by the system and cannot be manually created and/or deleted.

The packet with an 802.1Q header is a tagged packet; the one without 802.1Q header is an untagged packet. All packets carry an 802.1Q tag in the switch.

6.2.3 Port-based VLAN

VLAN partition can be either port-based or MAC address-based. This series switches support port-based VLAN partition. VLAN members can be defined based on switch ports. After a port is added to a specified VLAN, the port can forward the packets with the tag for the VLAN.

1.Port Type

Ports fall into two types according to how they handle VLAN tags when they forward packets.

- Untag port: Packets forwarded by an Untag port do not have VLAN tags. Untag ports are usually used to connect to terminals that do not support 802.1Q. By default, all switch ports are Untag ports and belong to VLAN1.
- Tag port: All packets forwarded by a Tag port carry a VLAN tag. Tag ports are usually used to connect network transmission devices.

2.PVID

Each port has a PVID. When receiving an untagged packet, a port adds a tag to the packet according to the PVID.

The port PVID is the VLAN ID of the Untag port. By default, all ports' PVID is VLAN 1.

The following table shows how the switch processes received and forwarded packets according to the port type and PVID.

Table 4 Different Processing Modes for Packets

<table>
<tr><th colspan="2">Processing Received Packets</th><th colspan="2">Processing Packets to Be Forwarded</th></tr>
<tr><th>Untagged packets</th><th>Tagged packets</th><th>Port Type</th><th>Packet Processing</th></tr>
<tr><td rowspan="2">Add PVID tags to untagged packets.</td><td rowspan="2">➢ If the VLAN ID in a packet is in the list of VLANs allowed through, accept the packet.
➢ If the VLAN ID in a packet is not in the list of VLANs allowed through, discard the packet.</td><td>Untag</td><td>Forward the packet after removing the tag.</td></tr>
<tr><td>Tag</td><td>Keep the tag and forward the packet.</td></tr>
</table>

6.2.4 Web Configuration

1. Configure the VLAN transparent transmission mode, as shown in the following figure.

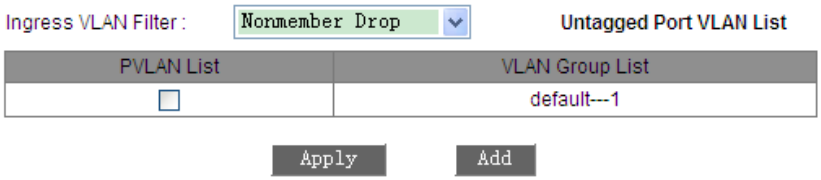

Figure 31 Configuring VLAN Transparent Transmission Mode

Ingress VLAN Filter

Options: Nonmember Drop/Nonmember Forward

Default: Nonmember Drop

Function: Configure the VLAN transparent transmission mode.

Description: The transparent transmission mode indicates whether the switch checks incoming packets on a port. If Nonmember Drop is selected, a packet is discarded when the VLAN tag of the packet is different from the VLAN of the port. If Nonmember Forward is selected, a packet is accepted when the VLAN tag of the packet is identical with that of any other connected port on the switch; otherwise, the packet is discarded.

2. Create a VLAN.

Click <Add> in Figure 31 to create a VLAN. As shown in the following figure, select the ports to be added to the VLAN and set port parameters.

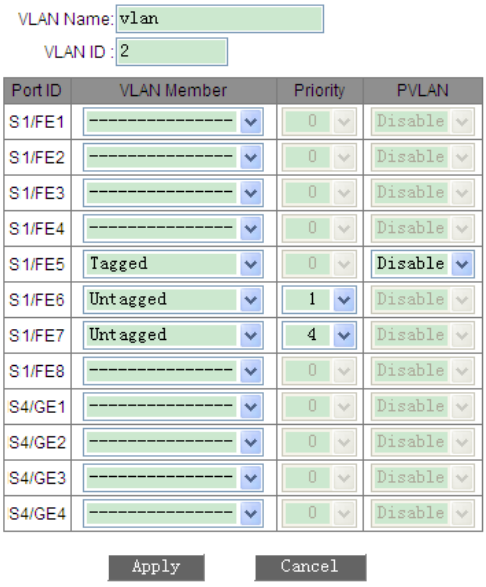

Figure 32 VLAN Configuration

VLAN Name

Range: 1~31 characters

Function: Set the VLAN name.

VLAN ID

Range: 2~4093

Function: Configure the VLAN ID.

Description: VLAN ID is used to distinguish different VLANs. This series switches support a maximum of 256 VLANs.

VLAN Member

Options: Tagged/Untagged

Function: Select the type of the port in the VLAN.

Priority

Range: 0~7

Default: 0

Function: Set the default priority of the port. When adding an 802.1Q tag to an untagged packet, the value of the PRI field is the priority.

PVLAN

Options: Enable/Disable

Default: Disable

Function: To add a Tag port to a VLAN, you need to enable or disable PVLAN. For details about PVLAN, see the next chapter.

Caution:

An Untag port can be added to only one VLAN. The VLAN ID is the PVID of the port. The default value is 1. A Tag port can be added to multiple VLANs.

3. View the VLAN list, as shown in the following figure.

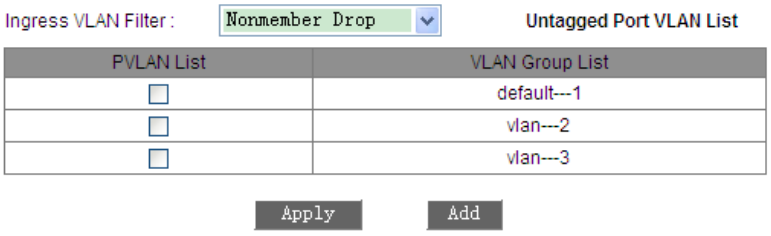

Figure 33 Viewing VLAN List

PVLAN List

Options: select/deselect

Function: Enable or disable the PVLAN function. For details, see the next chapter.

4. View the PVIDs of ports.

Click <Untagged Port VLAN List> in Figure 33. The following page is displayed.

Port ID	VLAN ID
S1/FE1	1
S1/FE2	1
S1/FE3	1
S1/FE4	1
S1/FE5	1
S1/FE6	2
S1/FE7	2
S1/FE8	1
S4/GE1	1
S4/GE2	1
S4/GE3	1
S4/GE4	1

Figure 34 Port PVID List

Caution:

Each port must have an Untag attribute. If it is not set, the Untag port is in VLAN 1 by default.

5. Modify/Delete VLAN.

Click a VLAN list in Figure 33. You can modify or delete a created VLAN. Click <Delete> at the bottom. You can delete a VLAN directly, as shown in the following figure.

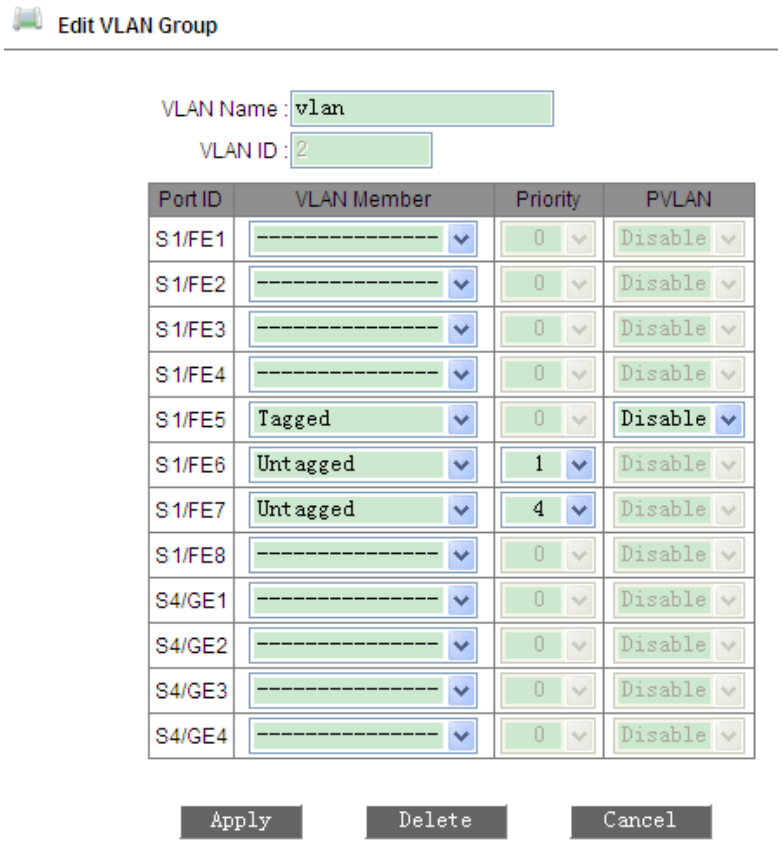

Figure 35 Modifying/Deleting a Created VLAN

6.2.5 Typical Configuration Example

As shown in the following figure, the entire LAN is divided into 3 VLANs: VLAN2, VLAN100 and VLAN200. It is required that the devices in a same VLAN can communicate to each other, but different VLANs are isolated. The terminal PCs cannot distinguish Tag packets, so the ports on connecting Switch A and Switch B with PCs are set to Untag port. VLAN2, VLAN100 and VLAN200 packets need to be transmitted between Switch A and Switch B, so the ports connecting Switch A and Switch B should be set to Tag ports, permitting the packets of VLAN 2, VLAN 100 and VLAN 200 to pass through. The following table shows specific configuration.

Table 5 VLAN Configuration

Item	Configuration

VLAN2	Set port 1 and port 2 of Switch A and B to Untag ports, and port 7 to Tag port.
VLAN100	Set port 3 and port 4 of Switch A and B to Untag ports, and port 7 to Tag port.
VLAN200	Set port 5 and port 6 of Switch A and B to Untag ports, and port 7 to Tag port.

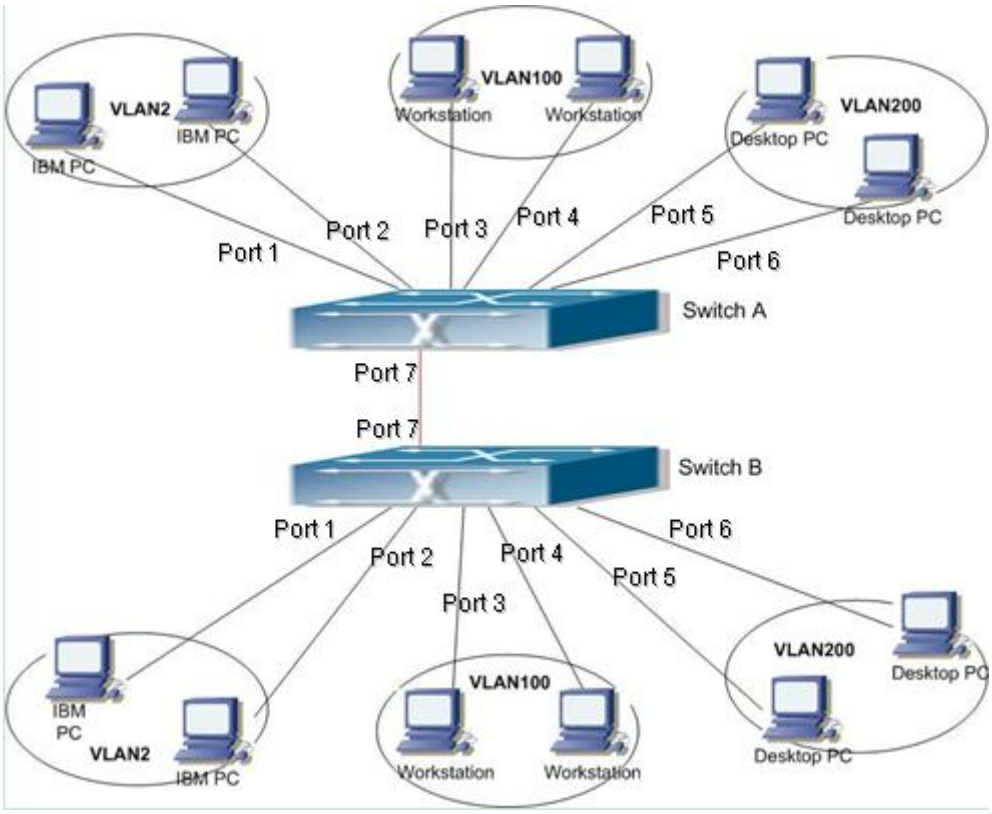

Figure 36 VLAN Application

Configurations on Switch A and Switch B:

1. Create VLAN 2, add port 1 and port 2 to VLAN 2 as Untag ports, and add port 7 into VLAN 2 as Tag port, as shown in Figure 32.
2. Create VLAN 100, add port 3 and port 4 to VLAN 100 as Untag ports, and add port 7 into VLAN 100 as Tag port, as shown in Figure 32.
3. Create VLAN 200, add port 5 and port 6 into VLAN 200 as Untag ports, and add port 7 into VLAN 200 as Tag port, as shown in Figure 32.

6.3 PVLAN

6.3.1 Overview

Private VLAN (PVLAN) uses two layers isolation technologies to realize the complex port traffic isolation function, achieving network security and broadcast domain isolation.

The upper VLAN is a shared domain VLAN in which ports are uplink ports. The lower VLANs are isolation domains in which ports are downlink ports. Downlink ports can be assigned to different isolation domains and they can communicate with the uplink port at the same time. Isolation domains cannot communicate with each other.

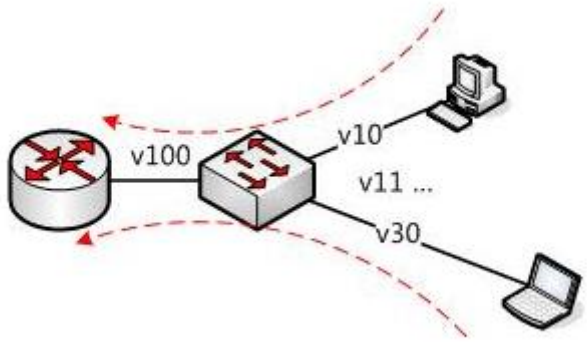

Figure 37 PVLAN Application

As shown in the preceding figure, the shared domain is VLAN 100 and the isolation domains are VLAN 10 and VLAN 30; the devices in the isolation domains can communicate with the device in the shared domain, such as VLAN 10 can communicate with VLAN 100; VLAN 30 can also communicate with VLAN100, but the devices in different isolation domains cannot communicate with each other, such as VLAN 10 cannot communicate with VLAN 30.

Note:

When a PVLAN-enabled Tag port forwards a frame carrying a VLAN tag, the VLAN tag will be removed.

6.3.2 Web Configuration

1. Enable PVLAN on the port, as shown in the following figure.

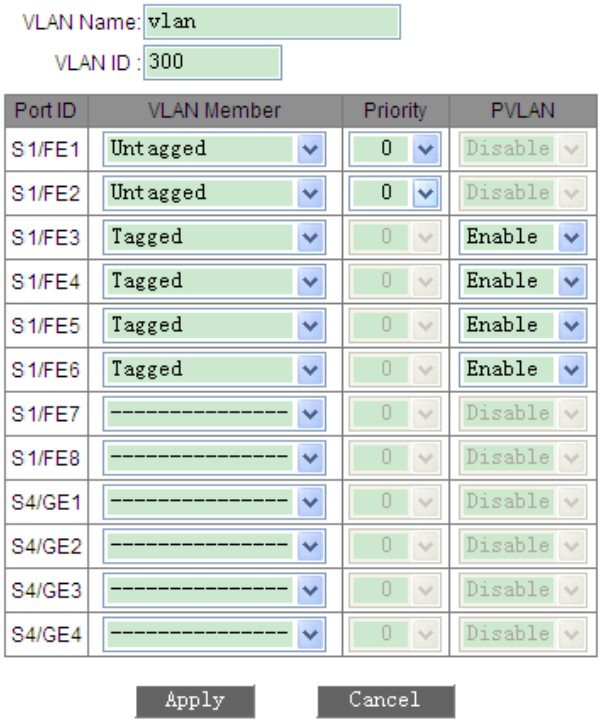

Figure 38 Enabling PVLAN

You can enable PVLAN on a Tag port in VLAN.

If the VLAN is a shared domain, the uplink port is an Untag port and the downlink port shall be added to the VLAN as a Tag port.

If the VLAN is an isolation domain, the downlink port is an Untag port and the uplink port shall be added to the VLAN as a Tag port.

2. Select the member VLANs of PVLAN, as shown in the following figure.

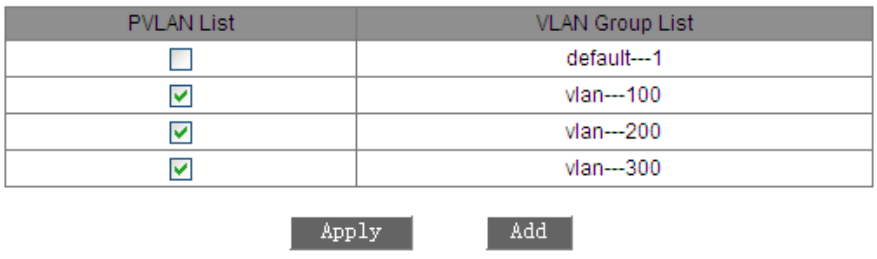

Figure 39 Selecting PVLAN Members

PVLAN List

Options: select/deselect

Default: deselect

Function: Select PVLAN members.

Note:

Both shared and isolation domains are member VLANs of PVLAN.

6.3.3 Typical Configuration Example

Figure 40 shows a PVLAN application. VLAN300 is a shared domain and port 1 and port 2 are uplink ports; VLAN100 and VLAN200 are isolation domains and port 3, 4, 5 and 6 are downlink ports.

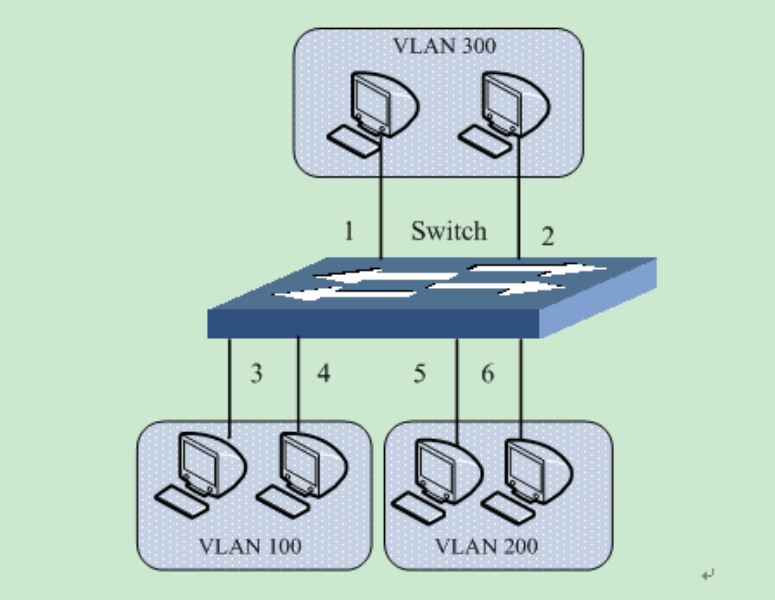

Figure 40 PVLAN Configuration Example

Configuration steps:

1. Configure the shared domain, VLAN 300, as shown in Figure 38.

Set port 1 and port 2 to Untag ports and add them to VLAN 300.

Set port 3 and port 4 to Tag ports and add them to VLAN 300. Enable PVLAN on the two ports.

Set port 5 and port 6 to Tag ports and add them to VLAN 300. Enable PVLAN on the two ports.

2. Configure VLAN 100, an isolation domain, as shown in Figure 38.

Set port 1 and port 2 to Tag ports and add them to VLAN 100. Enable PVLAN on the two ports.

Set port 3 and port 4 to Untag ports and add them to VLAN 100.

3. Configure VLAN 200, an isolation domain, as shown in Figure 38.

Set port 1 and port 2 to Tag ports and add them to VLAN 200. Enable PVLAN on the two ports.

Set port 5 and port 6 to Untag ports and add them to VLAN 200.

4. Set VLAN300, VLAN100 and VLAN200 to PVLAN members, as shown in Figure 39.

6.4 Port Mirroring

6.4.1 Overview

With port mirroring function, the switch copies all received or transmitted data frames in a port (mirroring source port) to another port (mirroring destination port). The mirroring destination port is connected to a protocol analyzer or RMON monitor for network monitoring, management, and fault diagnosis.

6.4.2 Description

A switch supports only one mirroring destination port but multiple source ports. Multiple source ports can be either in the same VLAN, or in different VLANs. Mirroring source port and destination port can be in the same VLAN or in different VLANs.

The source port and destination port cannot be the same port.

Caution:

- A mirroring source or destination port cannot be added to a Trunk group,while the port added to a Trunk group cannot be set to a mirroring destination or source port.
- A mirroring source or destination port cannot be set to a redundant port, while a redundant port cannot be set to a mirroring source or destination port.

6.4.3 Web Configuration

1. Select the mirroring destination port, as shown in the following figure.

Figure 41 Selecting a Mirroring Port

Mirroring Port

Options: Disable/a switch port

Default: Disable

Function: Select a port to be the mirroring destination port. There must be only one mirroring destination port.

2. Select mirroring source ports and the mirroring mode, as shown in the following figure.

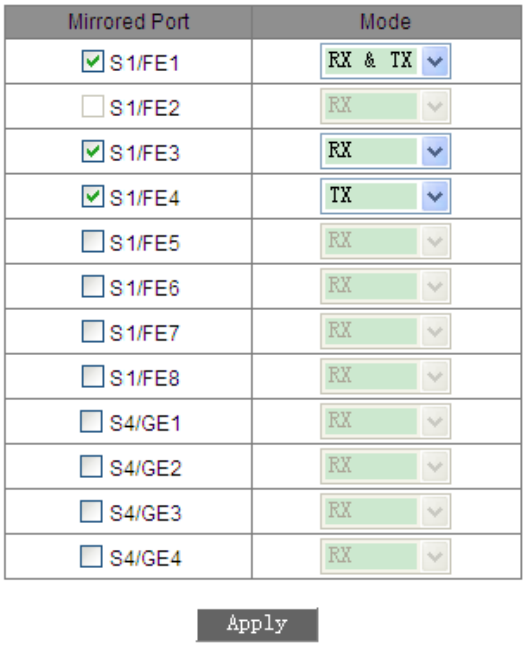

Figure 42 Mirroring Source Port

Mode

Options: RX/TX/RX & TX

Function: Select the data to be mirrored.

TX indicates only the transmitted packets are mirrored in the source port.

RX indicates only the received packets are mirrored in the source port.

TX&RX indicates both transmitted and received packets are mirrored in the source port.

6.4.4 Typical Configuration Example

As shown in the following figure, the mirroring destination port is port 2 and the mirroring source port is port 1. Both transmitted and received packets on port 1 are mirrored to port 2.

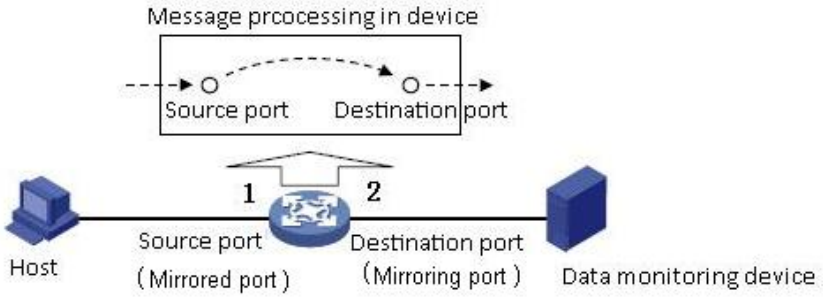

Figure 43 Port Mirroring Example

Configuration steps:

1. Set port 2 to the mirroring destination port, as shown in Figure 41.
2. Set port 1 to the mirroring source port and the port mirroring mode to TX&RX, as shown in Figure 42.

6.5 Port Trunk

6.5.1 Overview

Port trunk is to bind a group of physical ports that have the same configuration to a logical port. The member ports in a trunk group can not only share the load, but also become a dynamic backup for each other to enhance connection reliability.

6.5.2 Implementation

As shown in the following figure, three ports in Switch A aggregate to a trunk group and the bandwidth of the trunk group is the total bandwidth of three ports.

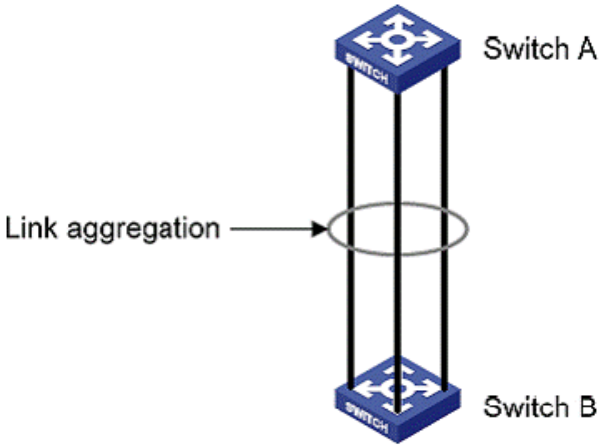

Figure 44 Port Trunk

If Switch A sends packets to Switch B by way of the aggregated link, Switch A determines the member port for transmitting the traffic based on the calculation result of load sharing. When one member port of the aggregated link fails, the traffic transmitted through the port is taken over by another normal port based on traffic sharing algorithm.

6.5.3 Description

Port trunk and the following port configurations cannot be used together:

- Port redundancy: A port added to a trunk group cannot be configured as a redundant port, while a redundant port cannot be added to a trunk group.
- Port mirroring: A port added to a trunk group cannot be configured as a mirroring destination or source port.

In addition, the following operations are not recommended.

- Enable GMRP on a trunk port.
- Add a GMRP-enabled port to a trunk group.
- Add a trunk port to a static unicast/multicast entry.
- Add a port in a static unicast/multicast entry to a trunk group.

Caution:

- Gigabit ports of the series switches do not support port trunk.
- A port can be added to only one trunk group.

6.5.4 Web Configuration

1. Add Port Trunk.

Click <Add> to add a trunk group, as shown in the following figure.

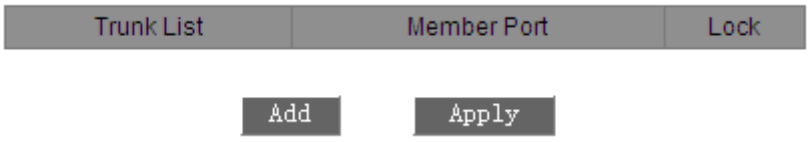

Figure 45 Adding a Trunk Group

2. Configure the trunk group, as shown in the following figure.

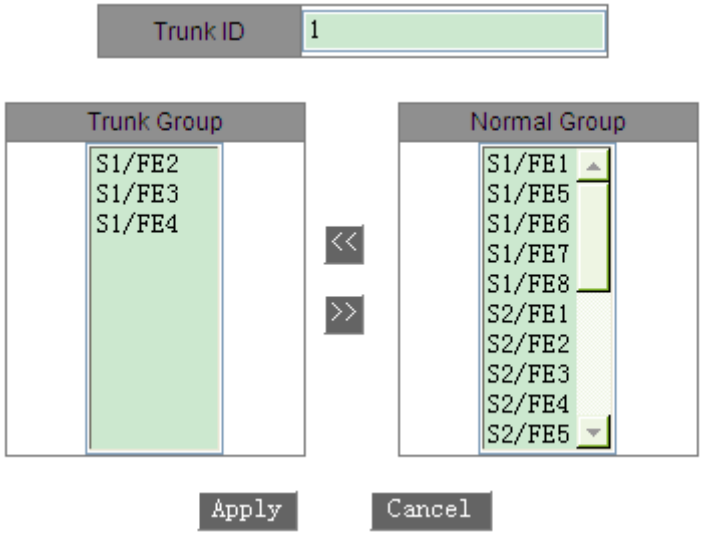

Figure 46 Configuring the Trunk Group

Trunk ID (SICOM3024P)

Range: 1~14

Function: Set the trunk group ID.

Description: The series switches support a maximum of 14 trunk groups. Each group can contain a maximum of 4 ports.

Trunk ID (SICOM3048)

Range: 1~6

Function: Set the trunk group ID.

Description: The series switches support a maximum of 6 trunk groups. Each group can contain a maximum of 4 ports.

3. View trunk group list, as shown in the following figure.

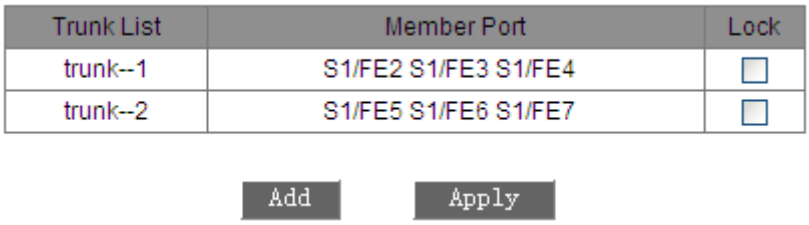

Figure 47 Trunk Group List

Lock

Lock the member ports of a trunk group. After locked member ports are deleted from a trunk group, you must enable the ports manually to unlock the ports.

Click a trunk group in Figure 47. You can modify or delete the trunk group, as shown in the following figure.

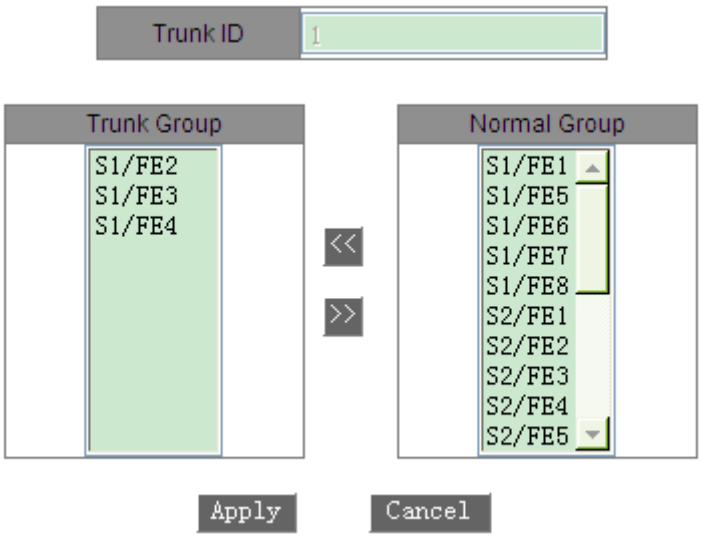

Figure 48 Modifying/Deleting a Trunk Group

After modifying group member settings (add a new port to the group or delete a port member from the group), click <Apply> to make the modification take effect. If you click <Delete>, you can delete the group.

6.5.5 Typical Configuration Example

As shown in Figure 44, port 2, port 3, and port 4 of Switch A are connected to ports of Switch B respectively, forming trunk group 1 to achieve load balancing

among ports.

Configuration steps:

1.Create trunk group 1 on Switch A and add port 2, port 3, and port 4 to the group, as shown in Figure 46.

2.Create trunk group 1 on Switch B and add port 2, port 3, and port 4 to the group, as shown in Figure 46.

6.6 Link Check

6.6.1 Overview

Link Check detects the data transmission of redundancy protocol-enabled ports. Link check helps to detect the anomaly for timely processing when a fault occurs

6.6.2 Web Configuration

The following figure shows the link check configuration.

Link Check

Port	Administration Status	Run Status
S1/FE1	Enable	Normal Link
S1/FE2	Enable	Send Fault
S1/FE3	Enable	Receive Fault
S1/FE4	Disable	Disable
S1/FE5	Disable	Disable
S1/FE6	Disable	Disable
S1/FE7	Disable	Disable
S1/FE8	Disable	Disable
S4/GE1	Disable	Disable
S4/GE2	Disable	Disable
S4/GE3	Disable	Disable
S4/GE4	Disable	Disable

Apply

Figure 49 Link Check Configuration

Administration Status

Options: Enable/Disable

Default: Enable

Description: The function can be enabled only on a redundant protocol-enabled port.

Caution:

If the peer device does not support the function, the function shall be disabled on the connected port of the local device.

Run Status

Options: Normal Link/Receive Fault/Disable/Send Fault

Description: If Link Check is enabled on a ring port and the port sends and receives data normally, Normal Link is displayed. If the peer end does not receive the detection packets from the device, Send Fault is displayed. If the device does not receive detection packets from the peer end, Receive Fault is displayed. If Link Check is not enabled on a port, Disable is displayed.

6.7 Static Multicast

6.7.1 Overview

You can configure the static multicast address table. You can add an entry to the table in <multicast MAC address, VLAN ID, multicast member port> format. When receiving multicast packets, the; switch searches the table for the corresponding member port to forward the packets.

The device supports up to 256 multicast entries.

6.7.2 Web Configuration

1. Enable static multicast, as shown in the following figure.

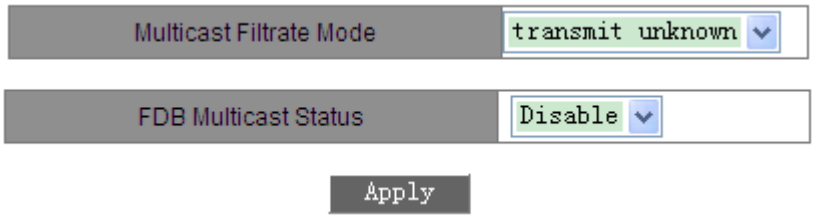

Figure 50 Enabling Static Multicast

Multicast Filtrate Mode

Options: transmit unknown/drop unknown

Default: transmit unknown

Function: Configure the processing mode for unknown multicast packets.

Description: Unknown multicast packets are packets neither manually added nor learned through IGMP Snooping or GMRP.

Transmit unknown indicates unknown multicast packets are broadcasted in the corresponding VLANs; drop unknown indicates unknown multicast packets are discarded.

FDB Multicast Status

Options: Enable/Disable

Default: Disable

Function: Enable or disable static multicast. Static multicast and IGMP Snooping cannot be enabled at the same time.

2. Add a static multicast entry, as shown in the following figure.

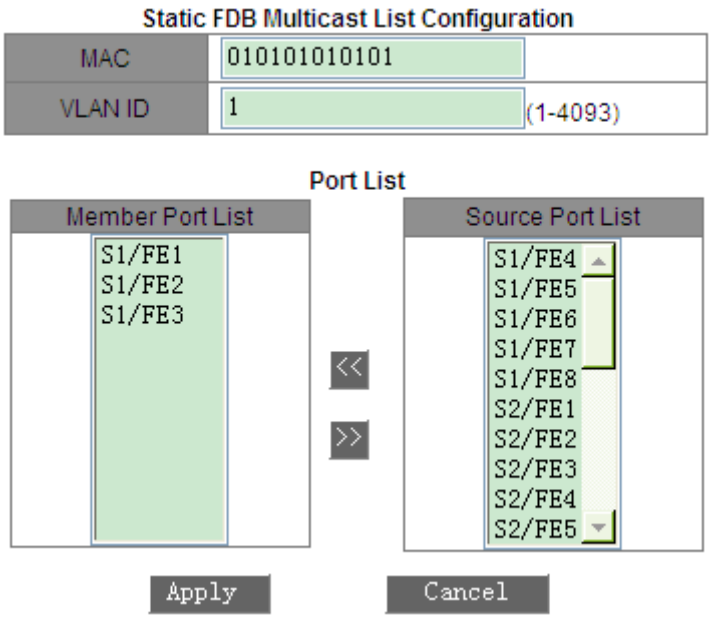

Figure 51 Adding a Static Multicast Entry

MAC

Portfolio: HHHHHHHHHHHH (H is a hexadecimal number.)

Function: Configure the multicast group address. The lowest bit of the highest

byte is 1.

VLAN ID

Options: all existing VLANs

Function: Set the VLAN ID of the entry. Only the member ports of the VLAN can forward the multicast packets.

Member Port List

Select member ports for the multicast address. If hosts connected to a port need to receive the packets from a multicast address, you can configure the port as the member port of the multicast address.

3. View, modify, or delete a static multicast entry, as shown in the following figure.

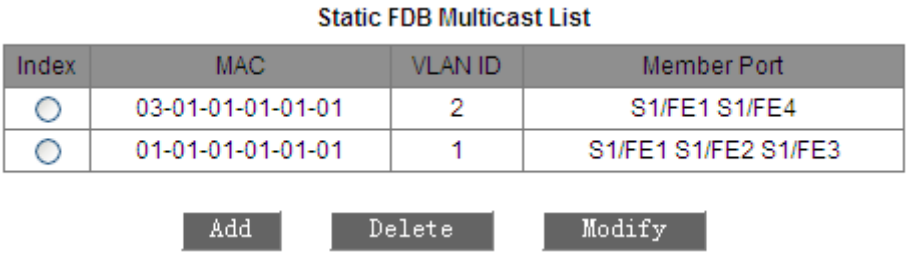

Figure 52 Operations on a Static Multicast Entry

The static multicast address list contains the MAC address, VLAN ID, and member port. To delete an entry, select the entry and click <Delete>. To modify an entry, select the entry and click <Modify>.

6.8 IGMP Snooping

6.8.1 Overview

Internet Group Management Protocol Snooping (IGMP Snooping) is a multicast protocol at the data link layer. It is used for managing and controlling multicast groups. IGMP Snooping-enabled switches analyze received IGMP packets, establish mapping between ports and MAC multicast addresses, and forward multicast packets according to the mapping.

6.8.2 Concepts

- Querier: periodically sends IGMP general query packets to query the status of the members in the multicast group, maintaining the multicast group information. When multiple queriers exist on a network, they automatically elect the one with the smallest IP address to be the querier. Only the elected querier periodically sends IGMP general query packets. The other queriers only receive and forward IGMP query packets.
- Router port: receives general query packets (on an IGMP-enabled switch) from the querier. Upon receiving an IGMP report, a switch establishes a multicast entry and adds the port that receives the IGMP report to the member port list. If a router port exists, it is also added to the member port list. Then the switch forwards the IGMP report to other devices through the router port, so that the other devices establish the same multicast entry.

6.8.3 Principle

IGMP Snooping manages and maintains multicast group members by exchanging related packets among IGMP-enabled devices. The related packets are as follows:

- General query packet: The querier periodically sends general query packets (destination IP address: 224.0.0.1) to confirm whether or not the multicast group has member ports. After receiving the query packet, a non-querier device forwards the packet to all its connected ports.
- Specific query packet: If a device wants to leave a multicast group, it sends an IGMP leave packet. After receiving the leave packet, the querier sends a specific query packet (destination IP address: IP address of the multicast group) to confirm whether the group contains other member ports.
- Membership report packet: If a device wants to receive the data of a multicast group, the device sends an IGMP report packet (destination IP address: IP address of the multicast group) immediately to respond to the

IGMP query packet of the group.

- Leave packet: If a device wants to leave a multicast group, the device will send an IGMP leave packet (destination IP address: 224.0.0.2).

6.8.4 Web Configuration

1. Enable IGMP Snooping, as shown in the following figure.

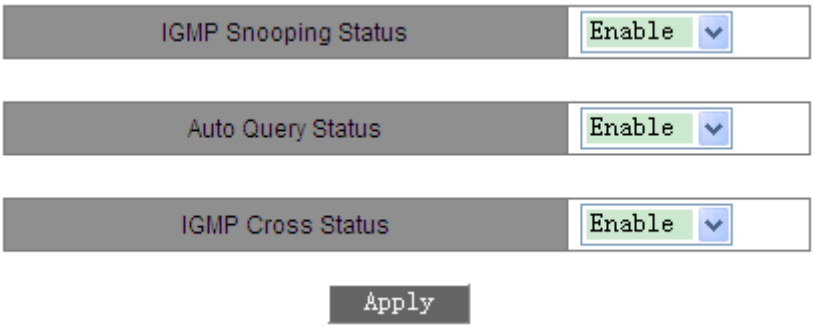

Figure 53 Enabling IGMP Snooping

IGMP Snooping Status

Options: Enable/Disable

Default: Disable

Function: Enable or disable IGMP Snooping. IGMP Snooping and static multicast/GMRP cannot be enabled at the same time.

Auto Query Status

Options: Enable/Disable

Default: Disable

Function: Enable or disable auto query for querier election.

Description: The auto query function can be enabled only if IGMP Snooping is enabled.

Caution:

The auto query function on a network shall be enabled on at least one switch.

IGMP Cross Status

Options: Enable/Disable

Default: Disable

Function: If the function is enabled, report and leave packets can be forwarded

by the DT ring ports.

2. View the multicast member list, as shown in the following figure.

IGMP Member List

MAC	VLAN ID	Member
01-00-5E-7F-FF-FA	1	S1/FE1
01-00-5E-0A-18-03	1	S1/FE1
01-00-5E-51-09-08	1	S1/FE1

Figure 54 IGMP Snooping Member List

IGMP Member List

Combination: {MAC, VLAN ID, Member}

In the FDB multicast table dynamically learned through IGMP Snooping, the VLAN ID is the VLAN ID of member ports.

6.8.5 Typical Configuration Example

As shown in the following figure, IGMP Snooping is enabled on Switch 1, Switch 2, and Switch 3. Auto query is enabled on Switch 2 and Switch 3. The IP address of Switch 2 is 192.168.1.2 and that of Switch 3 is 192.168.0.2.Therefore, Switch 3 is elected as the querier.

1.Enable IGMP Snooping on Switch 1.

2.Enable IGMP Snooping and auto query on Switch 2.

3.Enable IGMP Snooping and auto query on Switch 3.

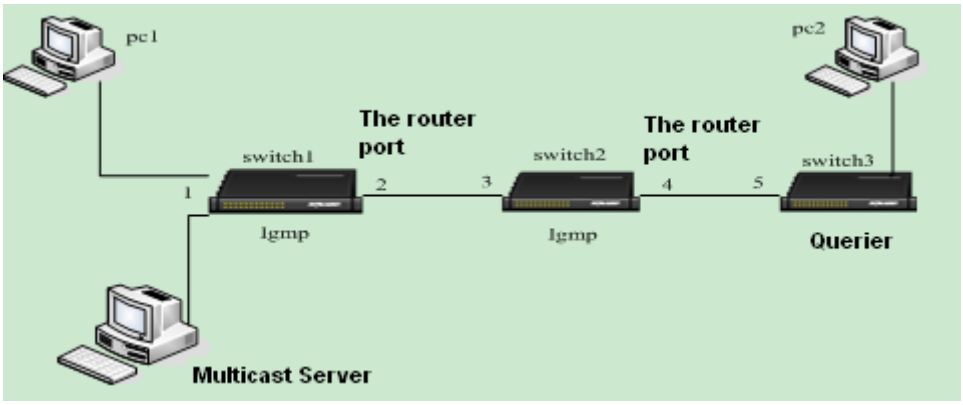

Figure 55 IGMP Snooping Configuration Example

- Switch 3 as the querier periodically sends general query packets. Port 4 of Switch 2 receives the packets and is thus elected as the routing port. Switch

2 forwards the packets through port 3. Then port 2 of Switch 1 receives the packets and is thus elected as the routing port.

- When PC 1 is added to multicast group 225.1.1.1 and sends IGMP report packets, port 1 and port 2 (routing port) of Switch 1 are added to multicast group 225.1.1.1. IGMP report packets are forwarded to Switch 2 through port 2. Then port 3 and port 4 of Switch 2 are also added to multicast group 225.1.1.1. Switch 2 forwards the report packets to Switch 3 through port 4. As a result, port 5 of Switch 3 is also added to multicast group 225.1.1.1.
- When receiving multicast data, Switch 1 forwards the data to PC 1 through port 1. As port 2 is also a multicast group member, it also forwards multicast data. As the process proceeds, multicast data finally reaches port 5 of Switch 3 because no further receiver is available. If PC 2 is also added to multicast group 225.1.1.1, multicast data is also forwarded to PC 2.

6.9 ACL

6.9.1 Overview

With the development of network technologies, security issues have become increasingly prominent, calling for access control mechanism. With the Access Control List (ACL) function, the switch matches packets with the list to implement access control.

6.9.2 Implementation

The series switches filter packets according to the matched ACL. Each entry consists several conditions in the logical AND relationship. ACL entries are independent of each other.

The switch compares a packet with ACL entries in the ascending order of entry IDs. Once a match is found, the action is taken and no further comparison is conducted, as shown in the following figure.

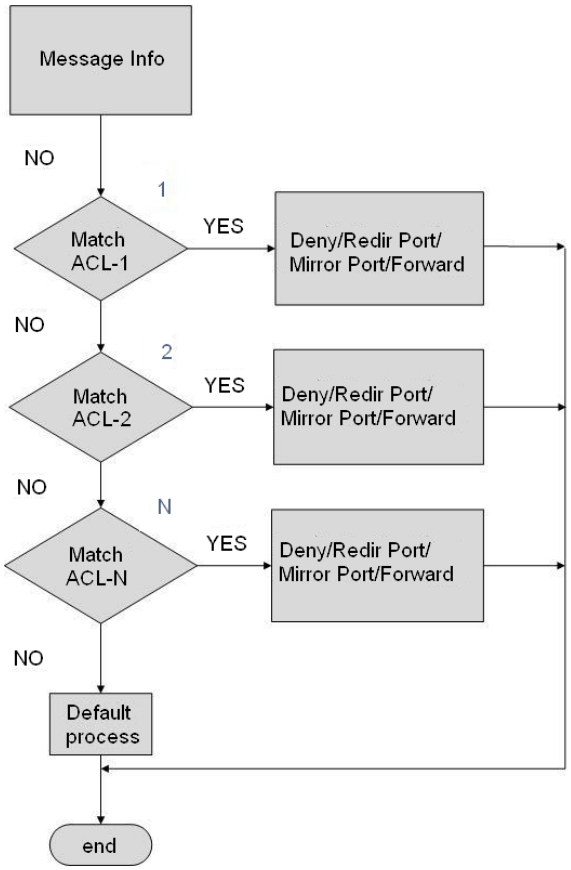

Figure 56 ACL Processing Flowchart

Note:

Default process indicates the processing mode towards packets matching no ACL entry.

6.9.3 Web Configuration (SICOM3024P)

1. Add an ACL entry.

Click <Add List> to add an ACL entry, as shown in the following figure.

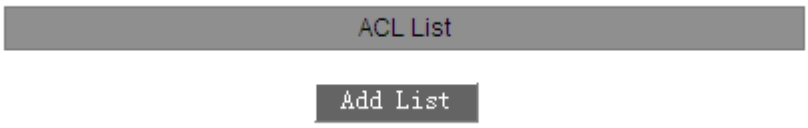

Figure 57 Adding an ACL Entry (SICOM3024P)

2. Set parameters for the ACL entry, as shown in the following figure.

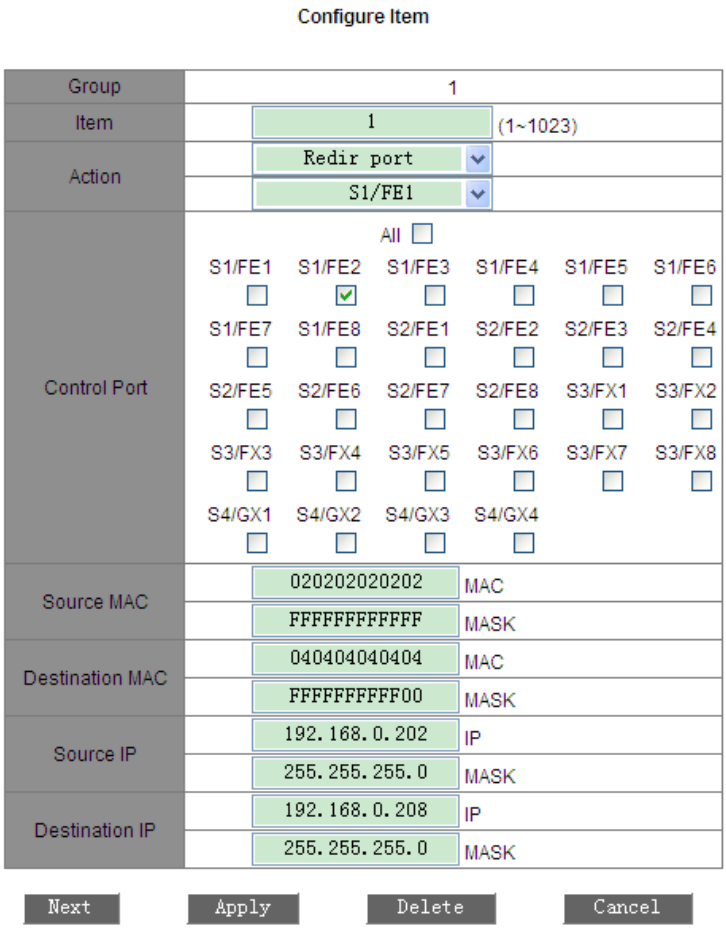

Figure 58 Setting ACL Entry Parameters 1 (SICOM3024P)

The switch provides a number of ACL entry parameters. You need to click <Next> to finish setting all of them, as shown in the following figures.

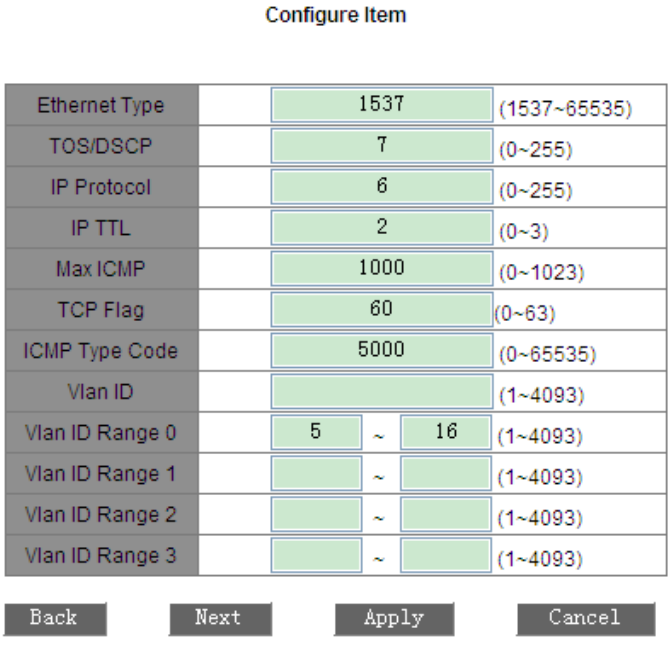

Figure 59 Setting ACL Entry Parameters 2 (SICOM3024P)

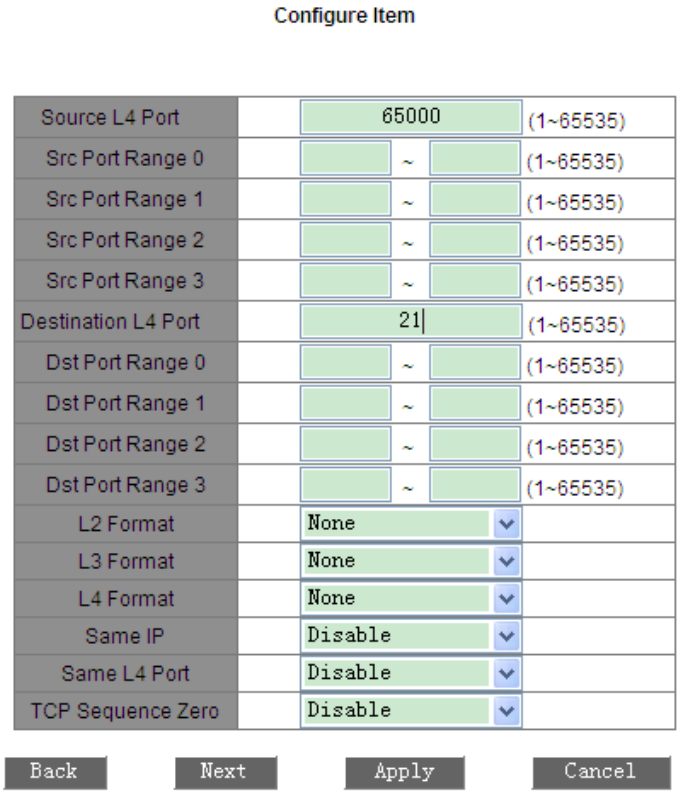

Figure 60 Setting ACL Entry Parameters 3 (SICOM3024P)

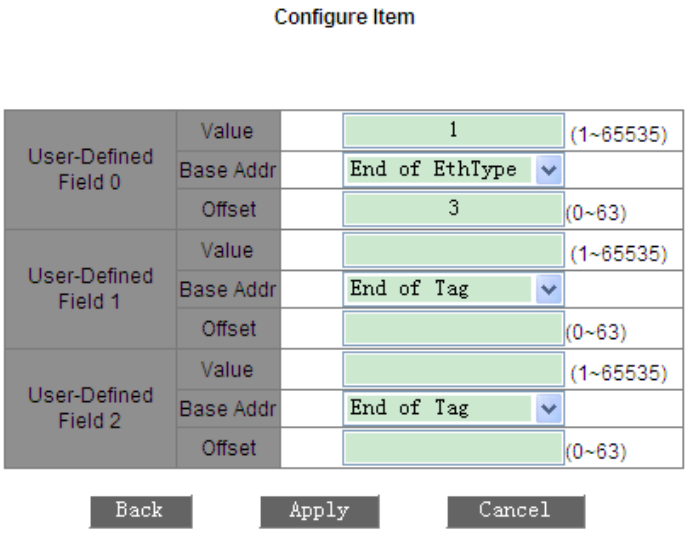

Figure 61 Setting ACL Entry Parameters 4 (SICOM3024P)

Group

Forcible configuration: 1

Item

Range: 1~1023

Function: Set the ID of the ACL entry. You can configure a maximum of 1023

ACL entries. When multiple ACL entries are configured, they are compared with packets in the ascending order of IDs.

Action

Options: Deny/Redir Port/Mirror Port/Forward

Default: Deny

Function: Configure the action towards a packet that matches the ACL entry.

Deny: Packets matching the entry will be denied.

Redir Port: Packets matching the entry will be forwarded to the specified port. You need to specify the port in the drop-down list.

Mirror Port: Packets matching the entry will be forwarded to both the destination port and the specified port in the drop-down list.

Forward: Packets matching the entry will be forwarded to the destination port.

Control Port

Options: all/one or multiple ports

Function: Select the port on which the ACL takes effect.

Source MAC

Portfolio: {MAC, MASK}

Format: {HHHHHHHHHHHH, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure the source MAC address and subnet mask. If the source MAC address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Destination MAC

Portfolio: {MAC, MASK}

Format: {HHHHHHHHHHHH, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure the destination MAC address and subnet mask. If the destination MAC address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Source IP

Portfolio: {IP, MASK}

Format: {A.B.C.D, A.B.C.D}

Function: Configure the source IP address and subnet mask. If the source IP address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Destination IP

Portfolio: {IP, MASK}

Format: {A.B.C.D, A.B.C.D}

Function: Configure the destination IP address and subnet mask. If the destination IP address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Ethernet Type

Range: 1537~65535

Function: Configure the Ethernet type. If the Ethernet type field of a packet is identical with the value of this parameter, then the condition is met.

TOS/DSCP

Range: 0~255

Function: Configure the service type. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IP Protocol

Range: 0~255

Function: Configure the IP protocol value. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IP TTL

Range: 0~3

Function: Configure the TTL field. If the value is set to 0, the TTL of a matched packet must be 0; if the value is set to 1, the TTL of a matched packet must be 1; if the value is set to 2, the TTL of a matched packet range from 2 to 254; if the value is set to 3, the TTL of a matched packet must be 255. If the corresponding field of a packet meets these rules, then the condition is met.

Max ICMP

Range: 0~1023

Function: Configure the Max ICMP value. The value indicates the data length of ICMP packets. If the data length of an ICMP packet is larger than the value, then the condition is met.

TCP Flag

Range: 0~63

Function: Configure the TCP flag. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

ICMP Type Code

Range: 0~65535

Function: Configure the ICMP type code. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

Vlan ID

Range: 1~4093

Function: Configure the VLAN ID. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

Vlan ID Range (0~3)

Portfolio: {X~Y} (X and Y (X≤Y) range from 1 to 4093. X and Y indicate the lower and upper limits of Vlan IDs respectively.)

Function: Configure the range of VLAN IDs of packets. The condition is met when the VLAN ID of a packet is within the specified range.

Source L4 Port

Range: 1~65535

Function: Configure the source port number for Layer-4 protocol packets. If the corresponding field of a packet is identical with the value, then the condition is met.

Src Port Range (0~3)

Portfolio: {X~Y} (X and Y (X≤Y) range from 1 to 65535. X and Y indicate the lower and upper limits of Layer-4 source port numbers respectively.)

Function: Configure the source port number range for Layer-4 protocol packets. If the corresponding field of a packet is within the specified range, then the condition is met.

Destination L4 Port

Range: 1~65535

Function: Configure the destination port number for Layer-4 protocol packets. If the corresponding field of a packet is identical with the value, then the condition is met.

Dst Port Range (0~3)

Portfolio: {X~Y} (X and Y (X≤Y) range from 1 to 65535. X and Y indicate the lower and upper limits of Layer-4 destination port numbers respectively.)

Function: Configure the destination port number range for Layer-4 protocol packets. If the corresponding field of a packet is within the specified range, then the condition is met.

L2 Format

Options: None/L2_Others/Ethernet_II/IEEE_802_2_SNAP

Default: None

Function: Configure Layer-2 Ethernet frame format. None indicates this rule is not used; L2_Others indicates all of the other Ethernet frame formats except Ethernet_II and IEEE_802_2_SNAP. When the Ethernet frame format of a packet is consistent with the specified value, then the condition is met.

L3 Format

Options: None/L3_Others/IPV4_without_frag/IPV6_without_exten

Default: None

Function: Configure the Layer-3 Internet protocol. None indicates this rule is not used; L3_Others indicates all the Layer-3 Internet protocols except IPV4_without_frag and IPV6_without_exten. When the Layer-3 Internet protocol of a packet is consistent with the specified value, then the condition is met.

L4 Format

Options: None/L4_Others/TCP/UDP/ (ICMP/IGMP)

Default: None

Function: Configure the Layer-4 protocol type. None indicates this rule is not used; L4_Others indicates all the protocols except TCP, UDP, ICMP, and IGMP. When the Layer-4 protocol type of a packet is consistent with the specified value, then the condition is met.

Same IP

Options: Disable/False/True

Default: Disable

Function: Check whether the source IP address of a packet is identical with its destination IP address.

Disable indicates the rule is not used.

False indicates the condition is met if the source IP address of a packet is different from its destination IP address.

True indicates the condition is met if the source IP address of a packet is identical with its destination IP address.

Same L4 Port

Options: Disable/False/True

Default: Disable

Function: Check whether the source Layer-4 port number of a packet is identical with its destination Layer-4 port number.

Disable indicates the rule is not used.

False indicates the condition is met if the source Layer-4 port number of a packet is different from its destination Layer-4 port number.

True indicates the condition is met if the source Layer-4 port number of a packet is identical with its destination Layer-4 port number.

TCP Sequence Zero

Options: Disable/False/True

Default: Disable

Function: Check whether the TCP Sequence field of a packet is 0.

Disable indicates the rule is not used.

False indicates the condition is met if the TCP Sequence field of a packet is not 0.

True indicates the condition is met if the TCP Sequence field of a packet is 0.

User-Defined Field (0~2)

Portfolio: {Value, Base Addr, Offset}

Range or Options:

Value: 1~65535

Base Addr: End of Tag (Default)/End of EthType/End of IP Header

Offset: 0~63

Function: Define a field as an ACL condition. Value indicates the value to be matched; Base Addr indicates the reference point of a packet; End of Tag indicates the end of the Tag field is the reference point; End of EthType indicates the end of the EthType field is the reference point; End of IP Header indicates the end of the IP header field is the reference point; Offset indicates the offset of the value compared with the reference point. If the *Offset* of a packet compared with *Base Addr* is *Value*, then the condition is met.

Note:

It is not necessary to set all these parameters, but at least one parameter needs to be set. If only one parameter is required, then leave all the other parameters empty.

3. View the ACL.

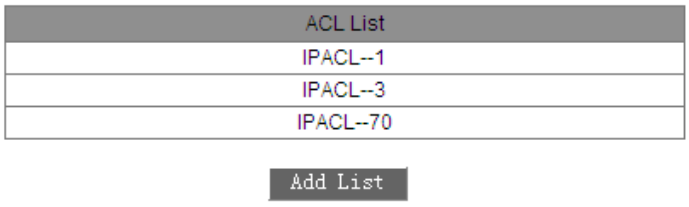

Figure 62 ACL Entries (SICOM3024P)

Click an ACL entry in the preceding figure. Then modify or delete the ACL entry, as shown in the following figure.

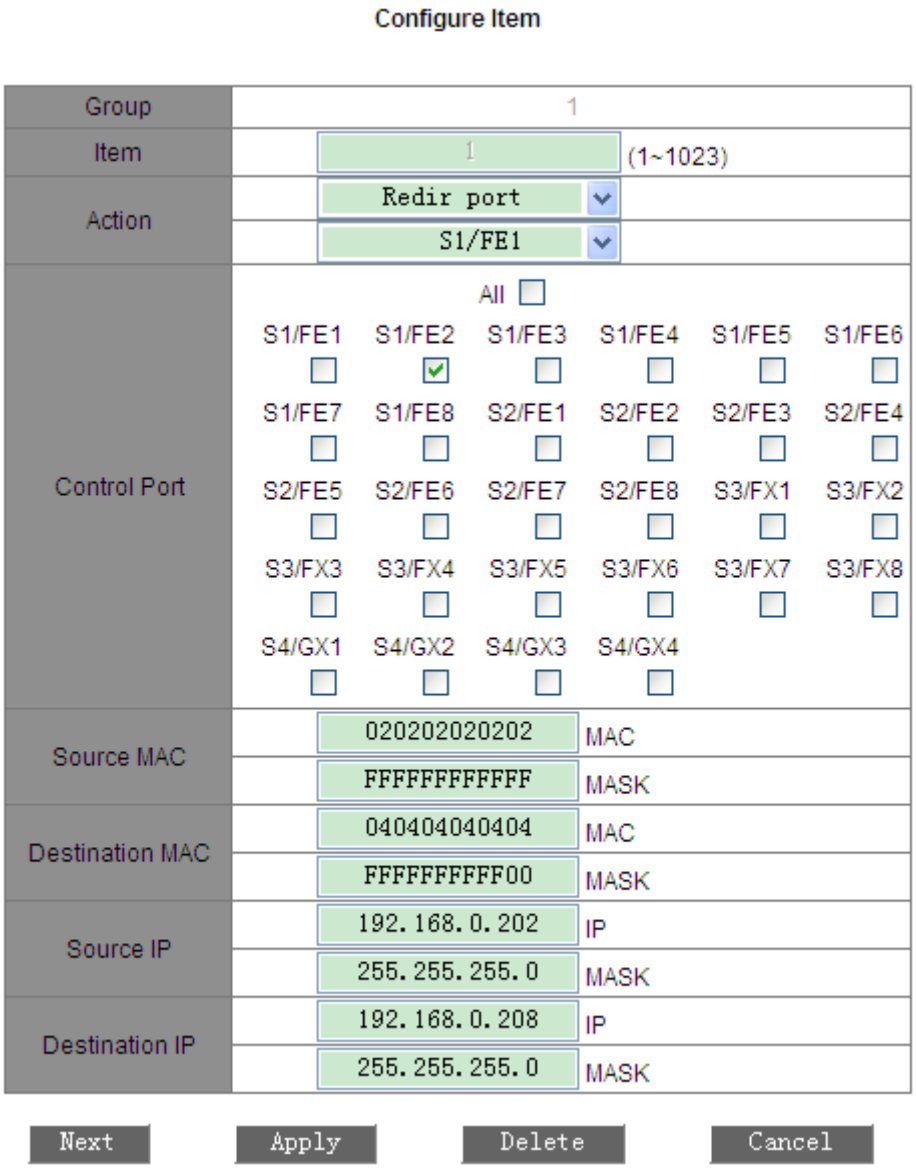

Figure 63 Modifying/Deleting an ACL Entry (SICOM3024P)

Click <Apply> for changes to take effect after modification. Click <Delete> to delete the ACL entry.

6.9.4 Web Configuration(SICOM3048)

1. Add an ACL entry.



Figure 64 Adding an ACL Entry (SICOM3048)

Click <Add List> in the preceding figure to add an ACL entry. Different group

IDs correspond to different ACL parameters, as shown in the following figures.

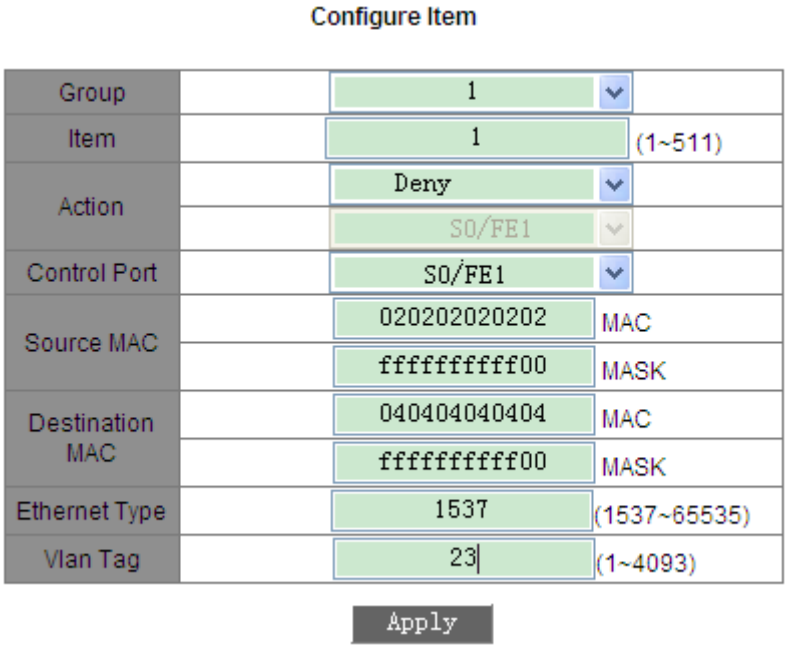

Figure 65 Setting ACL Entry Parameters - Group 1 (SICOM3048)

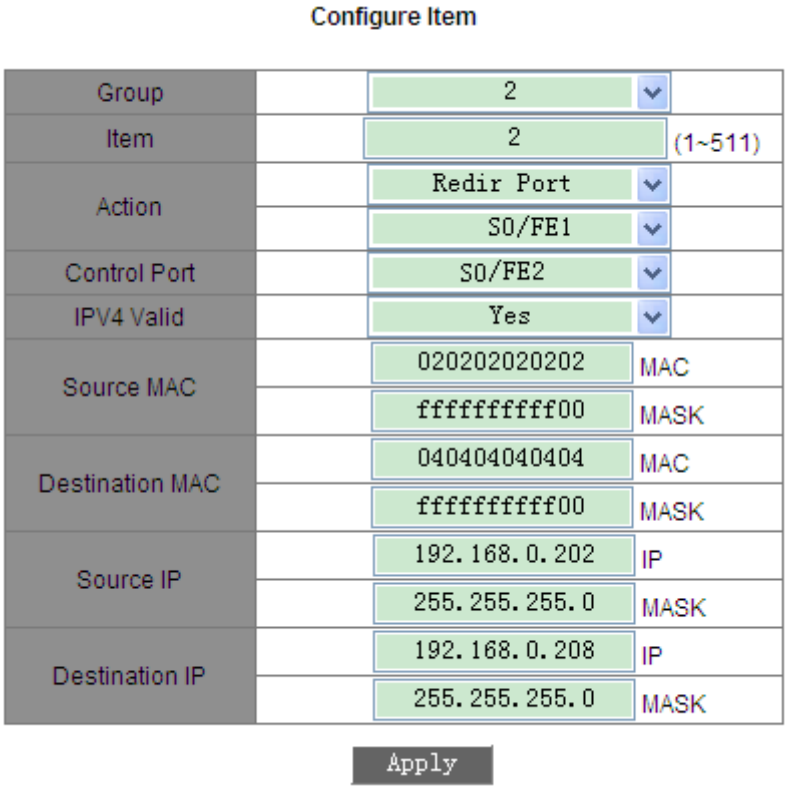

Figure 66 Setting ACL Entry Parameters - Group 2 (SICOM3048)

Configure Item

Group	3	
Item	3	(1~511)
Action	Mirror Port	
	S0/FE1	
Control Port	S0/FE2	
IPV4 Valid	Disable	
Same IP Address	Disable	
Same L4 Port	Disable	
TCP/UDP Valid	Disable	
TCP Frame Valid	Disable	
TCP Sequence Zero	Yes	
TCP Header Length	6	(1~15) x 4
Source L4 Port	65000	(1~65535)
Destination L4 Port	65100	(1~65535)
TCP Flag	16	(0~63)
Source IP	192.168.0.202	IP
	255.255.255.0	MASK
Destination IP	192.168.0.208	IP
	255.255.255.0	MASK

Apply

Figure 67 Setting ACL Entry Parameters - Group 3 (SICOM3048)

Configure Item

Group	4	
Item	4	(1~511)
Action	Forward	
	S0/FE1	
Control Port	S0/FE2	
Ethernet Type	1537	(1537~65535)
Vlan Tag	23	(1~4093)
TOS/DSCP	89	(0~255)
IP Protocol	6	(0~255)
IP Version	69	(0~255)
IP TTL	255	(0~255)

Apply

Figure 68 Setting ACL Entry Parameters - Group 4 (SICOM3048)

Group

Options: 1~4

Default: 1

Function: Configure the group number of the ACL entry.

Description: Different group IDs correspond to different ACL parameters.

Item

Range: 1~511

Function: Set the ID of the ACL entry. A maximum of 511 ACL entries can be configured. When multiple ACL entries are configured, they are compared with packets in the ascending order of IDs.

Action

Options: Deny/Redir Port/Mirror Port/Forward

Default: Deny

Function: Configure the action towards a packet that matches the ACL entry.

Deny: Packets matching the entry will be denied.

Redir Port: Packets matching the entry will be forwarded to the specified port. Specify the port in the drop-down list.

Mirror Port: Packets matching the entry will be forwarded to both the destination port and the specified port in the drop-down list.

Control Port

Options: All ports/Any specified port

Function: Select the port on which the ACL takes effect.

Source MAC

Portfolio: {MAC address, MAC subnet mask}

Format: {HHHHHHHHHHHH, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure the source MAC address and subnet mask. If the source MAC address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Destination MAC

Portfolio: {MAC address, MAC subnet mask}

Format: {HHHHHHHHHHHH, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure the destination MAC address and subnet mask. If the destination MAC address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Ethernet Type

Range: 1537~65535

Function: Configure the Ethernet type. If the Ethernet type field of a packet is identical with the value of this parameter, then the condition is met.

Vlan Tag

Range: 1~4093

Function: Configure the VLAN ID. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IPV4 Valid

Options: Disable/Yes/No

Default: Disable

Function: Check whether the received packet is a valid IPv4 packet.

Disable indicates the rule is not used.

Yes indicates the condition is met if the received packet is a valid IPv4 packet.

No indicates the condition is met if the received packet is not a valid IPv4 packet.

Source IP

Portfolio: {IP address, IP subnet mask}

Format: {A.B.C.D, A.B.C.D}

Function: Configure the source IP address and subnet mask. If the source IP address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Destination IP

Portfolio: {IP address, IP subnet mask}

Format: {A.B.C.D, A.B.C.D}

Function: Configure the destination IP address and subnet mask. If the destination IP address and subnet mask of a packet is identical with the value of this parameter, then the condition is met.

Same IP Address

Options: Disable/Yes/No

Default: Disable

Function: Check whether the source IP address of a packet is identical with its destination IP address.

Disable indicates the rule is not used.

No indicates the condition is met if the source IP address of a packet is different from its destination IP address.

Yes indicates the condition is met if the source IP address of a packet is identical with its destination IP address.

Same L4 Port

Options: Disable/Yes/No

Default: Disable

Function: Check whether the source Layer-4 port number of a packet is identical with its destination Layer-4 port number.

Disable indicates the rule is not used.

No indicates the condition is met if the source Layer-4 port number of a packet is different from its destination Layer-4 port number.

Yes indicates the condition is met if the source Layer-4 port number of a packet is identical with its destination Layer-4 port number.

TCP/UDP Valid

Options: Disable/Yes/No

Default: Disable

Function: Check whether the received packet is a TCP/UDP packet.

Disable indicates the rule is not used.

Yes indicates the condition is met if the received packet is a valid TCP/UDP

packet.

No indicates the condition is met if the received packet is not a valid TCP/UDP packet.

TCP Frame Valid

Options: Disable/Yes/No

Default: Disable

Function: Check whether the received packet is a valid TCP frame.

Disable indicates the rule is not used.

Yes indicates the condition is met if the received packet is a valid TCP frame.

No indicates the condition is met if the received packet is not a valid TCP frame.

TCP Sequence Zero

Options: Disable/Yes/No

Default: Disable

Function: Check whether the TCP Sequence field of a packet is 0.

Disable indicates the rule is not used.

No indicates the condition is met if the TCP Sequence field of a packet is not 0.

Yes indicates the condition is met if the TCP Sequence field of a packet is 0.

TCP Header Length

Range: 1~15

Function: Configure the TCP header length. If the corresponding field of a packet is smaller than the value of this parameter, then the condition is met.

Source L4 Port

Range: 1~65535

Function: Configure the source port number for Layer-4 protocol packets. If the corresponding field of a packet is identical with the value, then the condition is met.

Destination L4 Port

Range: 1~65535

Function: Configure the destination port number for Layer-4 protocol packets.

If the corresponding field of a packet is identical with the value, then the condition is met.

TCP Flag

Range: 0~63

Function: Configure the TCP flag. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

TOS/DSCP

Range: 0~255

Function: Configure the service type. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IP Protocol

Range: 0~255

Function: Configure the IP protocol value. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IP Version

Range: 0~255

Function: Configure the value of the IP protocol version plus the header length. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

IP TTL

Range: 0~255

Function: Configure the TTL field. If the corresponding field of a packet is identical with the value of this parameter, then the condition is met.

Note:

It is not necessary to set all parameters, but at least one parameter needs to be set. If only one parameter is required, then leave the other parameters empty.

3. View the ACL.

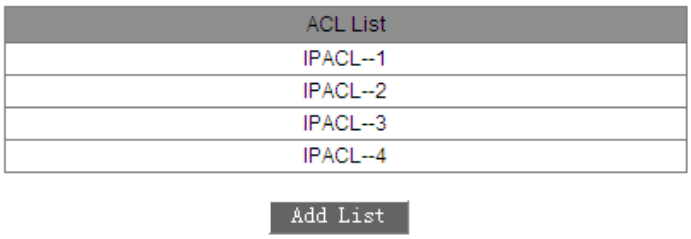

Figure 69 ACL Entries (SICOM3048)

Click an ACL entry in the preceding figure. You can modify or delete the ACL entry, as shown in the following figure.

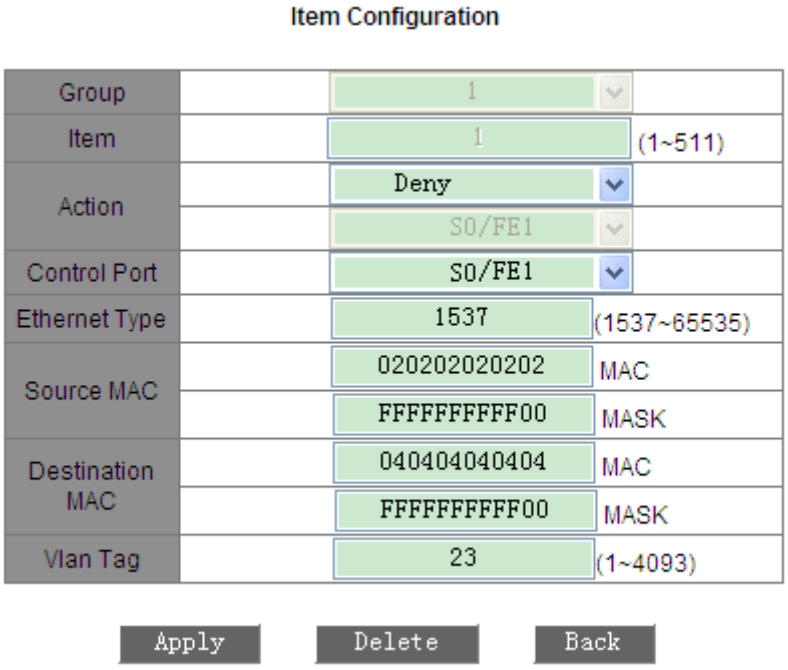

Figure 70 Modifying/Deleting an ACL Entry (SICOM3048)

Click <Apply> for the changes to take effect after modification. You can click <Delete> to delete the ACL entry.

6.9.5 Typical Configuration Example

The following uses SICOM3024P as an example to describe the configuration steps for an ACL entry.

Connect port 2 of the switch. Configure the port to receive packets only from source MAC address 02-02-02-02-02-02 and forward the packets through port 1.

Configuration steps:

1. Set the action to Redir Port and select port 1 in the drop-down list, as shown in Figure 58.
2. Select FE2 in Control Port, as shown in Figure 58.
3. Set the source MAC address to 020202020202 and subnet mask to FFFFFFFFFFFF, as shown in Figure 58.
4. Keep all the other parameters empty.

6.10 ARP

6.10.1 Overview

The Address Resolution Protocol (ARP) resolves the mapping between IP addresses and MAC addresses by the address request and response mechanism. The switch can learn the mapping between IP addresses and MAC addresses of other hosts on the same network segment. It also supports static ARP entries for specifying mapping between IP addresses and MAC addresses. Dynamic ARP entries periodically age out, ensuring consistency between ARP entries and actual applications.

The series switches provide not only Layer 2 switching function, but also the ARP function for resolving the IP addresses of other hosts on the same network segment, enabling the communication between the NMS and managed hosts.

6.10.2 Description

ARP entries fall into dynamic and static ones.

Dynamic entries are generated and maintained based on the exchange of ARP packets. Dynamic entries can expire, be updated by a new ARP packet, or be overwritten by a static ARP entry.

Static entries are manually configured and maintained. They never expire or are overwritten by dynamic ARP entries.

The switch supports up to 512 ARP entries (256 static ones at most).When the

number of ARP entries is larger than 512, new entries automatically overwrite old dynamic entries.

6.10.3 Web Configuration

1. Configure ARP aging time, as shown in the following figure.

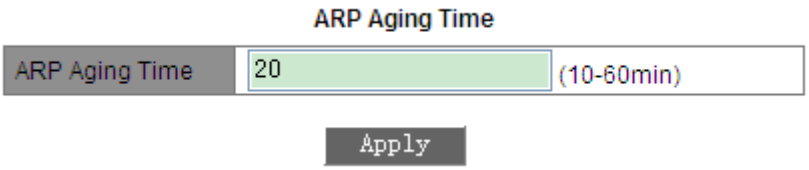

Figure 71 Configuring Aging Time

ARP Aging Time

Range: 10~60 minutes

Default: 20 minutes

Function: Configure ARP aging time.

Description: ARP aging time is the duration from when a dynamic ARP entry is added to the table to when the entry is deleted from the table.

2. Add a static ARP entry, as shown in the following figure.

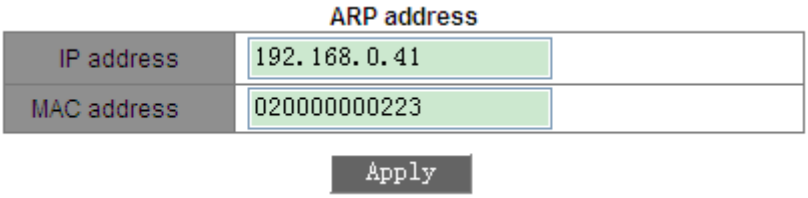

Figure 72 Adding a Static ARP Entry

ARP address

Portfolio: {IP address, MAC address}

Format: {A.B.C.D, HHHHHHHHHHHH} (H is a hexadecimal number.)

Function: Configure a static ARP entry.

Caution:

- The IP address of a static ARP entry must be on the same network segment with the IP address of the switch.

- If the IP address of a static entry is the IP address of the switch, the system automatically maps the IP address to the MAC address of the switch.
- In general, the switch automatically learns ARP entries. Manual configuration is not required.

3. View or delete an ARP entry, as shown in the following figure.

ARP address

Number	IP address	MAC address	Flags
○	192.168.0.23	90-FB-A6-3C-CA-7E	Dynamic
○	192.168.0.41	02-00-00-00-02-23	Static
○	192.168.0.94	00-00-AA-BB-CC-05	Dynamic
○	192.168.0.179	00-00-EE-EE-02-05	Dynamic

Add Delete

Figure 73 ARP Address Table

ARP address

Portfolio: {IP address, MAC address, Flags}

Function: Display ARP entries, including static and dynamic entries.

Operation: Select a static entry in the Number column. Click <Delete> to delete the entry.

Caution:

You cannot delete dynamic ARP entries.

6.11 SNMP

6.11.1 Overview

The Simple Network Management Protocol (SNMP) is a framework using TCP/IP to manage network devices. With the SNMP function, the administrator can query device information, modify parameter settings, monitor device status, and discover network faults.

6.11.2 Implementation

SNMP adopts the management station/agent mode. Therefore, SNMP involves two types of NEs: NMS and agent.

- The Network Management Station (NMS) is a station running SNMP-enabled network management software client. It is the core for the network management of an SNMP network.
- Agent is a process in the managed network devices. It receives and processes request packets from the NMS. When an alarm occurs, the agent proactively reports it to the NMS.

The NMS is the manager of an SNMP network, while the agent is the managed device of the SNMP network. The NMS and agents exchange management packets through SNMP. SNMP involves the following basic operations:

- Get-Request
- Get-Response
- Get-Next-Request
- Set-Request
- Trap

The NMS sends Get-Request, Get-Next-Request, and Set-Request packets to agents to query, configure, and manage variables. After receiving these requests, agents reply with Get-Response packets. When an alarm occurs, an agent proactively reports it to the NMS with a trap message.

6.11.3 Description

This series switches support SNMPv2. SNMPv2 is compatible with SNMPv1. SNMPv1 uses community name for authentication. A community name acts as a password, limiting NMS's access to agents. If the switch does not acknowledged the community name carried by an SNMP packet, the packet is discarded.

SNMPv2 also uses community name for authentication. It is compatible with

SNMPv1, and extends the functions of SNMPv1.

To enable the communication between the NMS and agent, their SNMP versions must match. Different SNMP versions can be configured on an agent, so that it can use different versions to communicate with different NMSs.

6.11.4 MIB

Any managed resource is called managed object. The Management Information Base (MIB) stores managed objects. It defines the hierarchical relationships of managed objects and attributes of objects, such as names, access permissions, and data types. Each agent has its own MIB. The NMS can read/write MIBs based on permissions. The following figure shows the relationships among the NMS, agent, and MIB.

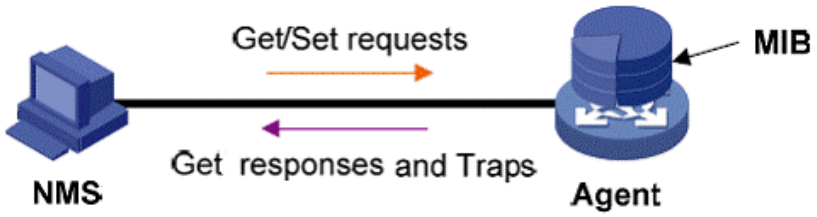

Figure 74 Relationship among NMS, Agent, and MIB

MIB defines a tree structure. The tree nodes are managed objects. Each node has a unique Object Identifier (OID), which indicates the location of the node in the MIB structure. As shown in the following figure, the OID of object A is 1.2.1.1.

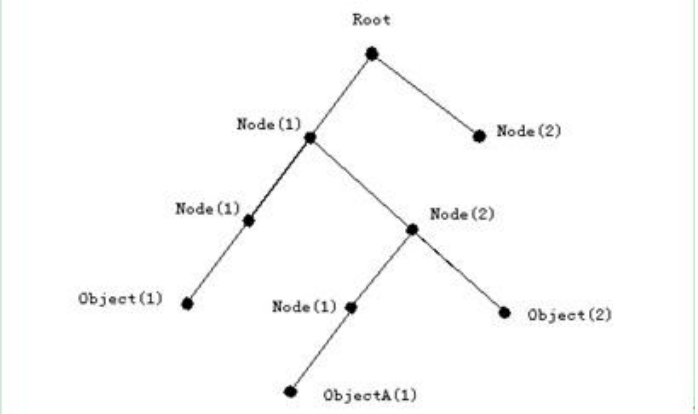

Figure 75 MIB Tree Structure

6.11.5 Web Configuration

1. Enable SNMP, as shown in the following figure.

Figure 76 Enabling SNMP

SNMP Status

Options: Enable/Disable

Default: Enable

Function: Enable or disable SNMP.

2. Configure access rights, as shown in the following figure.

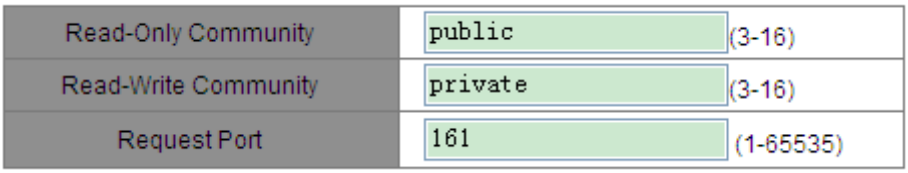

Figure 77 Access Rights Configuration

Read-Only Community

Range: 3~16 characters

Default: public

Function: Configure the name of read-only community.

Description: The MIB information of the switch can be read only if the community name carried by an SNMP packet is identical with that configured on the switch.

Read-Write Community

Range: 3~16 characters

Default: private

Function: Configure the name of read-write community.

Description: The MIB information of the switch can be read and written only if the community name carried by an SNMP packet is identical with that configured on the switch.

Request Port

Range: 1~65535

Default: 161

Function: Configure the number of the port for receiving SNMP requests.

3. Set trap parameters, as shown in the following figure.

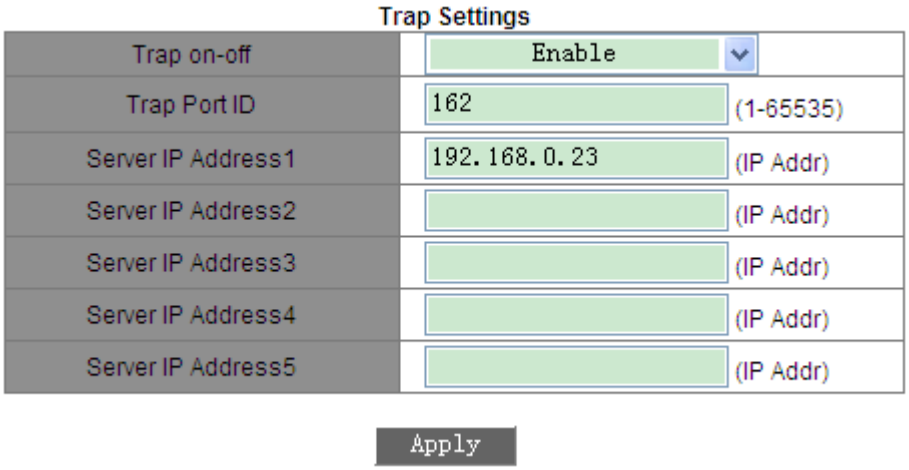

Figure 78 Trap Configuration

Trap on-off

Options: Enable/Disable

Default: Enable

Function: Enable or disable trap sending.

Trap Port ID

Options: 1~65535

Default: 162

Function: Configure the number of port for sending trap messages.

Server IP Address

Format: A.B.C.D

Function: Configure the address of the server for receiving trap messages. You can configure a maximum of five servers.

4. View the IP address of the management server, as shown in the following figure.

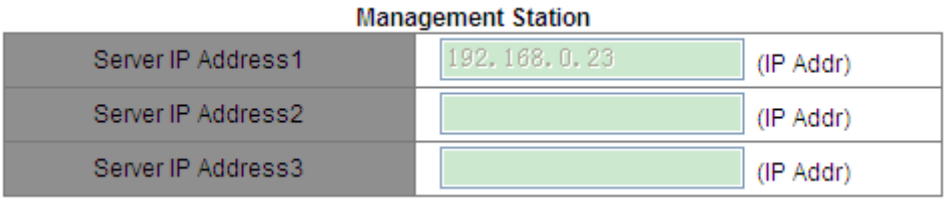

Figure 79 IP Address of Management Server

The IP address of the management server does not need to be configured manually. The switch automatically displays it only if the NMS is running on the server and reads and writes the MIB node information of the device.

6.11.6 Typical Configuration Example

SNMP management server is connected to the switch through Ethernet. The IP address of the management server is 192.168.0.23, and the switch is 192.168.0.2.The NMS monitors and manages the Agent through SNMPv2, and reads and writes the MIB node information of the Agent. When the Agent is faulty, it proactively sends trap messages to the NMS, as shown in the following figure.

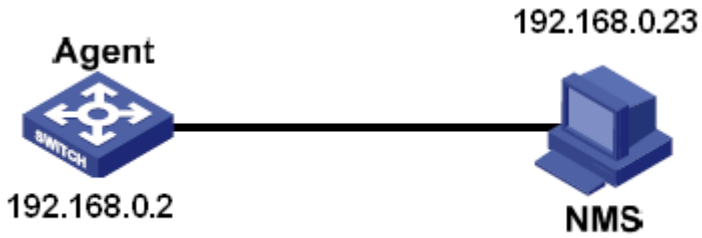

Figure 80 SNMP Configuration Example

Configuration on the Agent:

1. Enable SNMP, as shown in Figure 76.
2. Configure access rights. Set read-only community name to public, read-write community name to private, and request port to 161, as shown in Figure 77.
3. Enable trap sending, set trap port number to 162, and IP address of server to 192.168.0.23, as shown in Figure 78.

To monitor and manage the status of the Agent, run the management software, for example, Kyvision, on the NMS.

For operations on Kyvision, refer to the *Kyvision Operation Manual*.

6.12 DT-Ring

6.12.1 Overview

DT-Ring and DT-Ring+ are Kyland-proprietary redundancy protocols. They enable a network to recover within 50ms when a link fails, ensuring stable and reliable communication.

DT-Ring fall into two types: port-based ring (DT-Port-Ring) and VLAN-based ring (DT-VLAN-Ring).

- DT-Port-Ring: specifies a port to forward or block packets.
- DT-VLAN-Ring: specifies a port to forward or block the packets of a specific VLAN. This allows multiple VLANs on a tangent port, that is, one port is part of different redundant rings based on different VLANs.

DT-Port-Ring and DT-VLAN-Ring cannot be used together.

6.12.2 Concepts

- Master station: One ring has only one master station. The master station sends DT-Ring packets and detects the current status of the ring.
- Master port: On the master station, the first port whose link status changes to up is called the master port. It is in forwarding state.
- Slave port: On the master station, the port whose link status changes to up later is called the slave port. When the ring is closed, the slave port is in blocking state. When a ring is open due to a link or port failure, the status of the slave port changes to forwarding.
- Slave station: A ring can include multiple slave stations. Slave stations listen to and forward DT-Ring packets and report fault information to the master station.

- Backup port: The port for communication between DT rings is called the backup port.
- Master Backup Port: When there are multiple backup ports in a ring, the master backup port is the backup port corresponding to a lager device MAC address and it is in a Forwarding state
- Slave Backup Port: When there are multiple backup ports in a ring, all the other ports (except the master backup port) are slave backup ports and they are in a blocking state.
- Forwarding state: A port can forward and receive data
- Blocking state: A port can receive and forward only DT-Ring packets, but cannot receive or forward any other data packets.

6.12.3 Implementation

1. DT-Ring implementation

The master port on the master station periodically sends DT-Ring packets to detect ring status. If the slave port of the master station receives the packets, the ring is closed; otherwise, the ring is open.

When a ring is closed, the master port of the master station is in a forwarding state, the slave port in a blocking state, and all ring ports of slave stations are in a forwarding state.

A ring may be open in the following cases:

- The master port of the master station fails. The statuses of the slave port on the master station and all ring ports of slave stations change to forwarding.
- The slave port of the master station fails. The statuses of the master port on the master station and all ring ports of slave stations change to forwarding.
- Another port or link fails. The statuses of the two ports of the master station and all up ports of slave stations change to forwarding.

DT-Ring configurations should meet the following conditions:

- All switches in the same ring must have the same domain number.
- Each ring can only have one master station and multiple slave stations.

- Only two ports can be configured on each switch for a ring.
- For two connected rings, backup ports can be configured only in one ring.
- Multiple backup ports can be configured in one ring.
- On a switch, only one backup port can be configured for one ring.
- DT-Port-Ring and DT-VLAN-Ring cannot be configured on one switch at the same time.

The following figure shows the working process of switch A, B, C, D.

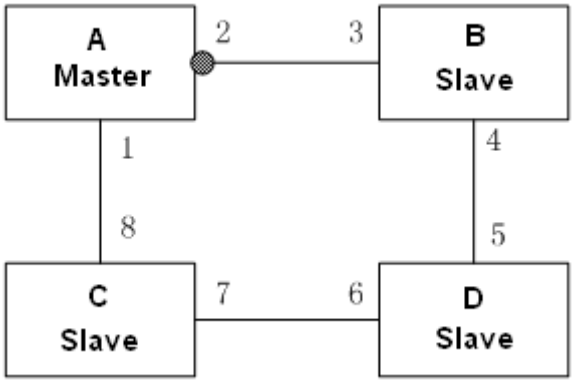

Figure 81 DT-Ring Topology

1. Configure Switch A as the master station, and others as slave stations.
2. Because Ring port 1 on the master station links up first, it is in a Forwarding state, and ring port 2 is in a Blocking state. The two ring ports of each slave are in a Forwarding state.
3. When link CD (connecting Switch C to Switch D) fails, as shown in the following figure, port 2 switches to a Forwarding state, and port 6 and port 7 are in a Blocking state.

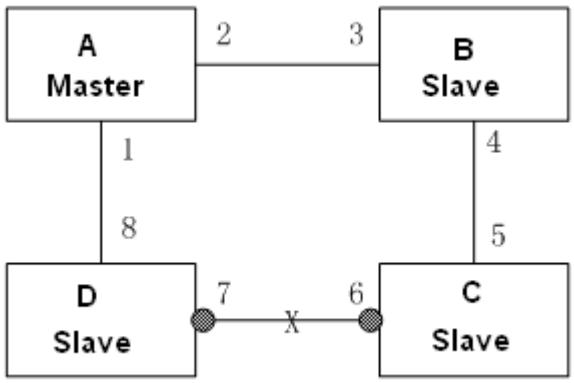

Figure 82 DT-Ring Link Fault

Caution:

The change in link status affects the roles and status of ring ports.

2. DT-Ring+ implementation

DT-Ring+ can provide backup for two DT rings, as shown in the following figure. One backup port is configured respectively on Switch C and Switch D. Which port is the master backup port depends on the MAC addresses of the two ports. If the master backup port or its link fails, the slave backup port will forward packets, preventing loops and ensuring normal communication between redundant rings.

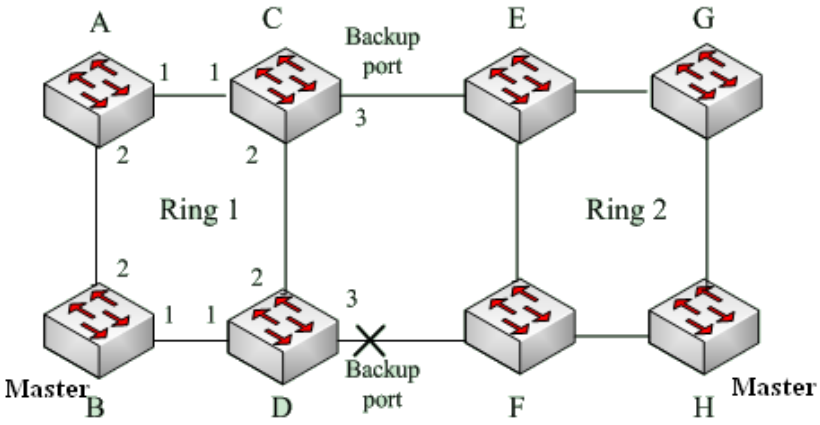

Figure 83 DT-Ring+ Topology

Caution:

The change in link status affects the status of backup ports.

3. DT-VLAN-Ring implementation

DT-VLAN-Ring allows the packets of different VLANs to be forwarded in different paths. Each forwarding path for a VLAN forms a DT-VLAN-Ring. Different DT-VLAN-Rings can have different master stations. As shown in the following figure, two DT-VLAN-Rings are configured.

Ring links of DT-VLAN-Ring10: AB-BC-CD-DE-EA

Ring links of DT-VLAN-Ring20: FB-BC-CD-DE-EF

The two rings are tangent at link BC, CD, and DE. Switch C and Switch D share the same ports in the two rings, but use different logical links based on VLAN.

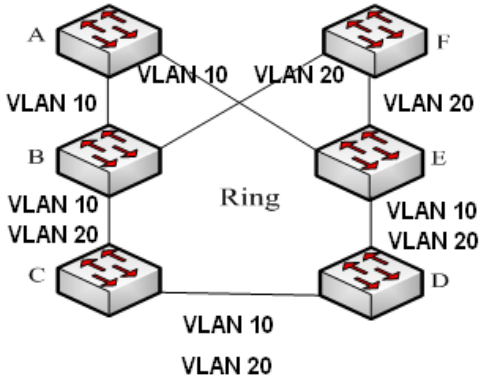

Figure 84 DT-VLAN-Ring

6.12.4 Web Configuration

1. Configure redundant ring mode and ring status detection, as shown in the following figure.

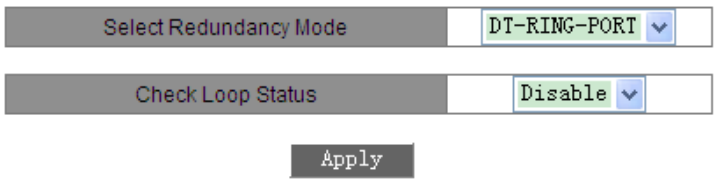

Figure 85 Redundant Ring Mode Configuration

Select Redundancy Mode

Options: DT-RING-PORT/DT-RING-VLAN

Default: DT-RING-PORT

Function: Select the redundancy mode.

Check Loop Status

Options: Disable/Enable

Default: Disable

Function: Enable or disable ring status detection.

Description: After ring status detection is enabled, the switch automatically detects ring status. When a non-ring port receives DT-Ring packets, the port

will be locked. Therefore, use the function with caution.

2. Create a DT ring, as shown in the following figure.

Figure 86 Creating a DT Ring

Click <Add> and configure the DT ring.

3. Configure DT-Ring and DT-VLAN-Ring, as shown in the following figures.

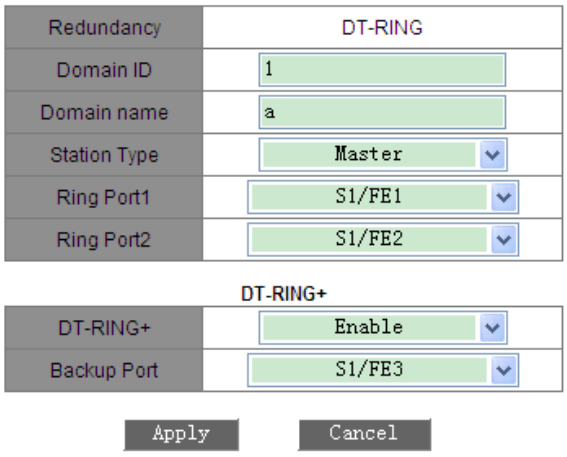

Figure 87 DT-Ring Configuration

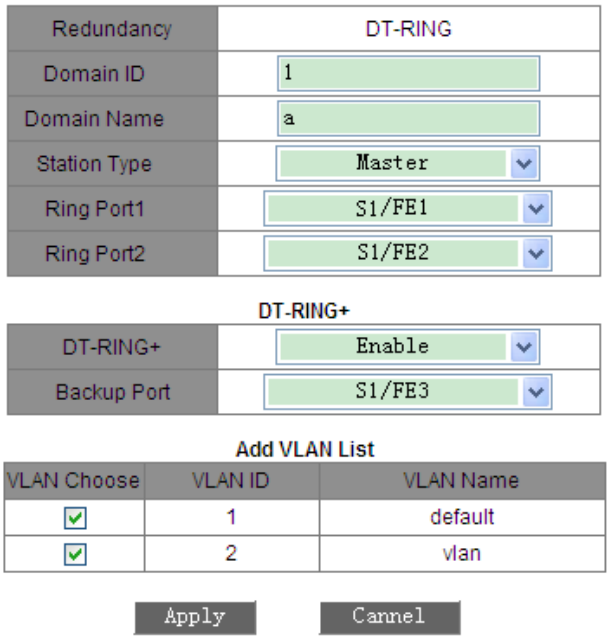

Figure 88 DT-VLAN-Ring Configuration

Redundancy

Forced configuration: DT-RING

Domain ID

Configuration rang: 1~32

Function: The domain ID is used to distinguish different rings. One switch supports a maximum of 16 port-based rings or 8 VLAN-based rings.

Domain Name

Range: 1~31 characters

Function: Configure the domain name.

Station Type

Options: Master/Slave

Default: Master

Function: Select the switch role in a ring.

Ring Port1/Ring Port2

Options: all switch ports

Function: Select two ring ports.

Caution:

- A ring port or backup port cannot be added to a trunk group. A port added to a trunk group cannot be configured as a ring port or backup port.
- A ring port or backup port can be configured as a mirroring source or destination port. A mirroring source or destination port cannot be configured as a ring port or backup port.
- STP cannot be enabled on a ring port or a backup port. An STP-enabled port cannot be configured as a ring port or backup port.

DT-RING+

Options: Enable/Disable

Default: Disable

Function: Enable/disable DT-Ring+.

Backup Port

Options: all switch ports

Function: Set a port to backup port.

Explanation: Enable DT-Ring+ before setting backup port.

Add VLAN List

Options: all created VLANs

Function: Select the VLANs for the ring port.

After parameters are set, the DT-Ring List shows all created rings, as shown in the following figure.

DT-RING List

Domain ID	Station Type	Ring Port(1,2)	DT-RING+ Status	Backup Port	Change times
a-1	master	S1/FE1,S1/FE2	Enable	S1/FE3	0
b-2	slave	S1/FE4,S1/FE5	Enable	S1/FE6	0

Add

Figure 89 DT-Ring List

4. View and modify DT-Ring configuration.

Click a DT-Ring entry in Figure 89 to show its ring configuration and modify it, as shown in the following figure.

DT-RING Configuration

Redundancy	DT-RING
Domain ID	1
Domain Name	a
Station Type	master
Ring Port1	S1/FE1
Ring Port2	S1/FE2

DT-RING+	Enable
Backup Port	S1/FE3

Apply Delete Cancel

Figure 90 DT-Ring Configuration

Click <Apply> for changes to take effect after modification. Click <Delete> to delete the DT-Ring configuration entry.

5. View DT-Ring and port status, as shown in the following figure.

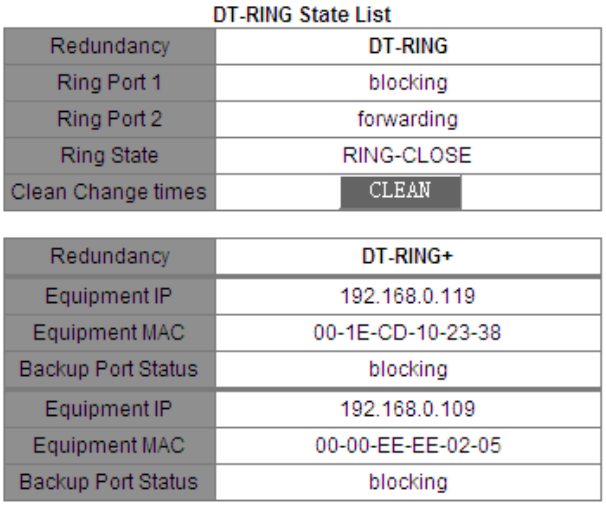

Figure 91 DT-Ring State

6.12.5 Typical Configuration Example

As shown in Figure 83, Switch A, B, C, and D form Ring 1; Switch E, F, G, and H form ring 2. Links CE and DF are the backup links between Ring 1 and Ring 2.

Configuration on Switch A:

1. Domain ID: 1; Domain name: Ring; Ring port: port 1 and port2; Station type: Slave; DT-Ring+: Disable; do not set backup ports, as shown in Figure 87.

Configuration on Switch B:

2. Domain ID: 1; Domain name: Ring; Ring port: port 1 and port 2; Station type: Master; DT-Ring+: Disable; do not set backup ports, as shown in Figure 87.

Configuration on Switch C and Switch D:

3. Domain ID: 1; Domain name: Ring; Ring port: port 1 and port2; Station type: Slave; DT-Ring+: Enable; Backup port: port 3, as shown in Figure 87.

Configuration on Switch E, Switch F, and Switch G:

4. Domain ID: 2; Domain name: Ring; Ring port: port 1 and port2; Station type: Slave; DT-Ring+: Disable; do not set backup ports, as shown in Figure 87.

Configuration on Switch H:

5. Domain ID: 2; Domain name: Ring; Ring port: port 1 and port2; Station type:

Master; DT-Ring+: Disable; do not set backup ports, as shown in Figure 87.

6.13 RSTP/STP

6.13.1 Overview

Standardized in IEEE802.1D, the Spanning Tree Protocol (STP) is a LAN protocol used for preventing broadcast storms caused by link loops and providing link backup. STP-enabled devices exchange packets and block certain ports to prune "loops" into "trees", preventing proliferation and endless loops. The drawback of STP is that a port must wait for twice the forwarding delay to transfer to the forwarding state.

To overcome the drawback, IEEE creates 802.1w standard to supplement 802.1D.IEEE802.1w defines the Rapid Spanning Tree Protocol (RSTP). Compared with STP, RSTP achieves much more rapid convergence by adding alternate port and backup port for the root port and designated port respectively. When the root port is invalid, the alternate port can enter the forwarding state quickly.

6.13.2 Concepts

- Root bridge: serves as the root for a tree. A network has only one root bridge. The root bridge changes with network topology. The root bridge periodically sends BPDU to the other devices, which forward the BPDU to ensure topology stability.
- Root port: indicates the best port for transmission from the non-root bridges to the root bridge. The best port is the port with the smallest cost to the root bridge. A non-root bridge communicates with the root bridge through the root port. A non-root bridge has only one root port. The root bridge has no root port.
- Designated port: indicates the port for forwarding BPDU to other devices or LANs. All ports on the root bridge are designated ports.

- Alternate port: indicates the backup port of the root port. If the root port fails, the alternate port becomes the new root port.
- Backup port: indicates the backup port of the designated port. When a designated port fails, the backup port becomes the new designated port and forwards data.

6.13.3 BPDU

To prevent loops, all the bridges of a LAN calculate a spanning tree. The calculation process involves transmitting BPDUs among devices to determine the network topology. The following table shows the data structure of a BPDU.

Table 6 BPDU

…	Root bridge ID	Root path cost	Designated bridge ID	Designated port ID	Message age	Max age	Hello time	Forward delay	…
…	8 bytes	4 bytes	8 bytes	2 bytes	2 bytes	2 bytes	2 bytes	2 bytes	…

Root bridge ID: priority of the root bridge (2 bytes)+MAC address of the root bridge (6 bytes).

Root path cost: cost of the path to the root bridge.

Designated bridge ID: priority of the designated bridge (2 bytes)+MAC address of the designated bridge (6 bytes).

Designated port ID: port priority+port number.

Message age: duration that a BPDU can be spread in a network.

Max age: maximum duration that a BPDU can be saved on a device. When Message age is larger than Max age, the BPDU is discarded.

Hello time: interval for sending BPDUs.

Forward delay: status change delay (discarding--learning--forwarding).

6.13.4 Implementation

The process for all bridges calculating the spanning tree with BPDUs is as follows:

1. In the initial phase, each port of all devices generates the BPDU with itself as the root bridge; both root bridge ID and designated bridge ID are the ID of the local device; the root path cost is 0; the designated port is the local port.
2. Best BPDU selection: All devices send their own BPDUs and receive BPDUs from other devices. Upon receiving a BPDU, each port compares the received BPDU with its own.

- If the priority of its own BPDU is higher, then the port does not perform any operation.
- If the priority of the received BPDU is higher, then the port replaces the local BPDU with the received one.

Devices compare the BPDUs of all ports and figure out the best BPDU. Principles for comparing BPDUs are as follows:

- The BPDU with a smaller root bridge ID has a higher priority.
- If the root bridge IDs of two BPDUs are the same, their root path costs are compared. If the root path cost in a BPDU plus the path cost of the local port is smaller, then the priority of the BPDU is higher.
- If the root path costs of two BPDUs are also the same, the designated bridge IDs, designated port IDs, and IDs of the port receiving the BPDUs are further compared in order. The BPDU with a smaller ID has a higher priority. The BPDU with a smaller root bridge ID has a higher priority.

3. Selection of the root bridge: The root bridge of the spanning tree is the bridge with the smallest bridge ID.
4. Selection of the root port: A non-root-bridge device selects the port receiving the best BPDU as the root port.
5. BPDU calculation of the designated port: Based on the BPDU of the root

port and the path cost of the root port, a device calculates a designated port BPDU for each port as follows:

- Replace the root bridge ID with the root bridge ID of the BPDU of the root port.
- Replace the root path cost with the root path cost of the root port BPDU plus the path cost of the root port.
- Replace designated bridge ID with the ID of the local device.
- Replace the designated port ID with the ID of the local port.

6. Selection of the designated port: If the calculated BPDU is better, then the device selects the port as the designated port, replaces the port BPDU with the calculated BPDU, and sends the calculated BPDU. If the port BPDU is better, then the device does not update the port BPDU and blocks the port. Blocked ports can receive and forward only RSTP packets, but not other packets.

6.13.5 Web Configuration

1. Enable STP/RSTP, as shown in the following figure.



Figure 92 Enabling RSTP/STP

Protocol Types

Options: Disable/RSTP/STP

Default: Disable

Function: Disable or enable RSTP or STP.

2. Set the time parameters of the network bridge, as shown in the following figure.

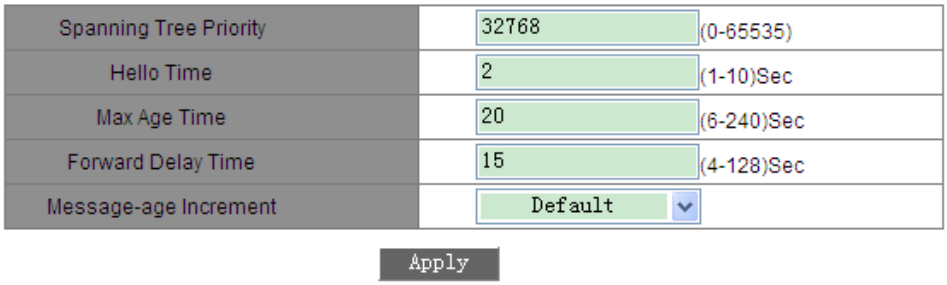

Figure 93 Setting Time Parameters of the Network Bridge

Spanning Tree Priority

Range: 0~65535. The step is 4096.

Default: 32768

Function: Configure the priority of the network bridge.

Description: The priority is used for selecting the root bridge. The smaller the value, the higher the priority.

Hello Time

Range: 1~10s

Default: 2s

Function: Configure the interval for sending BPDU.

Max Age Time

Range: 6~240s

Default: 20s

Description: If the value of message age in the BPDU is larger than the specified value, then the BPDU is discarded.

Forward Delay Time

Range: 4~128s

Default: 15s

Function: Configure status change time from Discarding to Learning or from Learning to Forwarding.

Message-age Increment

Options: Compulsion/Default

Default: Default

Function: Configure the value to be added to message age when a BPDU passes through a network bridge.

Description: In compulsion mode, the value is 1.

In default mode, the value is max(max age time/16, 1).

Forward Delay Time, Max Age Time, and Hello Time shall meet the following requirements:

2 x (Forward Delay Time – 1.0 seconds) ≥ Max Age Time;

Max Age Time ≥ 2 x (Hello Time + 1.0 seconds).

3. Enable RSTP on ports, as shown in the following figure.

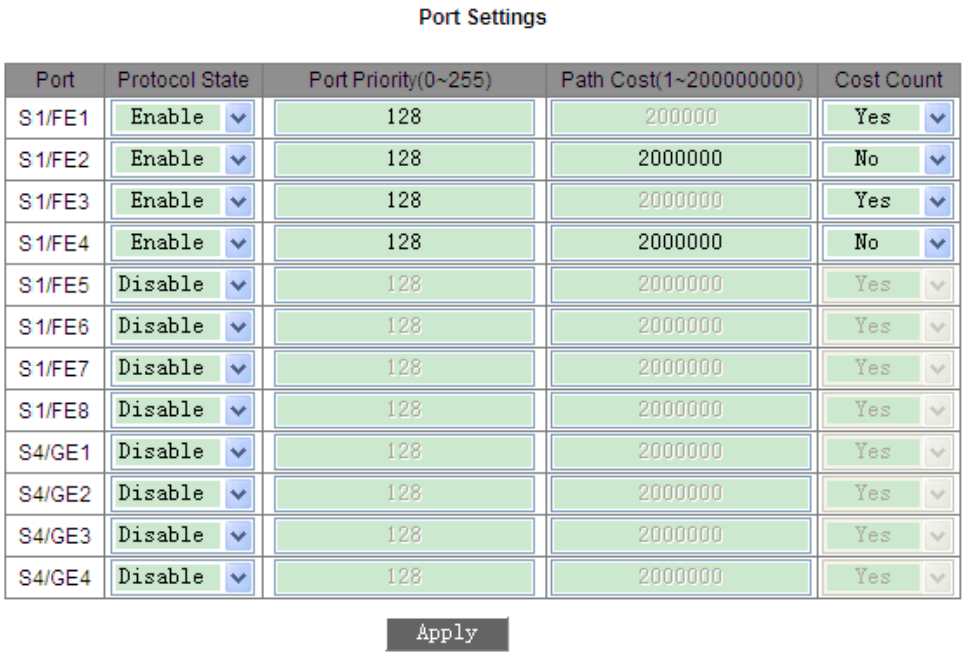

Figure 94 Port Settings

Protocol State

Options: Enable/Disable

Default: Disable

Function: Enable or disable STP on ports.

Caution:

➢ An STP-enabled port cannot be configured as a mirroring source or destination port. STP cannot be enabled on a mirroring source or

destination port.

- An STP-enabled port cannot be added to a trunk group. STP cannot be enabled on a port added to a trunk group.
- An STP-enabled port cannot be configured as a ring port or backup port. STP cannot be enabled on a ring port or a backup port.

Port Priority

Range: 0~255. The step is 16.

Default: 128

Function: Configure the port priority, which determines the roles of ports.

Path Cost

Range: 1~200000000

Default: 2000000 (10M port), 200000 (100M port), 20000 (1000M port)

Description: The path cost of a port is used to calculate the best path. The value of the parameter depends on the bandwidth. The larger the value, the lower the cost. You can change the role of a port by changing the value of the path cost parameter. To configure the value manually, select No for Cost Count.

Cost Count

Range: Yes/No

Default: Yes

Description: Yes indicates the path cost of the port adopts the default value. No indicates you can configure the path cost.

6.13.6 Typical Configuration Example

The priorities of Switch A, B, and C are 0, 4096, and 8192. Path costs of links are 4, 5, and 10, as shown in the following figure.

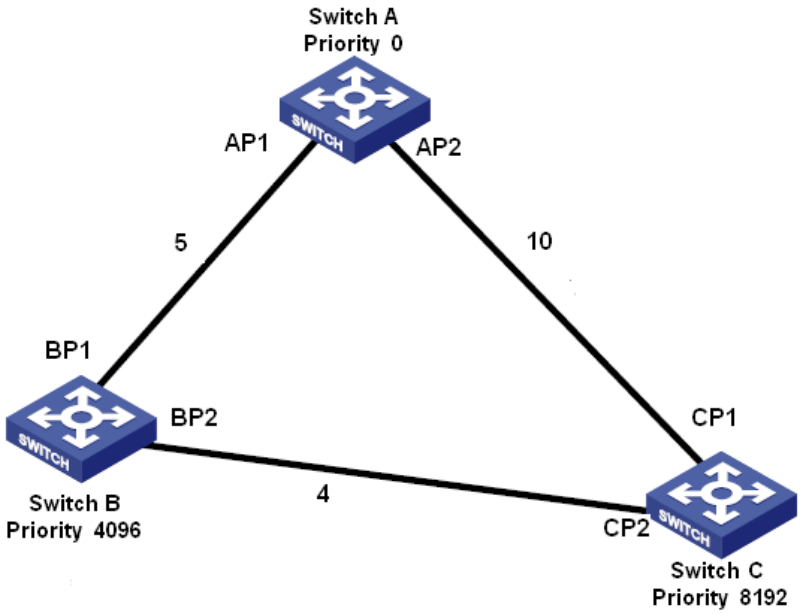

Figure 95 RSTP Configuration Example

Configuration on Switch A:

1. Set priority to 0 and time parameters to default values, as shown in Figure 93.
2. Set the path cost of port 1 to 5 and that of port 2 to 10, as shown in Figure 94.

Configuration on Switch B:

1. Set priority to 4096 and time parameters to default values, as shown in Figure 93.
2. Set the path cost of port 1 to 5 and that of port 2 to 4, as shown in Figure 94.

Configuration on Switch C:

1. Set priority to 8192 and time parameters to default values, as shown in Figure 93.
2. Set the path cost of port 1 to 10 and that of port 2 to 4, as shown in Figure 94.

- The priority of Switch A is 0 and its root ID is the smallest. Therefore, Switch A is the root bridge.
- The path cost from AP1 to BP1 is 5 and that from AP2 to BP2 is 14.

Therefore, BP1 is the root port.

- The path cost from AP1 to CP2 is 9 and that from AP2 to CP1 is 10. Therefore, CP2 is the root port and BP2 is the designated port.

6.14 RSTP/STP Transparent Transmission

6.14.1 Overview

RSTP is compliant with IEEE standard. DT-Ring is the private redundant protection protocol of Kyland, but cannot coexist with RSTP on the same network. To solve this problem, Kyland developed the RSTP/STP transparent transmission function. The function enables the switch to keep other redundant protocols while transparently transmitting RSTP packets, meeting industrial communication requirements.

Switches running other redundant protocols can receive and forward RSTP packets only if the RSTP transparent transmission function is enabled. RSTP transparent transmission-enabled switches can be regarded as a transparent link.

As shown in the following figure, Switch A, Switch B, Switch C, and Switch D form a DT ring. The transparent transmission function is enabled on these four switches, so that Switch E and Switch F can receive RSTP packets from each other.

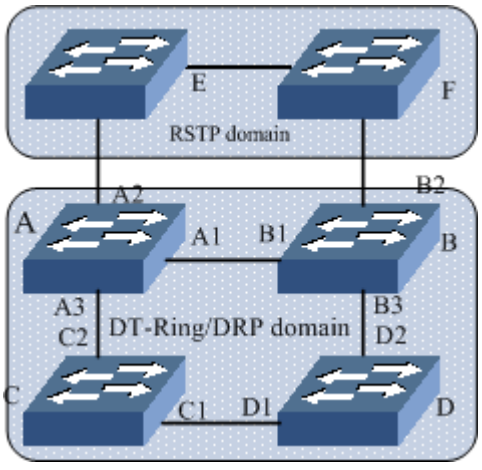

Figure 96 RSTP Transparent Transmission

6.14.2 Web Configuration

Configure RSTP transparent transmission on ports, as shown in the following figure.

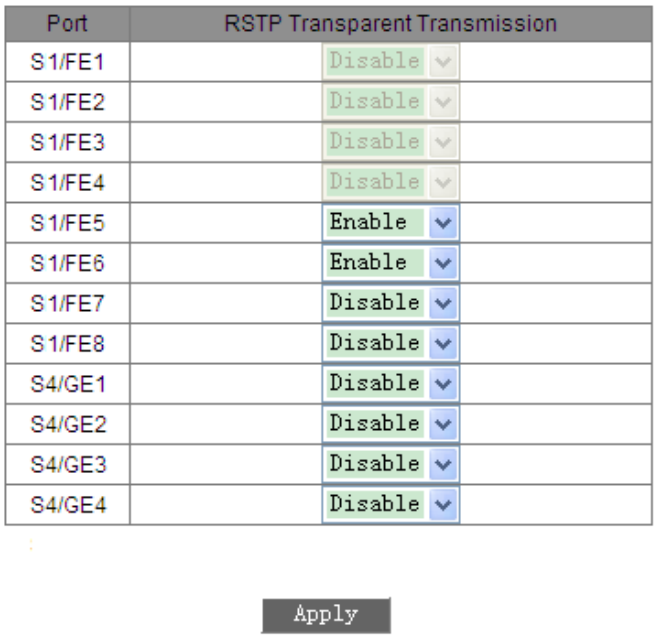

Figure 97 RSTP Transparent Transmission Configuration

RSTP Transparent Transmission

Options: Enable/Disable

Default: Disable

Function: Enable or disable RSTP transparent transmission on ports.

Caution:

RSTP transparent transmission cannot be enabled on an RSTP-enabled port.

6.14.3 Typical Configuration Example

As shown in Figure 96, Switch A, Switch B, Switch C, and Switch D form a DT ring, and Switch E and Switch F form an RSTP ring. In the RSTP ring, the entire DT ring serves as a transparent link to forward RSTP packets of Switch E and Switch F.

➢ Configure Switch A, Switch B, Switch C, and Switch D as a DT ring. For

details, see section 6.12 DT-Ring.

- Enable RSTP on the involved ports of Switch E and Switch F, as shown in Figure 92 and Figure 94.
- Enable RSTP transparent transmission on ports A1, A2, A3, B1, B2, B3, C1, C2, D1, and D2, as shown in Figure 97.

6.15 QoS

6.15.1 Overview

Quality of Service (QoS) enables differentiated services based on different requirements under limited bandwidths by means of traffic control and resource allocation on IP networks. QoS tries to satisfy the transmission of different services to reduce network congestion and minimize congestion's impact on the services of high priority.

QoS mainly involves service identification, congestion management, and congestion avoidance.

Service identification: Objects are identified based on certain match rules. For example, the objects can be priority tags carried by packets, priority mapped by ports and VLANs, or priority information mapped by quintuples. Service identification is the precondition for QoS.

Congestion management: This is mandatory for solving resource competition. Congestion management caches packets in queues and determines the sequence of packet forwarding based on a certain scheduling algorithm, achieving preferential forwarding for key services.

Congestion avoidance: Excessive congestion may result in damage on network resources. Congestion avoidance monitors the use of network resources. When detecting increasing congestion, the function adopts proactive packet discarding and tunes traffic volume to solve the overload.

6.15.2 Principle

Each port of the switch has four cache queues, from 0 to 3 in priority ascending order.

You can configure the mapping between priority and queues. When a frame reaches the port, the switch determines the queue for the frame according to the information in the frame header. The switch supports five queue mapping modes for priority identification: highest priority, port-based, DIFF, TOS/DIFF, and 802.1p.

- If the highest priority is configured on a port, then packets to be forwarded are put in queue 3.
- If port-based queue mapping mode is configured on a port, received packets are queued according to the default priority of the port. The mapping between the default priority and queues is consistent with that between 802.1p priority and queues.
- The DIFF value relies on the DSCP in packets while the TOS/DIFF value depends on the TOS/DSCP in packets. You can configure the mapping between priority and queues.
- When a packet is tagged, the 802.1p value depends on the priority of 802.1Q in the packet. When a packet is untagged, the 802.1p value depends on the default priority of the port. You can configure the mapping between the 802.1p priority and queues.

When forwarding data, a port uses a scheduling mode to schedule the data of four queues and the bandwidth of each queue. The switch supports two scheduling modes: Weighted Round Robin (WRR), Hq-preempt mode, and STRICT mode.

- WRR mode schedules data flows based on weight ratio. Queues obtain their bandwidths based on their weight ratio. WRR prioritizes high-weight ratio queues. More bandwidths are allocated to queues with higher weight ratio.

- Hq-preempt mode forwards high-priority packets preferentially. It is mainly used for transmitting sensitive signals. If a frame enters the high-priority queue, the switch stops scheduling the low-priority queues and starts to process the data of the high-priority queue. When the high-priority queue contains no data, the switch starts to process the data of the queue with lower priority.
- STRICT mode forwards high-priority packets preferentially. It is mainly used for transmitting sensitive signals. If a frame enters the high-priority queue, the switch stops scheduling the low-priority queues and starts to process the data of the high-priority queue. When the high-priority queue contains no data, the switch starts to process the data of the queue with lower priority.

6.15.3 Web Configuration (SICOM3024P)

1. Configure the QoS mode, as shown in the following figure.

Figure 98 QoS Mode (SICOM3024P)

Qos Mode

Options: Disable/WRR/STRICT

Default: STRICT

Function: Configure the scheduling mode of a port.

2. Configure the queue weight ratio, as shown in the following figure.

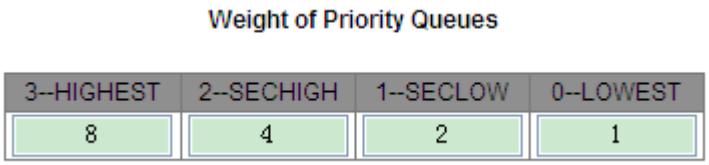

Figure 99 Configuring Queue Weight Ratio (SICOM3024P)

{3-HIGHEST, 2-SECHIGH, 1-SECLOW, 0-LOWEST}

Range: {1~55, 1~55, 1~55, 1~55}

Default: {8, 4, 2, 1}

Function: Configure the queue weight ratio by obeying the following rules: Weight of queue 3 ≥ 2 × Weight of queue 2, Weight of queue 2 ≥ 2 × Weight of queue 1, Weight of queue 1 ≥ 2 × Weight of queue 0

3. Configure QoS port priority mapping mode, as shown in the following figure.

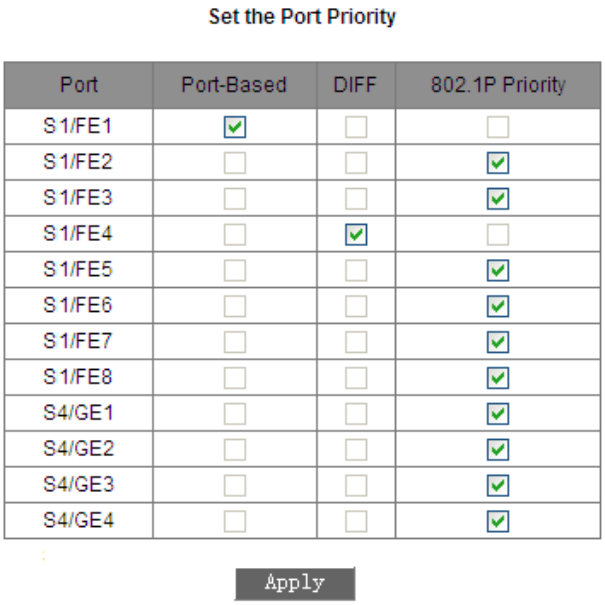

Figure 100 Setting QoS Port Priority Mapping Mode (SICOM3024P)

Set the Port Priority

Options: Port-Based/DIFF/802.1P Priority

Default: 802.1P Priority

Function: Configure port priority mapping mode.

Description: Only one priority mapping mode can be selected for each port.

4. Configure port-based/ 802.1p priority-queue mapping.

The queue mapping of the port-based mode is consistent with that of 802.1p priority mode. If you want to configure either of the two modes, set parameters in the 802.1p priority mapping table, as shown in the following figure.

Click <802.1p Priority> in Figure 98. The following page is displayed.

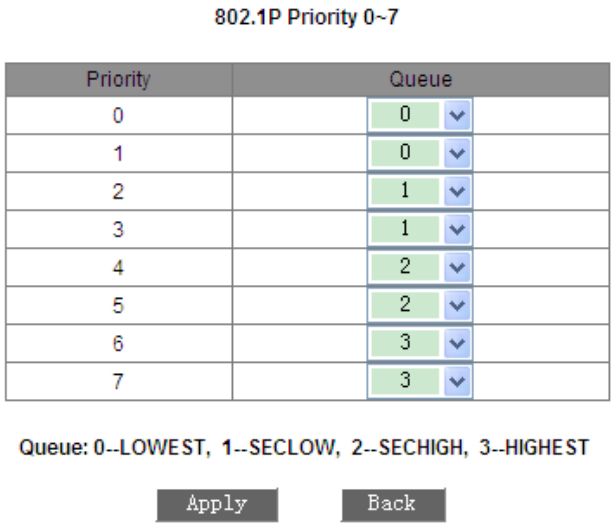

Figure 101 802.1p Priority-Queue Mapping (SICOM3024P)

802.1P Priority

Portfolio: {Priority, Queue}

Range: {0~7, 0~3}

Default: Priority 0 and 1 are mapped to queue 0; priority 2 and 3 are mapped to queue 1.

Priority 4 and 5 are mapped to queue 2; priority 6 and 7 are mapped to queue 3.

Function: Configure the mapping between 802.1p priority and queue.

5. Configure DSCP priority-queue mapping.

Click <DSCP Priority> in Figure 98 to configure the DSCP priority-queue mapping, as shown in the following figure.

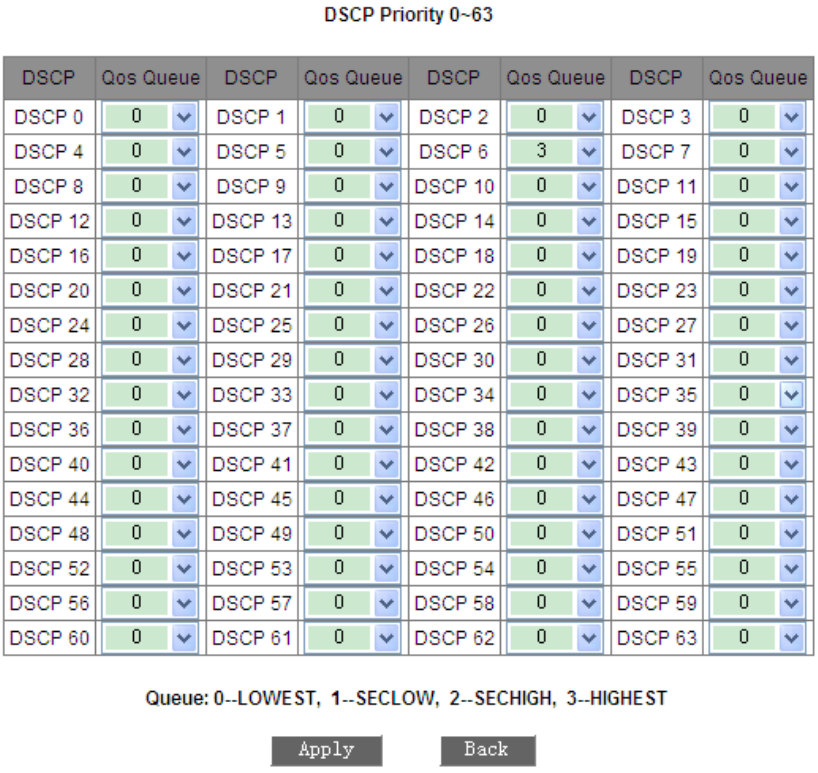

Figure 102 DSCP Priority-Queue Mapping (SICOM3024P)

DSCP Priority

Portfolio: {DSCP, Qos Queue}

Range: {0~63, 0~3}

Default: Priority 0 to 63 is mapped to queue 0.

Function: Configure the mapping between DSCP priority and queue.

6.15.4 Web Configuration (SICOM3048)

1. Configure the QoS mode, as shown in the following figure.

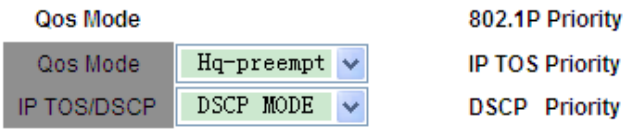

Figure 103 QoS Mode (SICOM3048)

Qos Mode

Options: Disable/WRR/Hq-preempt

Default: Hq-preempt

Function: Configure the scheduling mode of a port.

IP TOS/DSCP

Options: DSCP MODE/IPTOS MODE

Default: DSCP MODE

Function: If TOS/DIFF is selected, you need to select IP TOS or DSCP in this parameter. DSCP mode indicates the DSCP priority-queue mapping mode and IP TOS mode indicates the IP TOS priority-queue mapping mode.

2. Configure the queue weight ratio, as shown in the following figure.

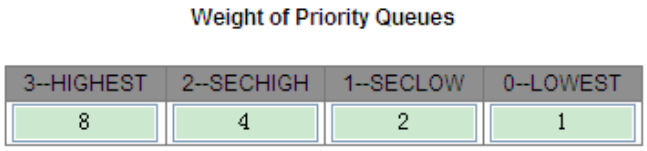

Figure 104 Configuring Queue Weight Ratio (SICOM3048)

{3-HIGHEST, 2-SECHIGH, 1-SECLOW, 0-LOWEST}

Range: {1~55, 1~55, 1~55, 1~55}

Default: {8, 4, 2, 1}

Function: Configure the queue weight ratio by obeying the following rules: Weight of queue 3 ≥ 2 × Weight of queue 2, Weight of queue 2 ≥ 2 × Weight of queue 1, Weight of queue 1 ≥ 2 × Weight of queue 0

3. Configure QoS port priority mapping mode, as shown in the following figure.

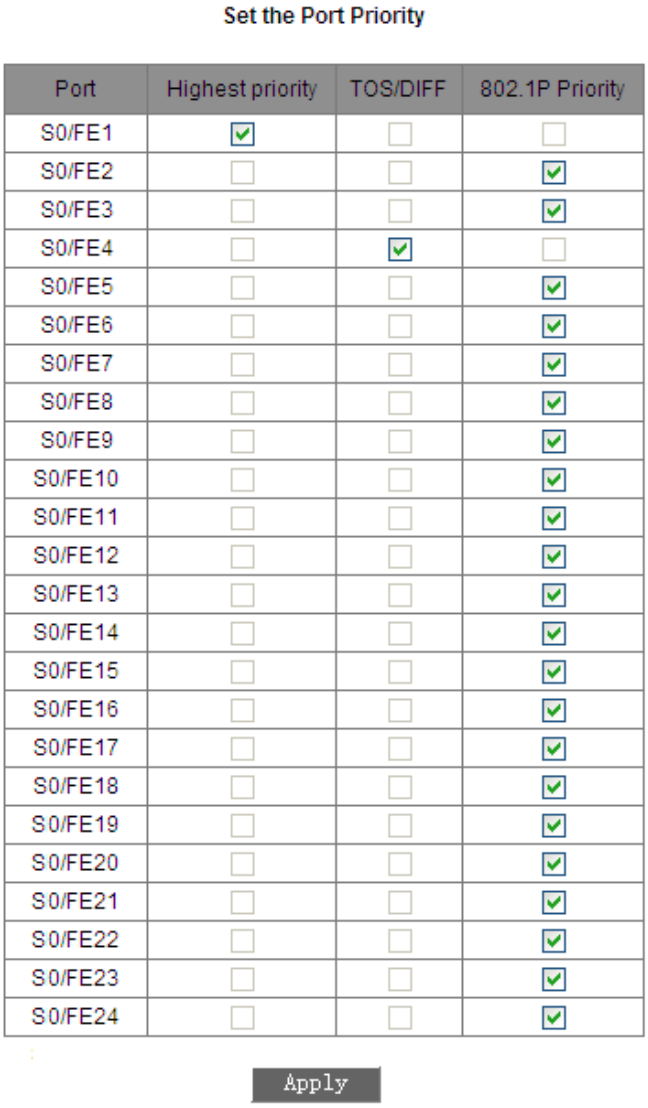

Figure 105 Setting QoS Port Priority Mapping Mode (SICOM3048)

Set the Port Priority

Options: Highest priority/TOS/DIFF/802.1P Priority

Default: 802.1P Priority

Function: Configure port priority mapping mode.

Description: Only one priority mapping mode can be selected for each port.

4. Configure 802.1p priority-queue mapping.

Click <802.1P Priority> in Figure 103. The following page is displayed.

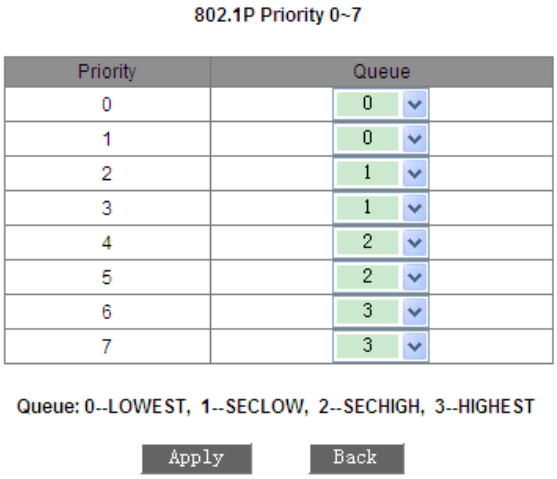

Figure 106 802.1p Priority-Queue Mapping (SICOM3048)

802.1P Priority

Portfolio: {Priority, Queue}

Range: {0~7, 0~3}

Default: Priority 0 and 1 are mapped to queue 0; priority 2 and 3 are mapped to queue 1.

Priority 4 and 5 are mapped to queue 2; priority 6 and 7 are mapped to queue 3.

Function: Configure the mapping between 802.1p priority and queue.

5. Configure IP TOS priority-queue mapping.

Click <IP TOS Priority> in Figure 103 to configure the IP TOS priority-queue mapping, as shown in the following figure.

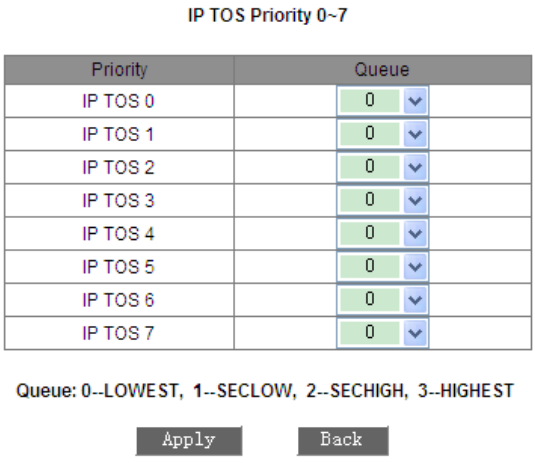

Figure 107 IP TOS Priority-Queue Mapping (SICOM3048)

IP TOS Priority

Portfolio: {Priority, Queue}

Range: {0~7, 0~3}

Default: Priority 0 to 7 is mapped to queue 0.

Function: Configure the mapping between IP TOS priority and queue.

6. Configure DSCP priority-queue mapping.

Click <DSCP Priority> in Figure 103 to configure the DSCP priority-queue mapping, as shown in the following figure.

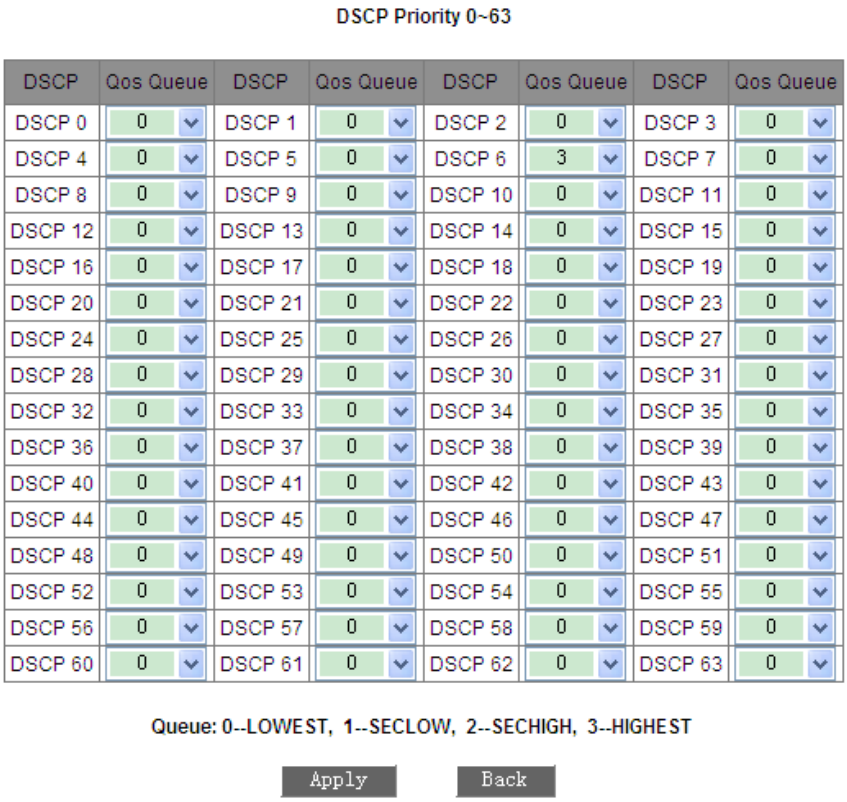

Figure 108 DSCP Priority-Queue Mapping (SICOM3048)

DSCP Priority

Portfolio: {DSCP, Qos Queue}

Range: {0~63, 0~3}

Default: Priority 0 to 63 is mapped to queue 0.

Function: Configure the mapping between DSCP priority and queue.

6.15.5 Typical Configuration Example

The following uses SICOM3024P as an example to describe QoS configuration.

As shown in the following figure, port 1, port 2, port 3, and port 4 forward packets to port 5. The port-based mode is configured on port 1. The default priority of port 1 is 6. Packets from port 1 are mapped to queue 3. The 802.1p priority carried by packets from port 2 is 2, which is mapped to queue 1. The 802.1p priority carried by packets from port 3 is 4, which is mapped to queue 2. The DSCP priority carried by packets from port 4 is 6, which is mapped to queue 3. Port 5 adopts the WRR scheduling mode.

Configuration steps:

1. Select WRR for QoS mode and keep the default values for the WRR queue weight ratio, as shown in Figure 98 and Figure 99.
2. Configure highest priority-queue mapping on port 1, 802.1p on port 2 and port 3, and DIFF on port 4, as shown in Figure 100.
3. Configure 802.1p priority 6, 2, and 4 to map to queue 3, 1, and 2 respectively, as shown in Figure 101.
4. Configure DSCP priority 6 to map to queue 3, as shown in Figure 102.

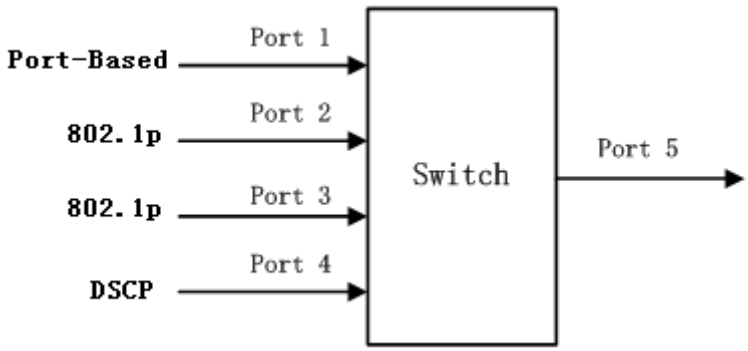

Figure 109 QoS Configuration Example

Packets received through port 1 and port 4 are put into queue 3; packets received through port 2 are put into queue 1; packets received through port 3 are put into queue 2. According to the mapping between queues and weights, the weight of queue 1 is 2, the weight of queue 2 is 4, and the weight of queue

3 is 8. As a result, the packets in queue 1 enjoy 2/(2+4+8) bandwidth, those in queue 2 enjoy 4/(2+4+8) bandwidth, and those in queue 3 enjoy 8/(2+4+8) bandwidth. Packets received through port 1 and port 4 are put into queue 3 and forwarded according to the FIFO mechanism. The total bandwidth ratio of port 1 and port 4 is 8/(2+4+8).

6.16 MAC Address Aging Time

6.16.1 Overview

Switch ports can learn addresses automatically. The switch adds the source addresses (source MAC address, switch port number) of received frames to the address table. Aging time starts from when a dynamic MAC address is added to the MAC address table. If no port receives a frame with the MAC address within one to two times the aging time, then the switch deletes the entry of the MAC address from the dynamic forwarding address table. Static MAC address table does not involve the concept of aging time.

6.16.2 Web Configuration

Configure MAC address aging time, as shown in the following figure.

Figure 110 MAC Address Aging Time

MAC Aging Time

Range: 15~3600 seconds

Default: 300 seconds

Description: You can adjust the aging time as required.

6.17 LLDP

6.17.1 Overview

The Link Layer Discovery Protocol (LLDP) provides a standard link layer discovery mechanism. It encapsulates device information such as the capability, management address, device identifier, and interface identifier in a Link Layer Discovery Protocol Data Unit (LLDPDU), and advertises the LLDPDU to its directly connected neighbors. Upon receiving the LLDPDU, the neighbors save this information to MIB for query and link status check by the NMS.

6.17.2 Web Configuration

View LLDP connection information, as shown in the following figure.

LLDP Information

Local Port	Remote Port	Neighbor IP	Neighbor MAC
1/1	0/1	192.168.0.109	00:00:ee:ee:02:05

Figure 111 LLDP Information

In LLDP information, you can view the information about neighboring devices, including port number of the neighboring device connected to the local switch, IP address and MAC address of the neighboring device.

Caution:

To display LLDP information, LLDP must be enabled on the two connected devices. LLDP is a link-layer detection protocol enabled by default.

6.18 SNTP

6.18.1 Overview

The Simple Network Time Protocol (SNTP) synchronizes time between server and client by means of requests and responses. As a client, the switch

synchronizes time from the server according to packets of the server. In this case, a maximum of four SNTP servers can be configured, but only one can be active at a time. The switch can also serve as the SNTP server to provide time synchronization for clients.

The SNTP client sends a request to each server one by one through unicast. The server that responds first is in an active state. The other servers are in an inactive state.

Caution:

To synchronize time by SNTP, there must be an active SNTP server.

6.18.2 Web Configuration

1. Enable SNTP. Select the server and set related parameters, as shown in the following figure.

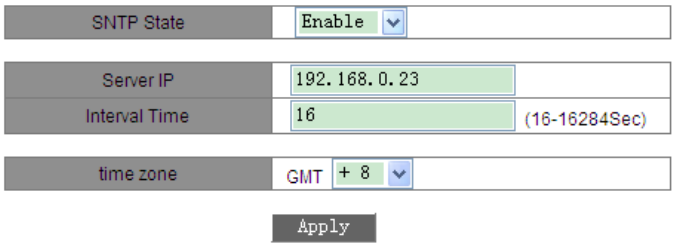

Figure 112 SNTP Configuration

SNTP State

Options: Enable/Disable

Default: Disable

Function: Enable/Disable SNTP.

Server IP

Format: A.B.C.D

Function: Set the IP address of the SNTP server. The client synchronizes time from the server based on the packets sent by the server.

Interval Time

Range: 16~16284s

Function: Configure the interval for sending synchronization requests from the

SNTP client to the server.

time zone

Options: 0, +1, +2, +3, +4, +5, +6, +7, +8, +9, +10, +11, +12, +13, -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12

Default: 0

Function: Select the local time zone.

2. Select the synchronization mode between the client and the server, as shown in the following figure.

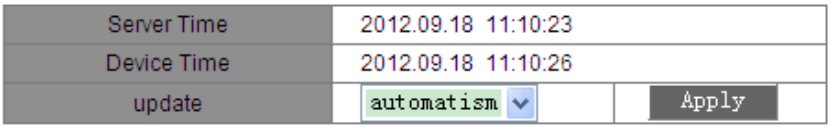

Figure 113 Time Synchronization Mode

Server Time

Function: Display the latest time obtained from the server.

Device Time

Function: Display the time of the device.

update

Options: automatism/manual

Default: automatism

Function: Select the time synchronization mode between the device and the server.

3. View SNTP configuration, as shown in the following figure. You can click the check box of an SNTP server and click <Delete> to delete it.

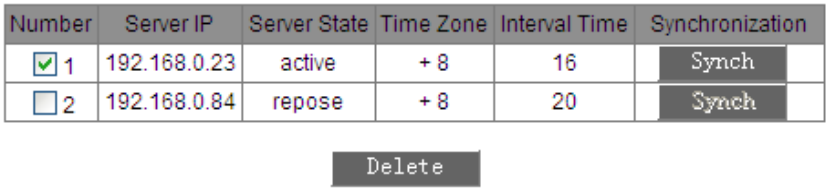

Figure 114 SNTP Configuration

Server State

Options: active/repose

Description: The active server provides SNTP time for the client. Only one server can be in active state at a time.

Synchronization

To synchronize time manually, click <Synch>.

4. Configure the switch as the SNTP server, as shown in the following figure.

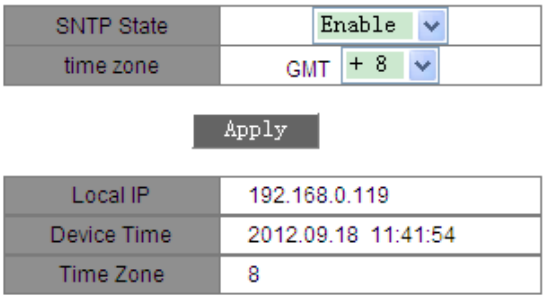

Figure 115 Configuring the Switch as the SNTP Server

SNTP State

Options: Enable/Disable

Default: Disable

Function: Enable or disable the SNTP server function.

time zone

Options: 0, +1, +2, +3, +4, +5, +6, +7, +8, +9, +10, +11, +12, +13, -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, and -12

Default: +8

Function: Select the server time zone.

6.19 Alarm

6.19.1 Overview

This series switches support the following types of alarms:

- Power alarm: If the function is enabled, then an alarm will be generated for a single power input.
- Temperature alarm: If the function is enabled, then an alarm will be generated when the temperature is equal to or lower than the lower limit or equal to or higher than the higher limit.

- IP/MAC conflict alarm: If the function is enabled, then an alarm will be generated for an IP/MAC conflict.
- Port alarm: If the function is enabled, then an alarm will be generated for the port in link down state.
- Ring alarm: If the function is enabled, then an alarm will be generated for an open ring.

Caution:

Only the master station of a DT ring supports the ring alarm function.

6.19.2 Web Configuration

1. Set alarm parameters, as shown in the following figures.

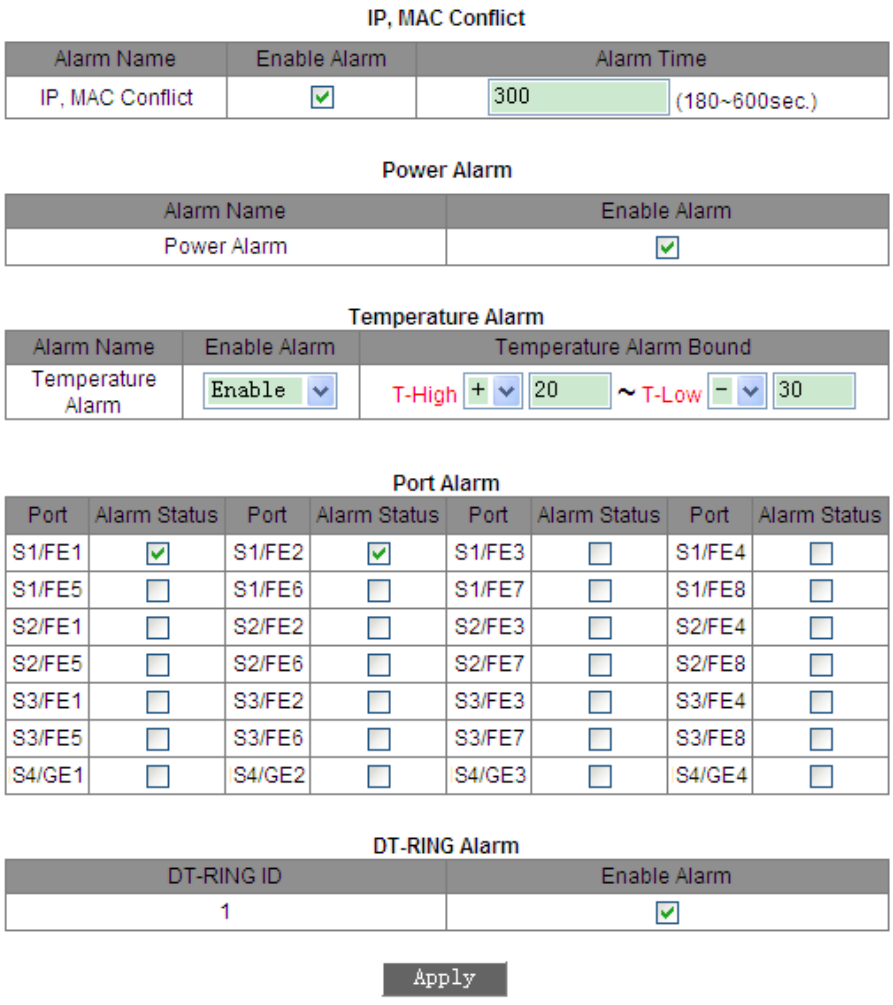

Figure 116 Alarm Setting (SICOM3024P)

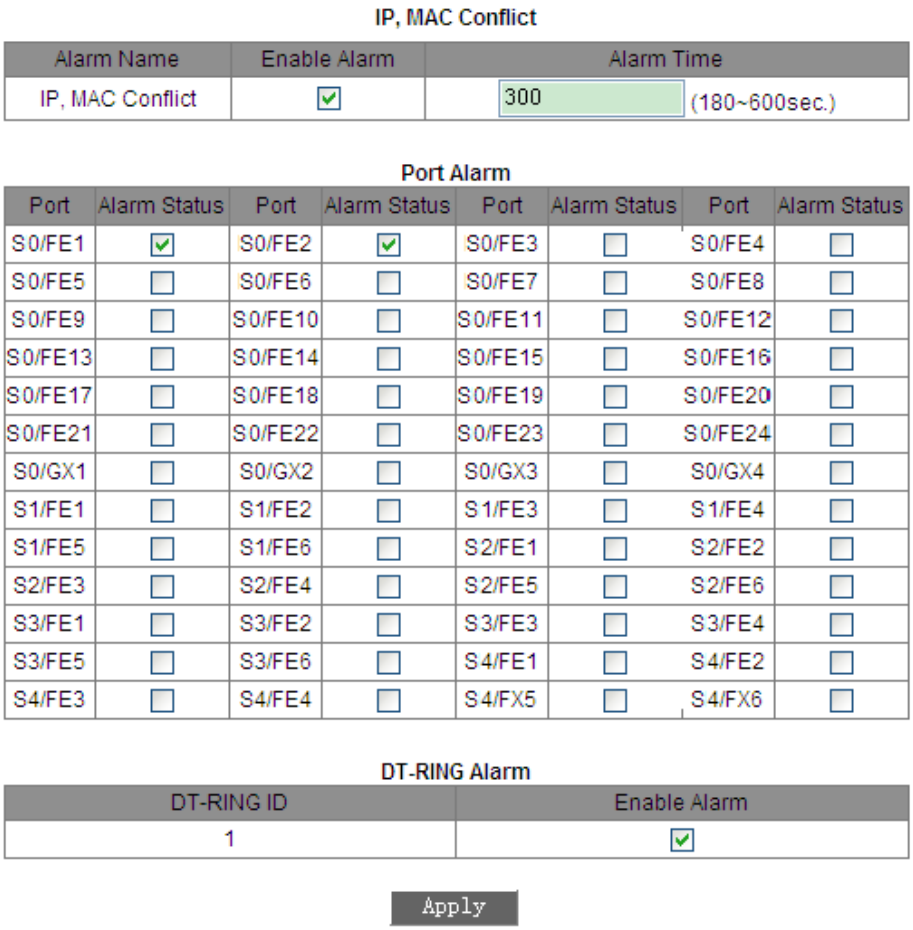

Figure 117 Alarm Setting (SICOM3048)

IP, MAC Conflict

Options: select/deselect

Default: select

Function: Enable or disable IP/MAC conflict alarm.

Alarm Time

Range: 180~600s

Default: 300s

Function: Configure the interval for detecting IP/MAC conflicts.

Power Alarm

Options: select/deselect

Default: select

Function: Enable or disable power alarm.

Temperature Alarm (Alarm Enable, T-High~T-Low)

Range: {Enable/Disable, +150℃~-55℃}

Default: {Disable, +80℃~-30℃}

Function: Enable or disable temperature alarm and configure the higher and lower limits.

Port Alarm

Options: select/deselect

Default: deselect

Function: Enable or disable port alarm.

DT-RING Alarm

Options: select/deselect

Default: deselect

Function: Enable or disable the DT-Ring alarm function.

2. After the alarm function is enabled, the alarm information is as follows:

Basic Vision

Alarm Title	Alarm Status
power	WARN
temperature	HIGH
IP Alarm	Alarm
MAC Alarm	Normal

Port Alarm

Port	Alarm Status	Port	Alarm Status	Port	Alarm Status	Port	Alarm Status
S1/FE1	Link Up	S1/FE2	Link Down	S1/FE3	-	S1/FE4	-
S1/FE5	-	S1/FE6	-	S1/FE7	-	S1/FE8	-
S2/FE1	-	S2/FE2	-	S2/FE3	-	S2/FE4	-
S2/FE5	-	S2/FE6	-	S2/FE7	-	S2/FE8	-
S3/FE1	-	S3/FE2	-	S3/FE3	-	S3/FE4	-
S3/FE5	-	S3/FE6	-	S3/FE7	-	S3/FE8	-
S4/GE1	-	S4/GE2	-	S4/GE3	-	S4/GE4	-

DT-RING Alarm

DT-RING ID	Alarm Status
1	Ring Open

Figure 118 Alarm Information (SICOM3024P)

Basic Vision

Alarm Title	Alarm Status
IP Alarm	Alarm
MAC Alarm	Normal

Port Alarm

Port	Alarm Status	Port	Alarm Status	Port	Alarm Status	Port	Alarm Status
S0/FE1	Link Up	S0/FE2	Link Down	S0/FE3	-	S0/FE4	-
S0/FE5	-	S0/FE6	-	S0/FE7	-	S0/FE8	-
S0/FE9	-	S0/FE10	-	S0/FE11	-	S0/FE12	-
S0/FE13	-	S0/FE14	-	S0/FE15	-	S0/FE16	-
S0/FE17	-	S0/FE18	-	S0/FE19	-	S0/FE20	-
S0/FE21	-	S0/FE22	-	S0/FE23	-	S0/FE24	-
S0/GX1	-	S0/GX2	-	S0/GX3	-	S0/GX4	-
S1/FE1	-	S1/FE2	-	S1/FE3	-	S1/FE4	-
S1/FE5	-	S1/FE6	-	S2/FE1	-	S2/FE2	-
S2/FE3	-	S2/FE4	-	S2/FE5	-	S2/FE6	-
S3/FE1	-	S3/FE2	-	S3/FE3	-	S3/FE4	-
S3/FE5	-	S3/FE6	-	S4/FE1	-	S4/FE2	-
S4/FE3	-	S4/FE4	-	S4/FX5	-	S4/FX6	-

DT-RING Alarm

DT-RING ID	Alarm Status
1	Ring Open

Figure 119 Alarm Information (SICOM3048)

power

Options: Normal/WARN

Description: After the power alarm is enabled, Normal is displayed for dual power inputs while WARN is displayed for a single power input.

temperature

Options: Normal/HIGH/LOW

Description: When the switch temperature is equal to or higher than the upper limit, HIGH is displayed; when the switch temperature is equal to or lower than the lower limit, LOW is displayed; otherwise, Normal is displayed.

IP/MAC Alarm

Options: Normal/Alarm

Description: When an IP/MAC conflict occurs, Alarm is displayed; otherwise, Normal is displayed.

Port Alarm

Options: Link Up/Link Down

Description: After port alarm is enabled, Link Up is displayed for a port connected properly. Link Down is displayed for a port disconnected or connected abnormally.

DT-RING Alarm

Options: Ring Open/Ring Close

Description: After ring alarm is enabled, Ring Open is displayed for an open ring while Ring Close is displayed for a closed ring.

6.20 Port Traffic Alarm

6.20.1 Overview

With the port traffic alarm function, the switch generates an alarm if the traffic rate of a port exceeds the specified threshold or a CRC error occurs.

Caution:

- The traffic alarm function is based on a port. An alarm is generated only if the function is enabled on a port.
- The traffic alarm function is direction-specific. Incoming and outgoing traffic corresponds to different alarms.
- If a CRC error occurs, then a CRC error alarm is generated.

6.20.2 Web Configuration

1. Configure port traffic alarm, as shown in the following figure.

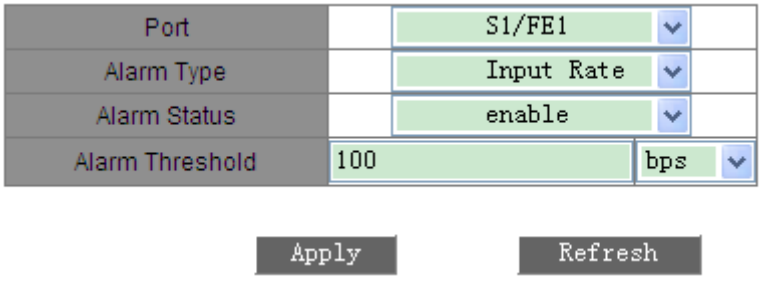

Figure 120 Configuring Port Traffic Alarm

Port

Options: all switch ports

Function: Select the ports for traffic alarm.

Alarm Type

Options: Input Rate/Output Rate/CRC Error

Function: Configure the port traffic alarm type.

Alarm Status

Options: enable/disable

Default: disable

Function: Enable or disable the alarm type.

Alarm Threshold

Range: 1~1000000000bps or 1~1000000kbps

Function: Configure the port traffic alarm threshold.

2. View port traffic alarm information, as shown in the following figure.

Port	Input Rate		Alarm Status	Output Rate		Alarm Status	Error CRC	Alarm Status
S1/FE1	enable	100bps	alarm	enable	1000bps	alarm	enable	alarm
S1/FE2	enable	100kbps	normal	enable	100bps	normal	enable	normal
S1/FE3	disable	-	-	disable	-	-	disable	-
S1/FE4	disable	-	-	disable	-	-	disable	-
S1/FE5	disable	-	-	disable	-	-	disable	-
S1/FE6	disable	-	-	disable	-	-	disable	-
S1/FE7	disable	-	-	disable	-	-	disable	-
S1/FE8	disable	-	-	disable	-	-	disable	-
S4/GE1	disable	-	-	disable	-	-	disable	-
S4/GE2	disable	-	-	disable	-	-	disable	-
S4/GE3	disable	-	-	disable	-	-	disable	-
S4/GE4	disable	-	-	disable	-	-	disable	-

Figure 121 Port Traffic Alarm Information

6.21 GMRP Configuration and Query

6.21.1 GARP

The Generic Attribute Registration Protocol (GARP) is used for distributing, registering, and cancelling certain information (VLAN, multicast address) among switches on the same network. GARP applications include GVRP and GMRP.

With GARP, the configuration information of a GARP member will distribute the information to the entire switching network. A GARP member instructs the

other GARP members to register or cancel its own configuration information by means of join/leave message respectively. The member also registers or cancels the configuration information of other members based on join/leave messages sent by other members.

GARP involves three types of messages: Join, Leave, and LeaveAll.

- When a GARP application entity wants to register its own information on other switches, the entity sends a Join message. Join messages fall into two types: JoinEmpty and JoinIn. A JoinIn message is sent to declare a registered attribute, while a JoinEmpty message is sent to declare an attribute that is not registered yet.
- When a GARP application entity wants to cancel its own information on other switches, the entity sends a Leave message.
- After a GARP entity starts, it starts the LeaveAll timer. When the timer expires, the entity sends a LeaveAll message.

Note:

An application entity indicates a GARP-enabled port.

GARP timers include Hold timer, Join timer, Leave timer, and LeaveAll timer.

- **Hold Timer**: When receiving a registration message, a GARP entity does not send a Join message immediately, but starts a Hold timer. When the timer expires, the entity sends all the registration messages received within the preceding period in one Join message, reducing packet sending for better network stability.
- **Join Timer**: To ensure that Join messages are received by other application entities, a GARP application entity starts a Join timer after sending a Join message. If receiving no JoinIn message before Join timer expires, the entity sends the Join message again. If receiving a JoinIn message before the timer expires, the entity does not send the second Join message.
- **Leave Timer**: When a GARP application entity wants to cancel the

information about an attribute, the entity sends a Leave message. The entity receiving the message starts Leave timer. If receiving no Join message before the timer expires, then the entity receiving the message cancels the information about the attribute.

- **LeaveAll Timer**: As a GARP application entity starts, it starts LeaveAll timer. When the timer expires, the entity sends a LeaveAll message, so that the other GARP application entities re-register all the attributes. Then the entity starts LeaveAll timer again for the new cycle.

6.21.2 GMRP

The GARP Multicast Registration Protocol (GMRP) is a multicast registration protocol based on GARP. It is used for maintaining the multicast registration information of switches. All GMRP-enabled switches can receive multicast registration information from other switches, update local multicast registration information dynamically, and distribute local multicast registration information to other switches. This information exchange mechanism ensures the consistency of multicast information maintained by all GMRP-enabled switches on a network.

If a switch or terminal wants to join or leave a multicast group, then the GMRP-enabled port broadcasts the information to all the ports in the same VLAN.

6.21.3 Description

Agent port: indicates the port on which GMRP and the agent function are enabled.

Propagation port: indicates the port on which only GMRP is enabled, but not the agent function.

Dynamically learned GMRP multicast entry and agent entry are forwarded by the propagation port to the propagation ports of the lower-level devices.

All GMRP timers on the same network must keep consistent to prevent mutual

interference. The timers should comply with the following rules: Hold timer<Join timer, 2*Join timer<Leave timer, and Leave timer<LeaveAll timer.

6.21.4 Web Configuration

1. Enable the global GMRP protocol, as shown in the following figure.

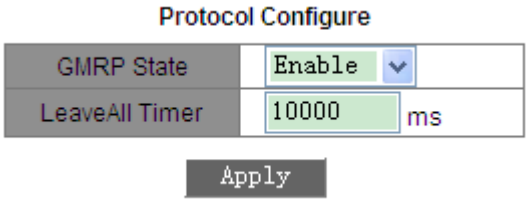

Figure 122 GMRP Global Configuration

GMRP State

Options: Enable/Disable

Default: Disable

Function: Enable or disable the global GMRP function. The function and IGMP Snooping cannot be used at the same time.

LeaveAll Timer

Range: 100ms~327600ms

Default: 10000ms

Function: Set the interval for sending LeaveAll messages. The value must be a multiple of 100.

Description: If the LeaveAll timers of different devices expire at the same time, multiple LeaveAll messages will be sent simultaneously, increasing unnecessary packets. To prevent this problem, the actual timeout of a LeaveAll timer is a random value between the specified value and 1.5 times the specified value.

2. Configure GMPR function on each port, as shown in the following figure.

Port Configure

Port	GMRP Enable	Agent Enable	Hold Timer	Join Timer	Leave Timer
S1/FE1	Enable	Enable	100 ms	500 ms	3000 ms
S1/FE2	Enable	Disable	100 ms	500 ms	3000 ms
S1/FE3	Enable	Disable	100 ms	500 ms	3000 ms
S1/FE4	Disable	Disable	100 ms	500 ms	3000 ms
S1/FE5	Disable	Disable	100 ms	500 ms	3000 ms
S1/FE6	Disable	Disable	100 ms	500 ms	3000 ms
S1/FE7	Disable	Disable	100 ms	500 ms	3000 ms
S1/FE8	Disable	Disable	100 ms	500 ms	3000 ms
S4/GE1	Disable	Disable	100 ms	500 ms	3000 ms
S4/GE2	Disable	Disable	100 ms	500 ms	3000 ms
S4/GE3	Disable	Disable	100 ms	500 ms	3000 ms
S4/GE4	Disable	Disable	100 ms	500 ms	3000 ms

Apply

Figure 123 Port GMRP Configuration

GMRP Enable

Options: Enable/Disable

Default: Disable

Function: Enable or disable the GMRP function on the port.

Agent Enable

Options: Enable/Disable

Default: Disable

Function: Enable or disable the GMRP agent function on the port.

Caution:

- Agent port cannot propagate agent entry.
- To enable the GMRP agent function on a port, you need to enable the GMRP function first.

Hold Timer

Range: 100ms~327600ms

Default: 100ms

Description: This value must be a multiple of 100. It is better to set the Hold timers on all GMRP-enabled ports to the same time.

Join Timer

Range: 100ms~327600ms

Default: 500ms

Description: This value must be a multiple of 100. It is better to set the Join timers on all GMRP-enabled ports to the same time.

Leave Timer

Range: 100ms~327600ms

Default: 3000ms

Description: This value must be a multiple of 100. It is better to set the Leave timers on all GMRP-enabled ports to the same time.

3. Add a GMRP agent entry, as shown in the following figure.

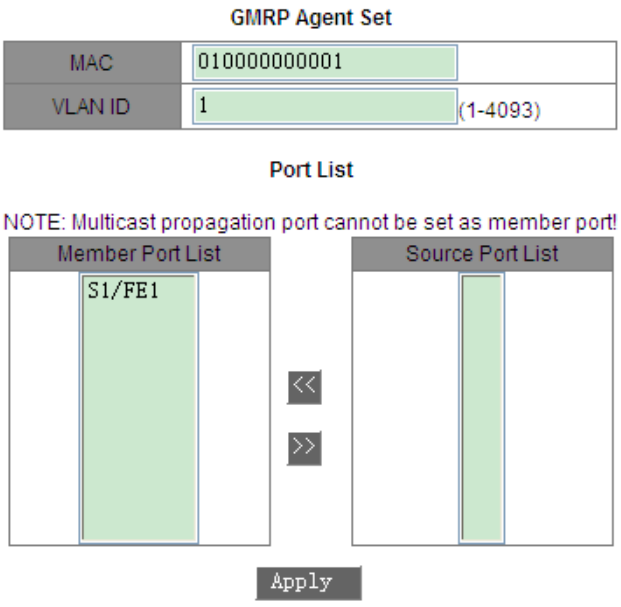

Figure 124 GMRP Agent Entry Configuration

MAC

Format: HHHHHHHHHHHH (H is a hexadecimal number.)

Function: Configure the MAC address of multicast group. The lowest bit of the first byte is 1.

VLAN ID

Options: all created VLAN numbers

Function: Configure the VLAN ID for the GMRP agent entry.

Description: GMRP agent entry can only be forwarded from the propagation

port with the VLAN ID same as this entry's VLAN ID.

Member Port List

Select the member port for the agent entry. The port can only be selected from GMRP agent-enabled ports.

Source Port List

Options: all GMRP agent-enabled ports

4. View, modify, or delete a GMRP agent entry, as shown in the following figure.

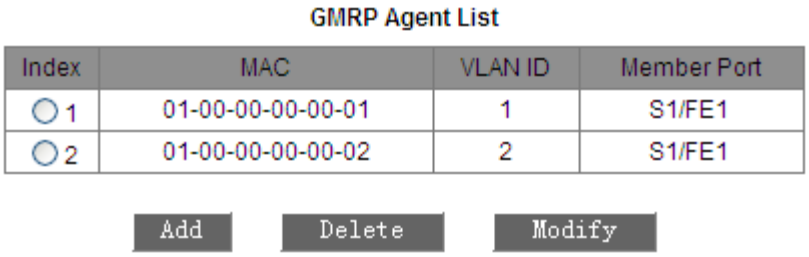

Figure 125 GMRP Agent Entry Operations

A GMRP agent entry consists of the MAC address, VLAN ID, and member port. To delete an entry, select the entry and click <Delete>. To modify an entry, select the entry and click <Modify>.

5. View the multicast members of this agent entry on the connected neighbor device as shown in the following figure.

The following conditions shall be met.

- GMRP is enabled on the inter-connected devices.
- The two ports that connect the devices must be propagation ports, and the VLAN ID of the propagation port on the local device must be identical with that in the agent entry.

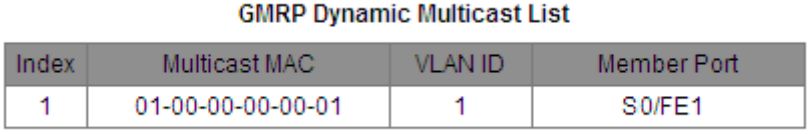

Figure 126 GMRP Dynamic Multicast Table

GMRP Dynamic Multicast List

Portfolio: {Index, Multicast MAC, VLAN ID, Member Port}

Function: View GMRP dynamic multicast entries.

6.21.5 Typical Configuration Example

As shown in the following figure, Switch A and Switch B are connected through port 2. Port 1 of Switch A is set to an agent port and generates two multicast entries:

- MAC address: 01-00-00-00-00-01, VLAN: 1
- MAC address: 01-00-00-00-00-02, VLAN: 2

After configuring different VLAN attributes on ports, observe the dynamic registration between switches and multicast information update.

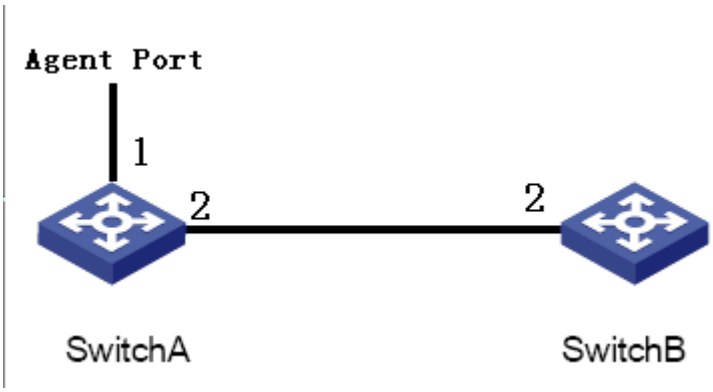

Figure 127 GMRP Networking

Configuration on Switch A:

1. Enable global GMRP function in switch A; set LeaveAll timer to the default value, as shown in Figure 122.
2. Enable GMRP function and agent function in port 1; enable only GMRP function in port 2; set the timers to default values, as shown in Figure 123.
3. Configure agent multicast entry. Set <MAC address, VLAN ID, Member port> to <01-00-00-00-00-01, 1, 1> and <01-00-00-00-00-02, 2, 1>, as shown in Figure 124.

Configuration on Switch B:

1. Enable global GMRP function in switch B; set LeaveAll timer to the default value, as shown in Figure 122.
2. Enable GMPR function on port 2; set the timers to default values, as shown

in Figure 123.

The following table lists the dynamically learned GMRP multicast entries on Switch B.

Table 7 Dynamic Multicast Entries

Attribute of Port 2 on Switch A	**Attribute of Port 2 on Switch B**	**Multicast Entries Received on Switch B**
Untag1	Untag1	MAC: 01-00-00-00-00-01 VLAN ID: 1 Member port: 2
Untag2	Untag2	MAC: 01-00-00-00-00-02 VLAN ID: 2 Member port: 2
Untag1	Untag2	MAC: 01-00-00-00-00-01 VLAN ID: 2 Member port: 2

6.22 RMON

6.22.1 Overview

Based on SNMP architecture, Remote Network Monitoring (RMON) allows network management devices to proactively monitor and manage the managed devices. An RMON network usually involves the Network Management Station and Agents. The NMS manages Agents and Agents can collect statistics on various types of traffic on these ports.

RMON mainly provides statistics and alarm functions. With the statistics function, Agents can periodically collect statistics on various types of traffic on these ports, such as the number of packets received from a certain network segment during a certain period. Alarm function is that Agents can monitor the values of specified MIB variables. When a value reaches the alarm threshold (such as the number of packets reaches the specified value), Agent can

automatically record alarm events in RMON log, or send a Trap message to the management device.

6.22.2 RMON Groups

RMON (RFC2819) defines multiple RMON groups. The series devices support statistics group, history group, event group, and alarm group in public MIB. Each group supports up to 32 entries.

- Statistics group

With the statistics group, the system collects statistics on all types of traffic on ports and stores the statistics in the Ethernet statistics table for further query by the management device. The statistics includes the number of network collisions, CRC error packets, undersized or oversized packets, broadcast and multicast packets, received bytes, and received packets. After creating a statistics entry on a specified port successfully, the statistics group counts the number of packets on the port and the statistics is a continuously accumulated value.

- History group

History group requires the system to periodically sample all kinds of traffic on ports and saves the sampling values in the history record table for further query by the management device. The history group counts the statistics values of all kinds of data in the sampling interval.

- Event group

Event group is used to define event indexes and event handing methods. Events defined in the event group is used in the configuration item of alarm group. An event is triggered when the monitored device meets the alarm condition. Events are addressed in the following ways:

Log: logs the event and related information in the event log table.

Trap: sends a Trap message to the NMS and inform the NMS of the event.

Log-Trap: logs the event and sends a Trap message to the NMS.

None: indicates no action.

➢ Alarm group

RMON alarm management can monitor the specified alarm variables. After alarm entries are defined, the system will acquire the values of monitored alarm variables in the defined period. When the value of an alarm variable is larger than or equal to the upper limit, a rising alarm event is triggered. When the value of an alarm variable is smaller than or equal to the lower limit, a falling alarm event is triggered. Alarms will be handled according to the event definition.

Caution:

If a sampled value of alarm variable exceeds the threshold multiple times in a same direction, then the alarm event is only triggered only the first time. therefore the rising alarm and falling alarm are generated alternately.

6.22.3 Web Configuration

1. Configure the statistics table, as shown in the following figure.

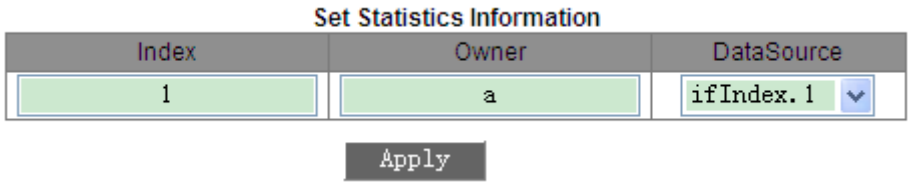

Figure 128 RMON Statistics

Index

Range: 1~65535

Function: Configure the number of the statistics entry.

Owner

Range: 1~32 characters

Function: Configure the name of the statistics entry.

Data Source

Options: ifIndex.portid

Function: Select the port whose statistics are to be collected.

2. Configure the history table, as shown in the following figure.

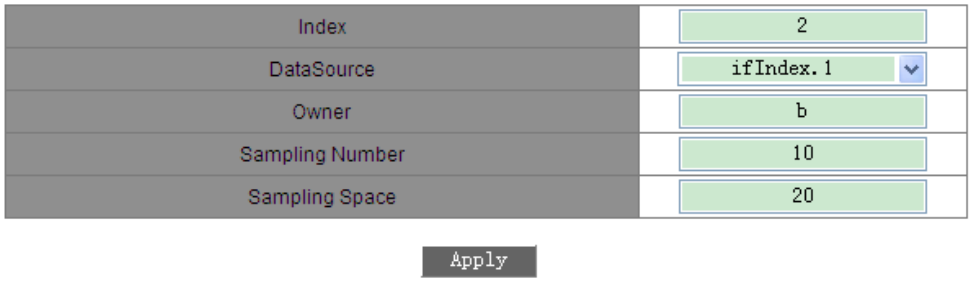

Figure 129 RMON History Table

Index

Range: 1~65535

Function: Configure the number of the history entry.

Data Source

Options: ifIndex.portid

Function: Select the port whose information is to be sampled.

Owner

Range: 1~32 characters

Function: Configure the name of the history entry.

Sampling Number

Range: 1~65535

Function: Configure the sampling times of the port.

Sampling Space

Range: 1~3600s

Function: Configure the sampling period of the port.

3. Configure the event table, as shown in the following figure.

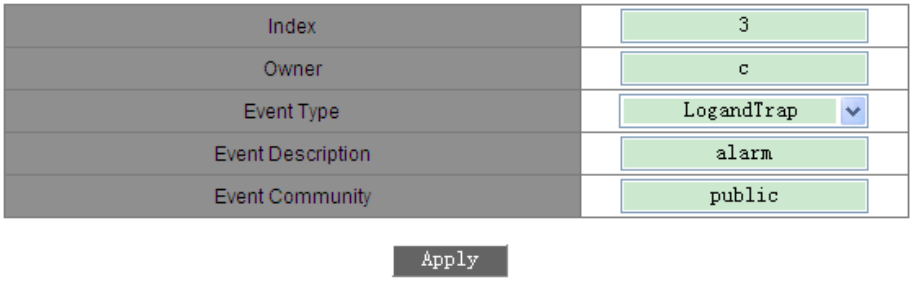

Figure 130 RMON Event Table

Index

Range: 1~65535

Function: Configure the index number of the event entry.

Owner

Range: 1~32 characters

Function: Configure the name of the event entry.

Event Type

Options: NONE/LOG/Snmp-Trap/Log and Trap

Default: NONE

Function: Configure the event type for alarms, that is, the processing mode towards alarms.

Event Description

Range: 1~127 characters

Function: Describe the event.

Event Community

Range: 1~127 characters

Function: Configure the community name for sending a trap event. The value shall be identical with that in SNMP.

4. Configure the alarm table, as shown in the following figures.

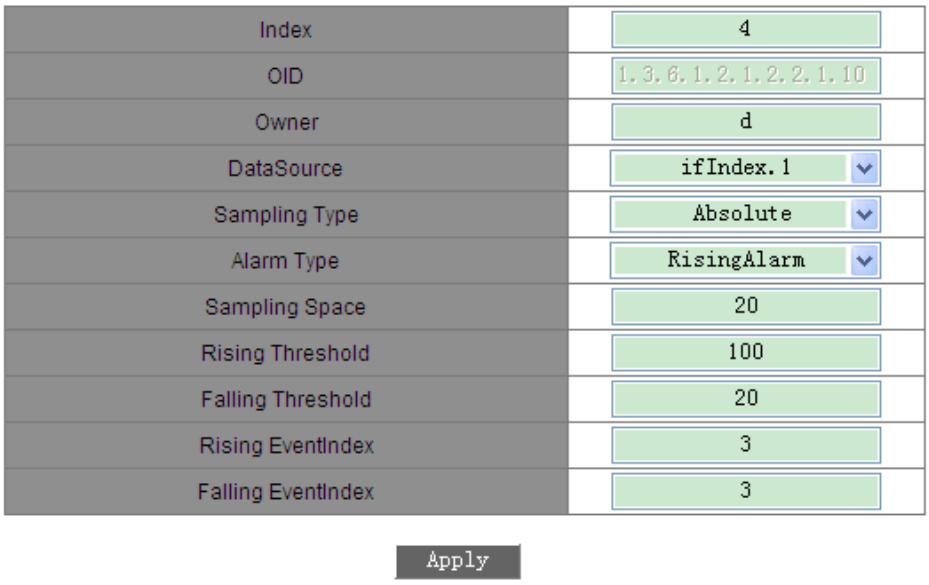

Figure 131 RMON Alarm Table — 1213 MIB Node

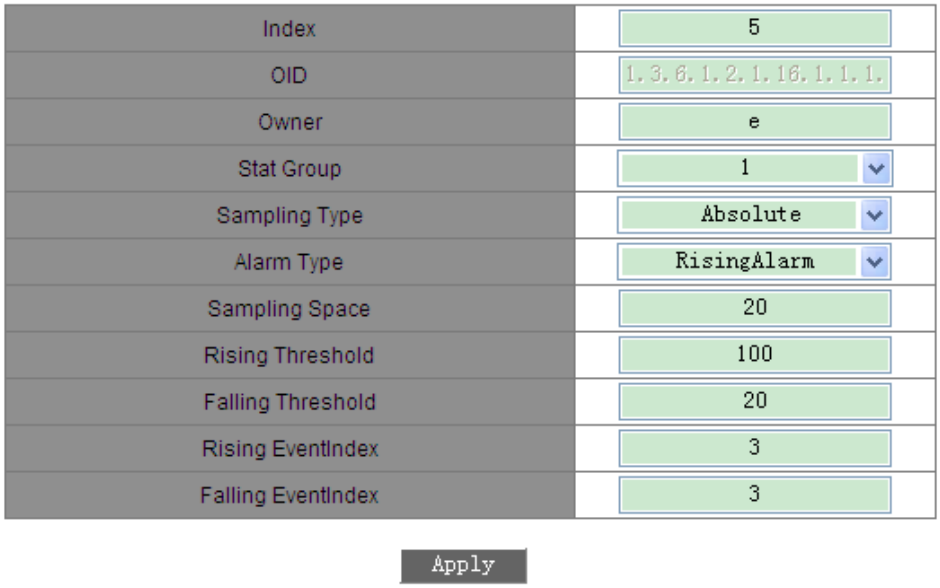

Figure 132 RMON Alarm Table — RMON MIB Node

Index

Range: 1~65535

Function: Configure the number of the alarm entry.

OID

Indicates the OID of the current MIB node.

Owner

Range: 1~32 characters

Function: Configure the name of the alarm entry.

Data Source

Options: ifIndex.portid

Function: Select the port whose information is to be monitored.

Stat Group

Options: indexes of entries in the RMON statistics table.

Function: Select the statistics entry whose port is to be monitored.

Sampling Type

Options: Absolute/Delta

Default: Absolute

Function: Absolute indicates absolute value-based sampling. The value of the variable is directly extracted when the end of a sampling period approaches.

Delta indicates change value-based sampling. The change value of the variable in the sampling period is extracted when the end of the period approaches.

Alarm Type

Options: RisingAlarm/FallingAlarm/RisOrFallAlarm

Default: RisingAlarm

Function: Select the alarm type, including the rising edge alarm, falling edge alarm, and both rising edge and falling edge alarms.

Sampling Space

Range: 1~65535

Function: Configure the sampling period. The value should be identical with that in the history table.

Rising Threshold

Range: 0~65535

Function: Configure the rising edge threshold. When the sampling value exceeds the threshold and the alarm type is set to RisingAlarm or RisOrFallAlarm, an alarm is generated and the rising event index is triggered.

Falling Threshold

Range: 0~65535

Function: Configure the falling edge threshold. When the sampling value is lower than the threshold and the alarm type is set to FallingAlarm or RisOrFallAlarm, an alarm is generated and the falling event index is triggered.

Rising Event Index

Range: 0~65535

Function: Configure the index of the rising event, that is, processing mode for rising edge alarms.

Falling Event Index

Function: Configure the index of the falling event, that is, processing mode for falling edge alarms.

6.23 Log Query

6.23.1 Overview

The log function records the switch running information, facilitating the administrator in reading and managing log packets and locating faults.

Running log covers:

- Power alarm, temperature alarm, IP/MAC conflict alarm, port alarm, DT-Ring alarm, and port traffic alarm
- Broadcast storm
- Software system restart

6.23.2 Description

The running log contains a maximum of 1024 entries. When more than 1024 entries are configured, new entries overwrite the old entries.

6.23.3 Web Configuration

1. Enable the log function, as shown in the following figure.

Figure 133 Log Status Configuration

Enable Runlog

Options: Enable/Disable

Default: Enable

Function: Enable or disable the running log function. If the function is enabled, running information will be recorded.

2. Configure running log upload, as shown in the following figure.

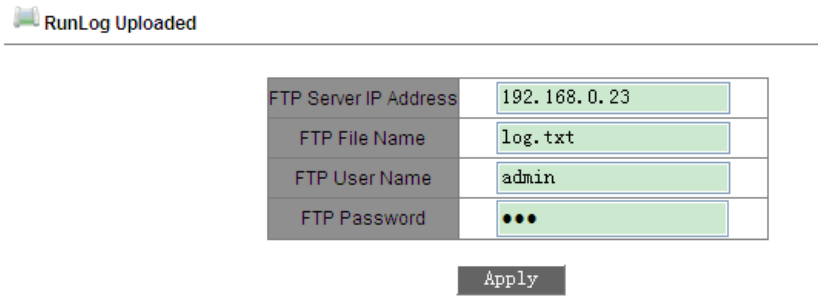

Figure 134 Running Log Upload

FTP Server IP Address

Format: A.B.C.D

Function: Set the IP address of the FTP server.

FTP File Name

Range: 1~20 characters

Function: Set the name of the log file saved on the server.

FTP User Name

Range: 1~20 characters

Function: Set the FTP user name.

FTP Password

Range: 1~20 characters

Function: Set the FTP password.

Caution:

The FTP server software needs to be running during log upload.

3. View the running log, as shown in the following figure.

Performance log

Index	LogType	Time	Description
10	Ring Open/Close	THU SEP 13 15:24:42 2012	Ring alarm: entity id:1 state:Ring open
9	PortLink Alarm	THU SEP 13 15:24:42 2012	Port alarm: entity id:1/2 port:1/2 state:Link down
8	Ring Open/Close	THU SEP 13 15:24:07 2012	Ring alarm: entity id:1 state:Ring close
7	PortLink Alarm	THU SEP 13 15:24:07 2012	Port alarm: entity id:1/2 port:1/2 state:Link up
6	Output rate	THU SEP 13 15:23:44 2012	Output alarm: entity id:1 state:Alarm
5	Input rate	THU SEP 13 15:23:43 2012	Input alarm: entity id:1 state:Alarm
4	PortLink Alarm	THU SEP 13 15:23:39 2012	Port alarm: entity id:1/1 port:1/1 state:Link up
3	Output rate	THU SEP 13 15:22:58 2012	Output alarm: entity id:2 state:Normal
2	PortLink Alarm	THU SEP 13 15:22:55 2012	Port alarm: entity id:1/2 port:1/2 state:Link down
1	PowerAlarm	THU SEP 13 15:21:49 2012	Power alarm: entity id:2 state:Power down
0	Output rate	THU SEP 13 15:21:28 2012	Output alarm: entity id:2 state:Alarm

Figure 135 Running Log Query

Performance log

Portfolio: {Index, LogType, Time, Description}

Function: Display the current running log.

6.24 Unicast Address Configuration and Query

6.24.1 Overview

When forwarding a packet, the switch searches for the forwarding port in the MAC address table based on the destination MAC address of the packet.

A MAC address can be either static or dynamic.

Static MAC address are configured. They have the highest priority (not overridden by dynamic MAC addresses) and are permanently valid.

Dynamic MAC addresses are learned by the switch in data forwarding, which are valid only for a certain period. The switch periodically updates its MAC address table. When receiving a data frame to be forwarded, the switch learns the source MAC address of the frame, establishes a mapping with the receiving port, and queries the forwarding port in the MAC address table based on the destination MAC address of the frame. If a match is found, the switch forwards the data frame from the corresponding port. If no match is found, the switch broadcasts the frame in its broadcast domain.

The switch supports a maximum of 256 static unicast entries.

6.24.2 Web Configuration

1. Add a static MAC address entry, as shown in the following figure.

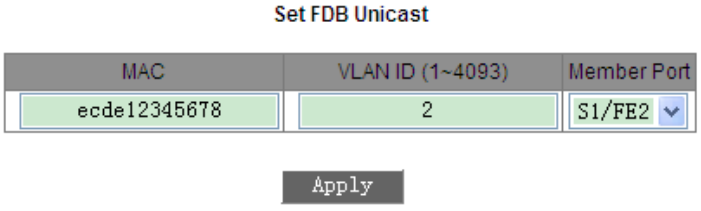

Figure 136 Adding a Static FDB Unicast Entry

MAC

Format: HHHHHHHHHHHH (H is a hexadecimal number.)

Function: Configure the unicast MAC address. The lowest bit in the first byte is 0.

VLAN ID

Options: all created VLAN IDs

Member Port

Options: all switch ports

Function: Select the port for forwarding packets destined for the MAC address. The port must be in the specified VLAN.

2. View the static unicast address list, as shown in the following figure.

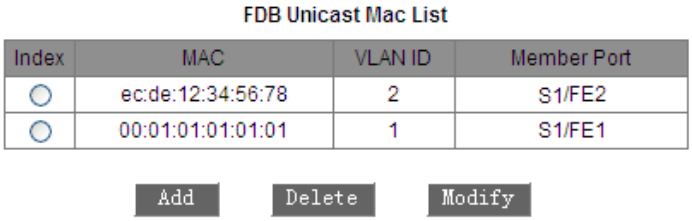

Figure 137 Viewing Static FDB Table

Select an entry. You can delete or modify the entry.

3. View the dynamic unicast address list, as shown in the following figure.

Figure 138 Dynamic Unicast FDB Table

Appendix: Acronyms

Acronym	Full Spelling
ACL	Access Control List
ARP	Address Resolution Protocol
BPDU	Bridge Protocol Data Unit
CIST	Common and Internal Spanning Tree
CLI	Command Line Interface
CRC	Cyclic Redundancy Check
CST	Common Spanning Tree
DSCP	Differentiated Services Code Point
FTP	File Transfer Protocol
GARP	Generic Attribute Registration Protocol
GMRP	GARP Multicast Registration Protocol
IGMP	Internet Group Management Protocol
IGMP Snooping	Internet Group Management Protocol Snooping
IST	Internal Spanning Tree
LLDP	Link Layer Discovery Protocol
MAC	Media Access Control
MIB	Management Information Base
MSTI	Multiple Spanning Tree Instance
MSTP	Multiple Spanning Tree Protocol
NMS	Network Management Station
OID	Object Identifier
QoS	Quality of Service
RMON	Remote Network Monitoring
RSTP	Rapid Spanning Tree Protocol
SNMP	Simple Network Management Protocol
SNTP	Simple Network Time Protocol

STP	Spanning Tree Protocol
TCP	Transmission Control Protocol
ToS	Type of Service
VLAN	Virtual Local Area Network
WRR	Weighted Round Robin